

How to assemble your headboard




Thank you for purchasing our product!

Please read these instructions carefully.


The instructions are an integral part of the product. Please store them and the packaging carefully in case of need for return of the item. Please always include these instructions when passing this product on to another person.

THE PRODUCT MUST BE ASSEMBLED BY AN ADULT ONLY.

Parts Included

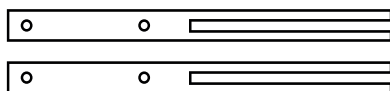

2x Headboard Struts

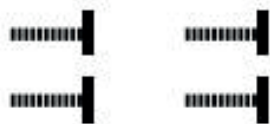

4x M8 Strut Bolts


Tools Required



1x Phillips Head Screwdriver

Fixing The Headboard Struts

- 1 Carefully Remove the packaging from the headboard

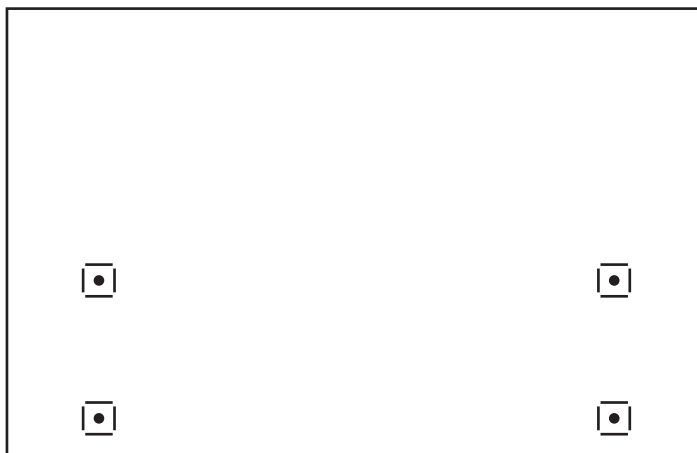

NOTE:

If the strut holes have not been scored. Please use the screwdriver to do so.

- 2 Align the holes in the strut with the holes on the headboard.
- 3 Using a Phillips screwdriver screw the bolts through the strut into the headboard.

Please repeat step 2 and 3 for the other side.

- 4 Now your headboard is ready to be placed behind your bed.



Bed Bolts/Fittings are NOT Included and can be purchased separately from our store.

Scan To Purchase this from our store

