


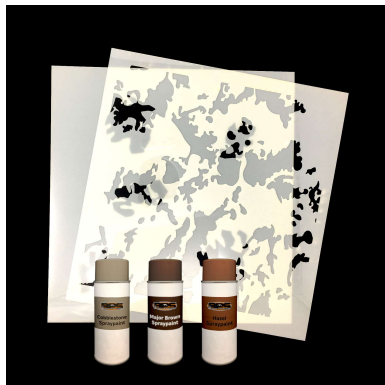

Touch-Up Instructions for Natural Gear Stencil Kit

Clean the area of the boat or motor you want to touch-up using a wire brush to remove the old paint and any rust or dirt. Clean any loose material using a shop towel and water if necessary. Make sure the area is free of dust or water before painting over it.



Natural Gear Brown Camo

1. Paint a base using the *Cobblestone* spray paint
2. Paint a shadow patch using the Main Pattern Stencil and *Major Brown* spray paint
3. Paint a few widely spaced highlights using the Highlight Stencil and *Hazel* spray paint



Main Pattern
Sample



Highlight Pattern
Sample



Natural Gear
Camo Sample

For other instructions and more products visit our website at backwaterperformance.com