




FABSPEED
MOTORSPORT
EXOTIC CAR PERFORMANCE SPECIALIST

PORSCHE 981 Boxster/Cayman Maxflo Exhaust Installation instructions

Mufflers:

1. Remove rear wheels
2. Remove 2 bolt flanges between header collector and the muffler inlet pipes. These are secured with 13mm hex nuts.
3. Remove (4) inverted torx bolts (E12) securing muffler support bracket to rear of the transmission.
4. Lower Mufflers together from rear of the car while guiding the inlet pipes over the axle.
5. Alternate method
6. Follow steps 1 and 2 above
7. Loosen (2) 15mm hex nuts securing tip assembly to the muffler outlets and swing the tips down.
8. Loosen (2) 13mm hex nuts securing balance tube between mufflers.
9. Remove (2) band straps securing mufflers to the mounting bracket.
10. Each muffler can now be removed separately.

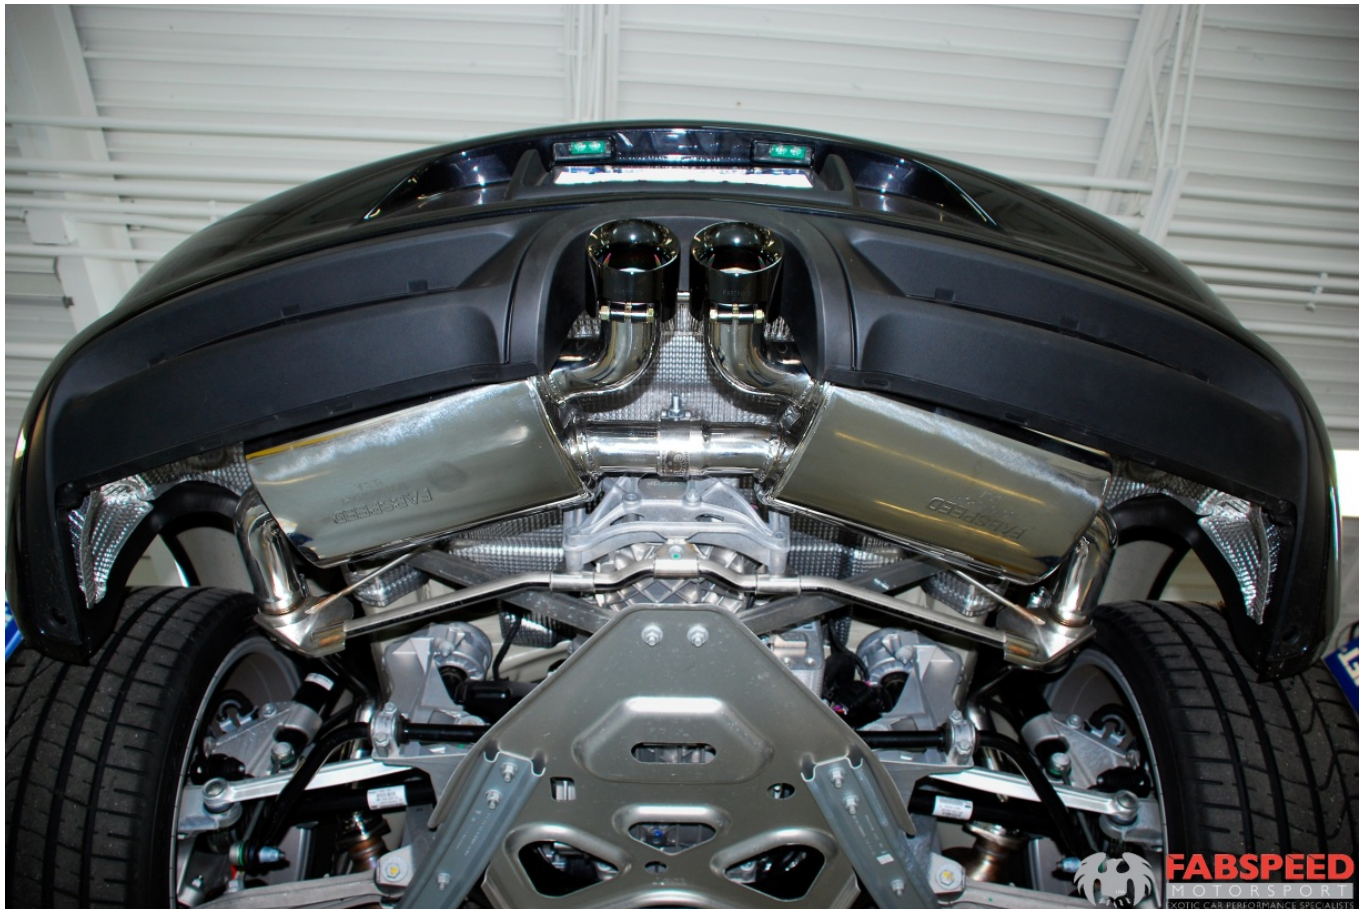



FABSPEED
MOTORSPORT
EXOTIC CAR PERFORMANCE SPECIALIST

Headers:

***SKIP STEPS 1 and 2 IF MUFFLERS ALREADY REMOVED**

1. Remove both rear wheels.
2. Remove (2) 13mm nuts securing header collector to muffler inlets.
3. Using a 22mm wrench remove both O2 sensors from the Catalysts.
***Note color of each O2 sensor for proper reassembly (Green =Primary, Gray =Secondary)**
4. Remove rearmost felt underbody cover. This is secured by (7) T25 torx screws and (2) 10mm hex nuts.
5. Using an (E12) external torx socket remove the (9) bolts securing each header to the cylinder heads.
6. Remove the (E12) bolt securing the header bracket to the cylinder head.
7. Lower the headers.



***Note all Fabspeed products will re install in the opposite manner in which the OEM exhaust was removed.**

If you have any questions, please contact Fabspeed tech support. Info@fabspeed.com

Enjoy your new power and sports car sound. Let us know your feedback by email and visit WWW.FABSPEED.COM for updates and new products for your car.