


REVERSIBLE FIRECLAY FARMHOUSE SINK INSTRUCTIONS

(LATR2418W & LATR3018W)

Tools Required:

Saber or Keyhole Saw – Ruler & Pencil – Sanding Block – Sealant (not included) – Sand Paper – Glasses –
New Faucet (optional)


TILE-IN INSTALLATION

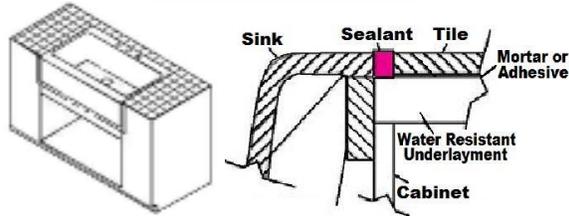

- 1) Sink is designed for installation flush with (or slightly lower than) surrounding tile.
- 2) Measure sink apron and cabinet opening to make sure sink apron will fit into cabinet opening. Sand opening or add wood filler strips, if necessary.
- 3) Assemble faucet according to manufacturer's instruction.
- 4) Place thin layer of sealant at each corner of supporting frame where it will contact the sink.
- 5) Gently position sink within the frame, placing sink in the center of the cabinet.

NOTE: Cabinet and supporting framework should be reinforced to hold up to 300 lbs securely once sink is installed. This typically involves timber supporting frame with 3/4 " plywood deck or brick plinth.

UNDERCOUNTER INSTALLATION

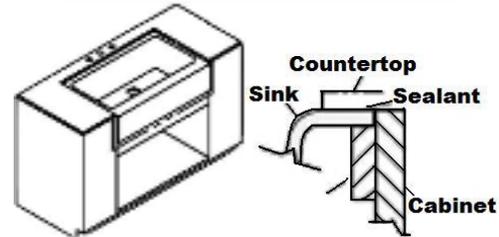

- 1) The supporting frame should be positioned so that top of the sink rim (when placed inside cabinet) is level and flush with top surface of the cabinet perimeter support or underlayment at the cut out area.
- 2) Measure sink apron and cabinet opening to make sure sink apron will fit into cabinet opening. If necessary, sand opening or add wood filler strips.
- 3) Assemble faucet according to manufacturer's instruction.
- 4) Place thin layer of sealant at each corner of supporting frame where it will contact the sink.
- 5) Gently position sink within the frame, placing the sink in the center of the cabinet.
- 6) Make sure the sink rim is level and flush with cabinet perimeter. Adjust or shim between sink and support if needed to obtain proper fit. Top of the sink rim must be flush with the top of the cabinet perimeter in order to obtain proper contact with underside of the counter top.
- 7) Assemble strainer or garbage disposal to the sink according to manufacturer's instruction.
- 8) Using sealant between sink and cabinet is optional and up to buyer's discretion.

REVERSIBLE FIRECLAY FARMHOUSE SINK INSTRUCTIONS


(LATR2418W & LATR3018W)

SOLD SURFACE INSTALLATION


- 1) Follow steps 1-7 as outlined in undercounter sink installation section.
- 2) Carefully measure counter top to determine the exact location of cut-out.
- 3) Measure distance from finished wall to center of sink faucet holes. This dimension will be used to locate faucet hole centerline and back edge of cut-out on the counter top. Make sure sink is positioned to provide adequate clearance between faucet and backsplash, finished wall, or support frame. This will ensure full faucet operation once installed.
- 4) From back edge of counter top, locate dimension from finished wall to the center of faucet holes and draw a centerline. Subtract 1 1/2" from faucet hole centerline to locate back edge of the cut-out. Trace the cut-out opening on the counter top using a soft lead pencil. Locate the faucet holes.
- 5) Cut out the opening in the counter top, carefully following the pencil line. Use an Orbital sander or sanding block to smooth the edge of the cut-out area and remove all saw marks. For laminate type counter top, all exposed un laminated surfaces near the cut-out opening must be adequately finished and sealed to prevent damage from water absorption.
- 6) Drill required faucet hole locations and install faucet according to manufacturer's instruction.
- 7) Clean the top of the sink rim, making sure the surface is free from any debris. Clean bottom of the counter top around the cut-out area making sure the surface is smooth and free of defects.
- 8) Apply a generous bead of sealant around the sink rim where the sink rim and the counter top meet.
- 9) Position the counter top over the sink, being careful the sealant provides a complete seal between sink rim and the bottom of the counter top. Immediately wipe away any excess sealant with a damp cloth. Fill any voids between the rim and the counter top with sealant.
- 10) Sealing the gap between the apron and the cabinet is optional and up to the buyer's discretion.

SPECS

LATR2418W:

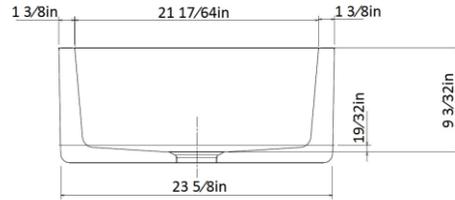


Flat Side View

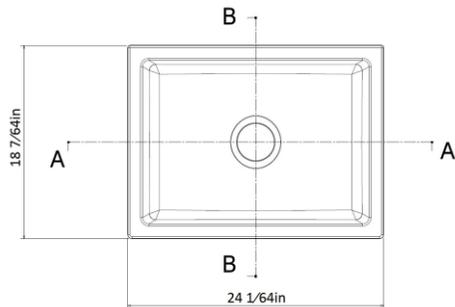


Top-Down View

LATR3018W:

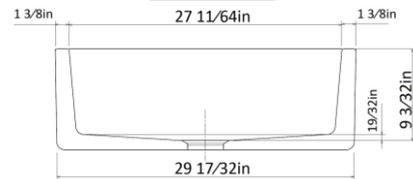

Flat Side View

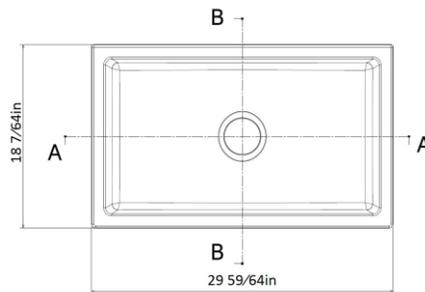

Top-Down View

NOTE: The dimensions given for any fire clay product are nominal. The material is a wet clay fired in an oven, therefore, there is minimal control over the finished size. Dimensions given can vary +/- 2%. Because of the dimensional variation possibility of fire clay products, we recommend that cabinetmaker wait until sink is on hand before making any cabinetry counter top. There is no standard fitting frame-work or supporting brackets.

*Sinks can be installed flush with the front of cabinet or extend beyond front of cabinet by approximately 1".

*Due to variety of installations possible with these sinks, installation may require procedures other than those described in these instructions.