


# ASSEMBLY INSTRUCTION

FOR SB251A

## STEP 1

Pull the drawer and take out the Bunfoot carton ( A ).

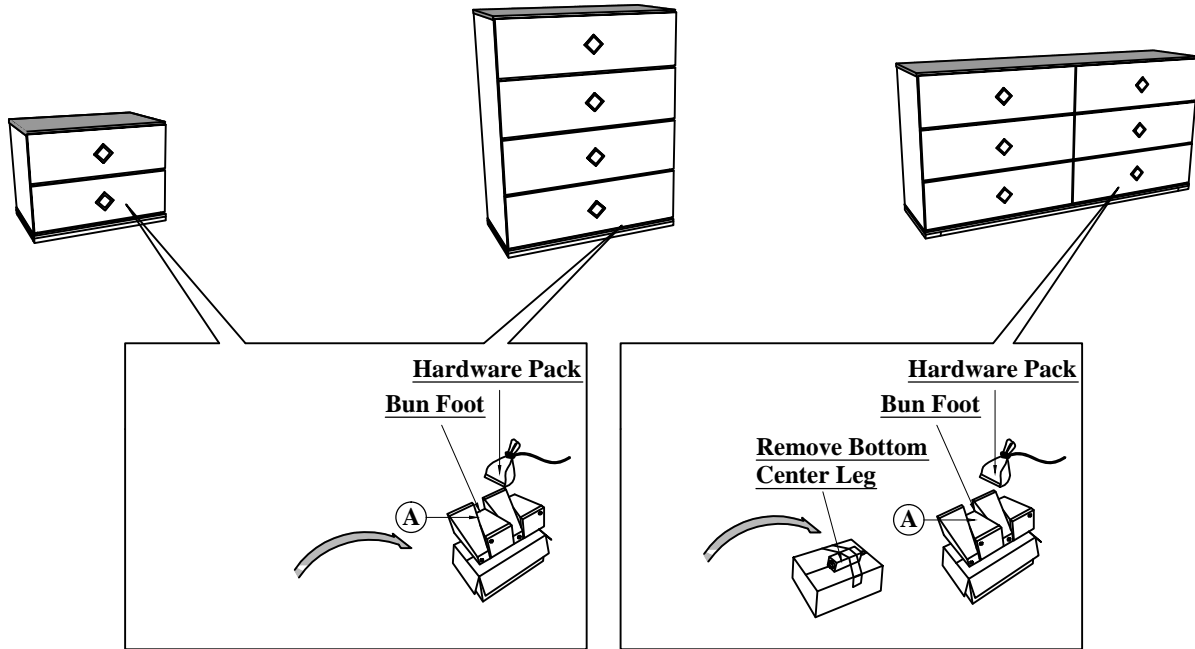

## STEP 2

Assemble the Bun Foot (A) with JCBC Bolt (1), Spring washer (2), Flatwasher (3) and securing with Allen Key (4) as shown.

