


Assembly Instruction

Model No : ASPEN 196 Vanity Dresser

Thank you for purchasing this quality product.

Please check all packing material carefully which may have come loose inside the carton during shipment.

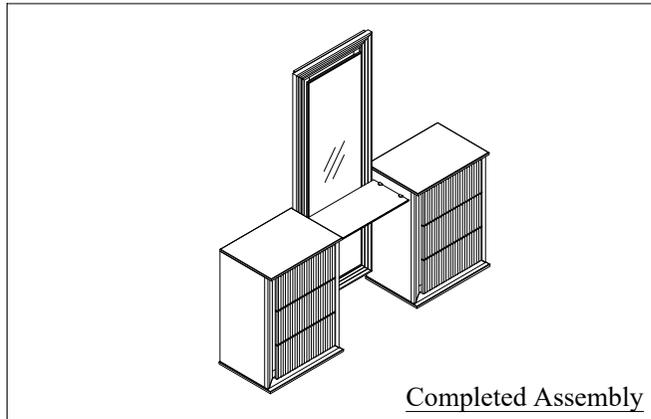


PART LIST

No	Description	Qty
1	Vanity Dresser (Left)	1pc
2	Vanity Dresser (Right)	1pc
3	Floor Mirror	1pc
4	Mirror Supporter	2pcs
5	Glass Shelf	1pc



HARDWARE LIST

No	Description	Qty
A	JCBC Screw M6 x 30mm	8pcs
B	JCBC Screw M6 x 35mm	4pcs
C	Washer	12pcs
D	Glass Shelf Clamp	4pcs
E	CSK Screw M3.5 x 16mm	8pcs


Step : 1

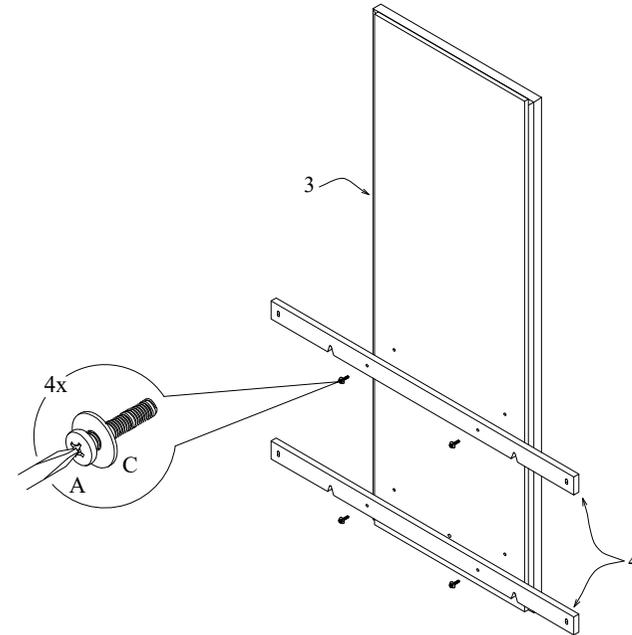


Step : 2

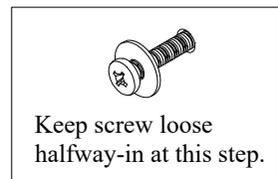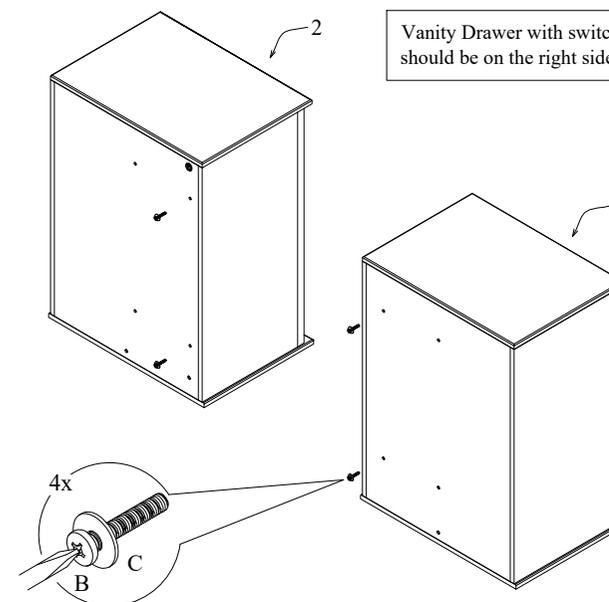


Step : 3

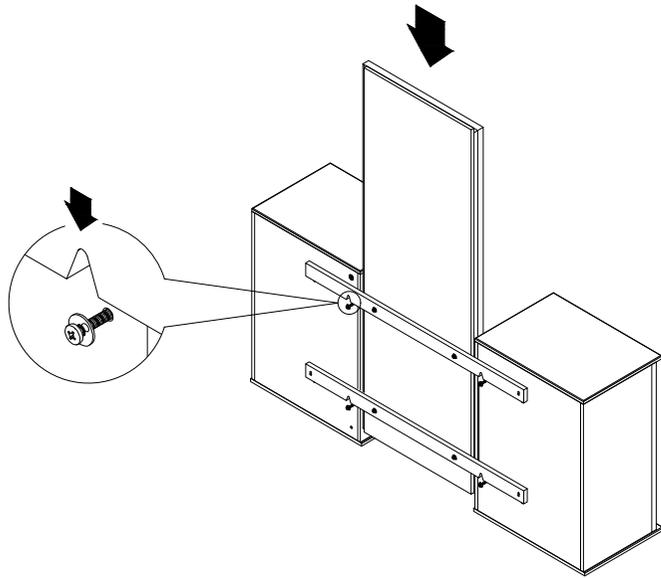


Step : 5

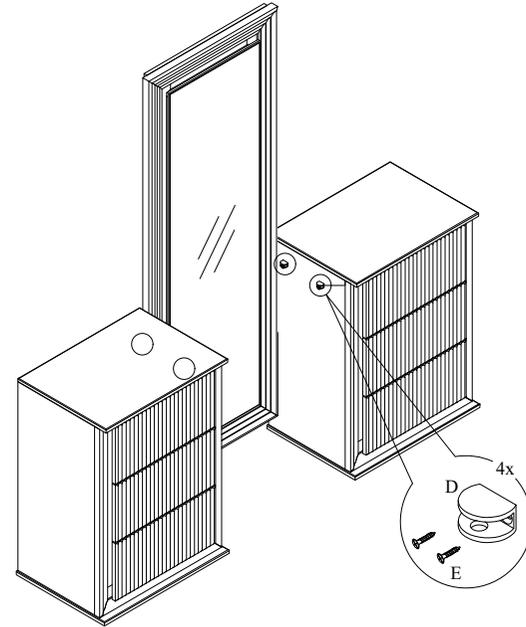

Step : 4

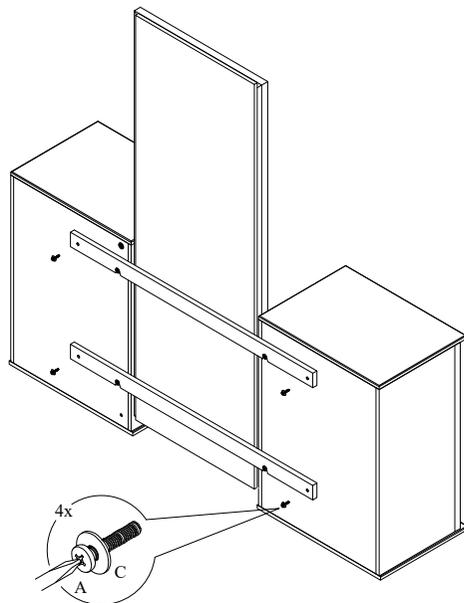


Step : 6

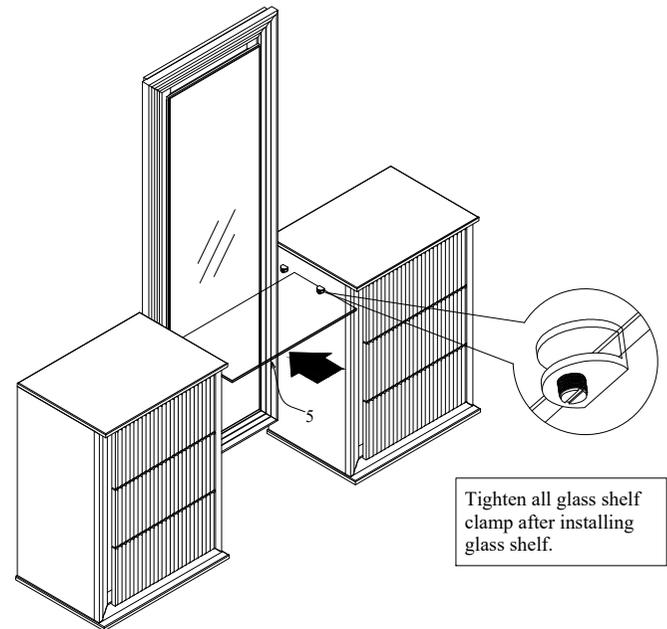

Notice De Montage

DD-F02

No de modèle : Commode de vanité ASPEN 196
 Merci d'avoir acheté ce produit de qualité.
 Veuillez vérifier soigneusement tous les matériaux
 d'emballage qui peut s'être détaché à l'intérieur du carton
 pendant l'expédition.

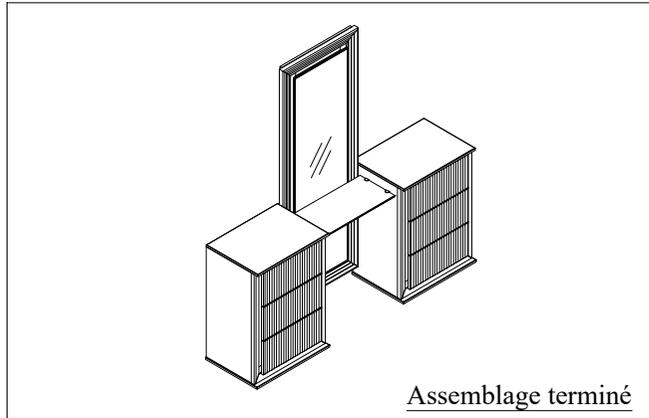


LISTE DES PIÈCES

No	Description	Qty
1	Commode de vanité (Gauche)	1pc
2	Commode de vanité (à droite)	1pc
3	Miroir de sol	1pc
4	Supporteur de miroir	2pcs
5	Étagère en verre	1pc



LISTE DU MATÉRIEL

No	Description	Qty
A	JCBC Screw M6 x 30mm	8pcs
B	JCBC Screw M6 x 35mm	4pcs
C	Washer	12pcs
D	Pince à étagère en verre	4pcs
E	CSK Screw M3.5 x 16mm	8pcs


Étape : 1

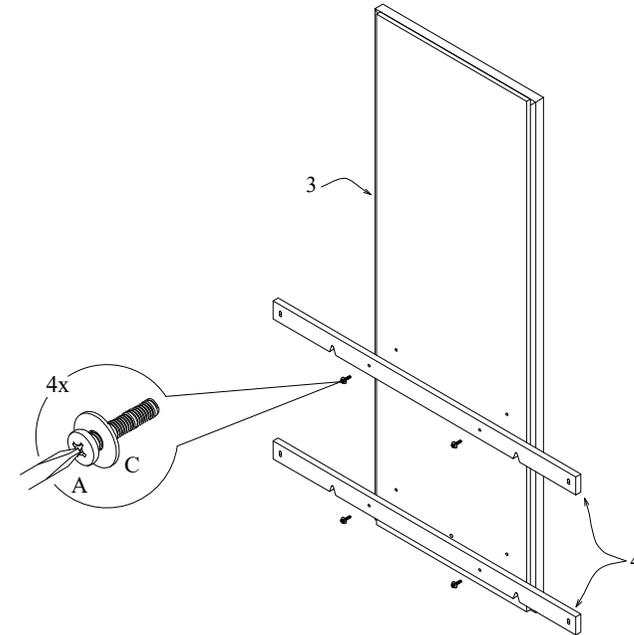


Étape : 2

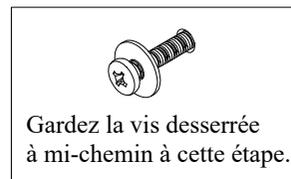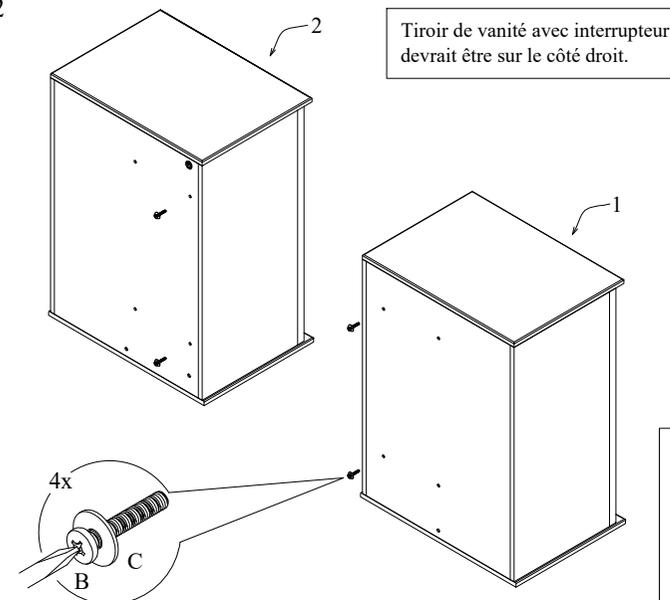


Étape : 3

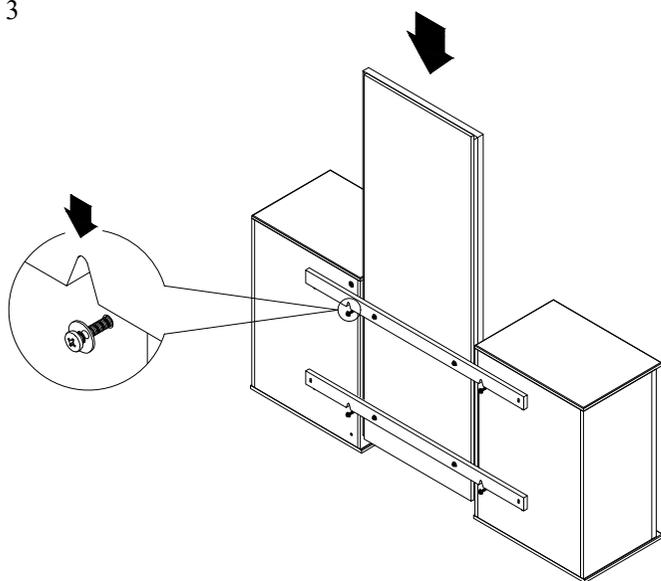

Étape : 5

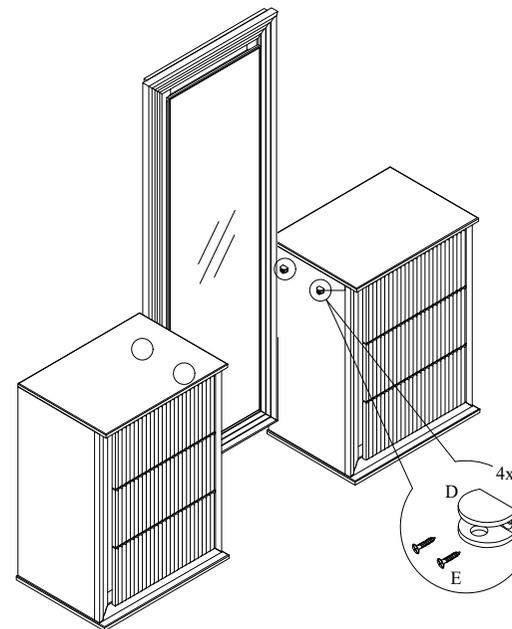

Étape : 4

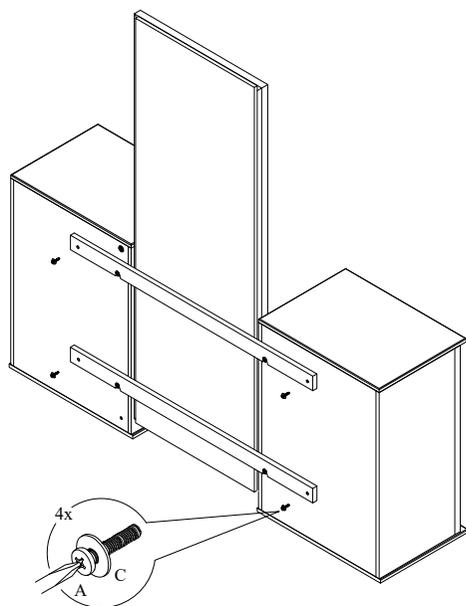

Étape : 6

