













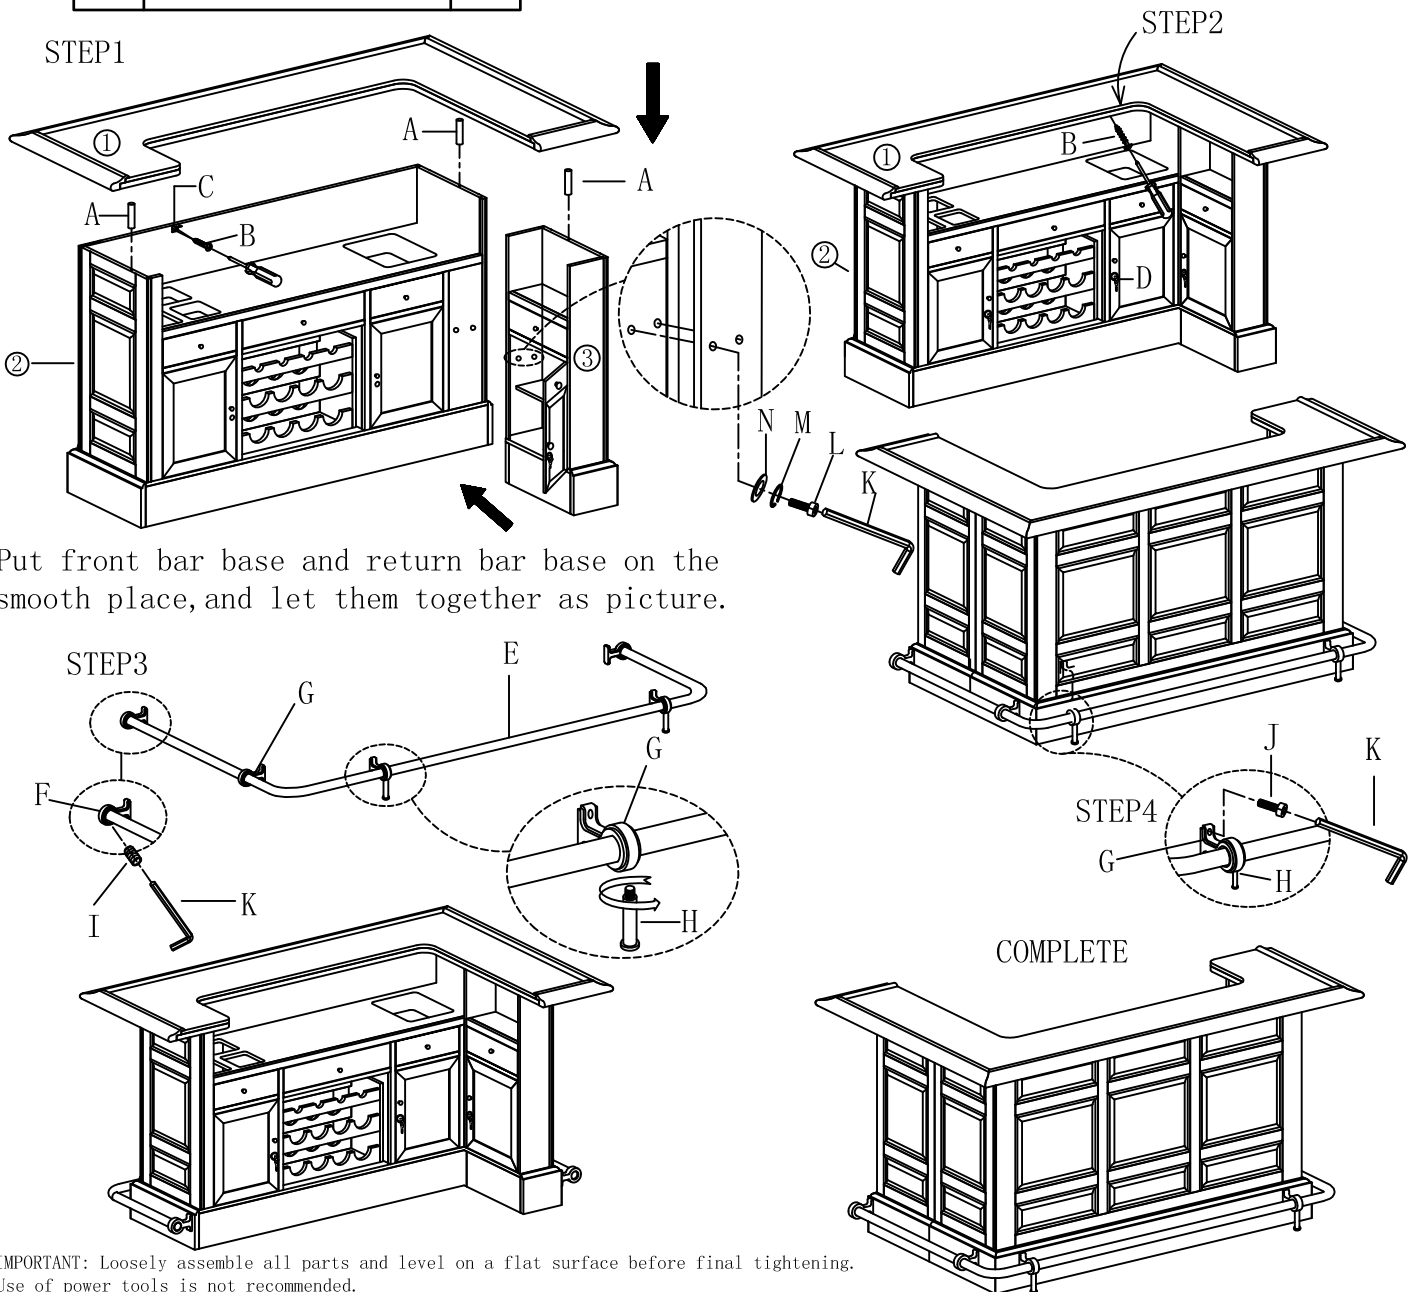


1150-06/03/35-RT/B Assembly instructions

*Please don't lock down the bolts before all parts installed.

NO.		Hardware List	Q' TY	NO.		Hardware List	Q' TY
A		TENON (∅10*40mmL)	3	H		SUPPORT	2
B		WOOD SCREW (#8*3/4")	20	I		BOLT (∅8*16mmL)	2
C		ANGLE IRON	5	J		BOLT (∅1/4"*1"L)	10
D		KEY	3	K		ALLEN WRENCH (4mm)	1
E		FOOT RESTER	1	L		BOLT (∅1/4"*1-1/4"L)	2
F		RESTER HOLDER	2	M		LOCK WASHER (1/4")	2
G		RESTER HOLDER	3	N		WASHER (1/4")	2

PART LIST		
①	TOP	1
②	BASE	1
③	WITH RETURN	1



IMPORTANT: Loosely assemble all parts and level on a flat surface before final tightening. Use of power tools is not recommended.