


ASSEMBLY INSTRUCTION FOR PROVIDENCE FLOOR RACK

STEP 1


CAREFULLY UNPACKAGE AND
PLACE THE RACK FRONT FACING DOWN.

STEP 2


ASSEMBLY THE WOOD BLOCK TO THE
BUN FOOT BY UTILIZING (4 PCS)
P.H.RATTAN SCREW #9 X 1 3/4".

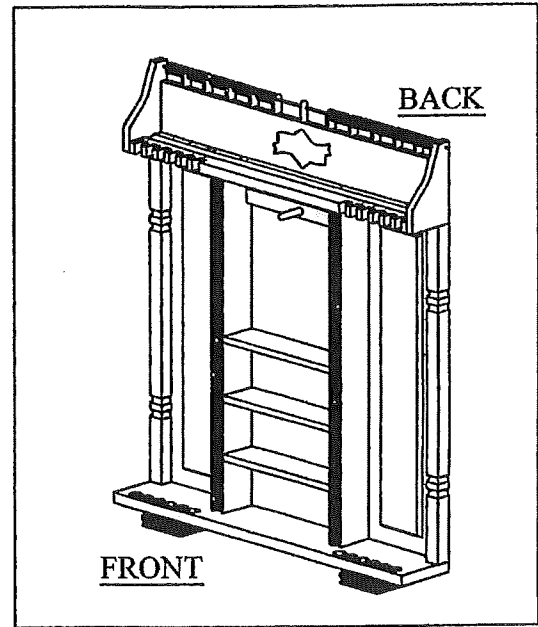

PROVIDENCE FLOOR RACK

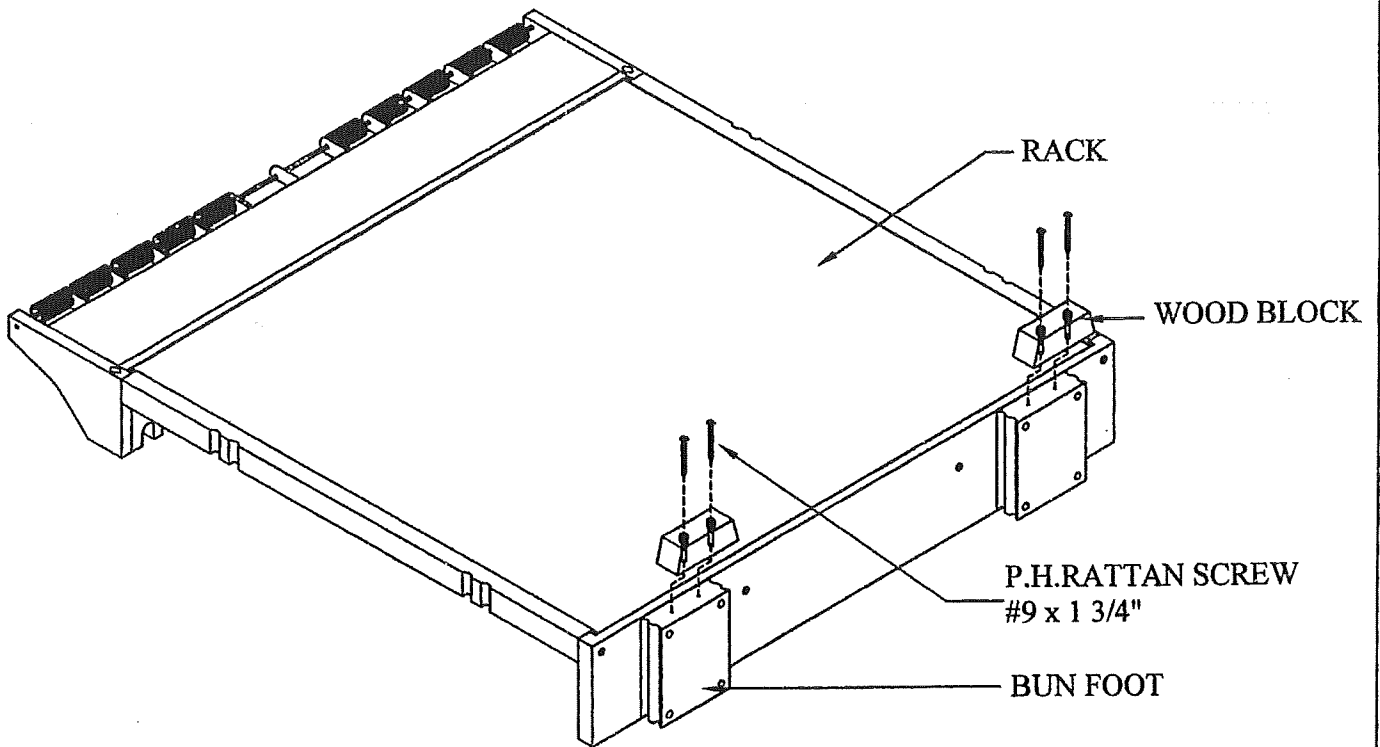


1.



PH RATTAN SCREW
#9 x 1 3/4"
(4 PCS)

2.



WOOD BLOCK
(2 PCS)