Proto Putty Instructions

Materials:

- 100% Silicone 1 (silicone 2 WONT work)
- Disposable Cup
- Corn Starch
- Mixing Stick
- Small Cup of water
- Aluminum foil Or Wax paper sheet
- Rubber gloves
- (Optional) Dye: can use food coloring, But fluorescent dyes look Awesome!
- (Optional) Glow powder (we recommend www.patrickadairsupplies.com)
- (Optional) Scents, Glitter, Just get creative!

Steps:

1. Pour enough cornstarch in cup to line the cup.



2. Squirt silicone into cup with cornstarch.




3. Add dye,glow & any other additives. Mix until it has a nice smooth consistency.



4. Add approximately 1 ML of water. (*less water makes it take longer to harden. More water makes it harden faster*)



5. Mix thoroughly

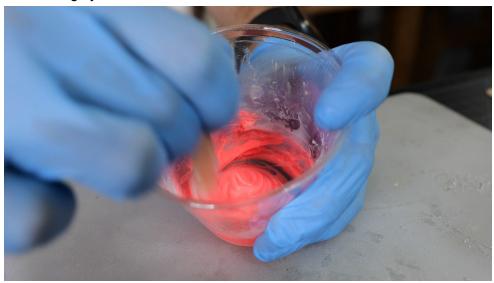

6. Apply small amount of cornstarch to hand then put silicone into hand & start rolling. If it's too sticky it either needs more cornstarch/glow powder or needs a bit more time to harden





7. Aggressively roll between hands, squish it fairly flat as you roll it to get maximum smoothness, eventually roll it lightly & focus on making it spherical. Then carefully drop it onto wax paper /aluminum foil.



8. (Optional) Instead of dropping onto sheet you can keep rolling for 10-15 minutes until it completely solidifies to get bouncy balls as spherical as possible without a flat spot.