


Instructions

1



**Hook spring
on mat ring
then attach
to frame.**

2

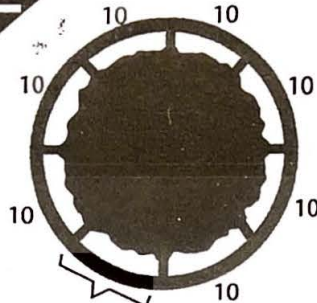


10 Holes & 10 Rings to left

**From the first spring,
count to the left 10-rings
& 10-frame holes.**

**Attach spring to
corresponding hole & ring.**

Repeat around full frame

3

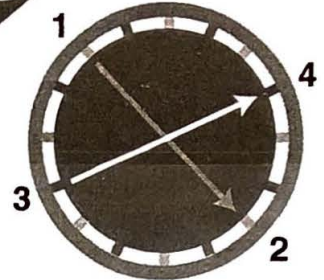

**Fill in the middle
of the gaps between the
springs.**

**Go directly across the
trampoline.**

**DO NOT load up one
side with springs.**

Be Sure to Keep Proper Rings & Holes Aligned

Note Trampoline mats may seem not big enough when you first unbox them, but then they are. Mats get their full bounce after a few uses.

Wrinkles go away after a few days in the wonderful sunshine.

Have Questions? 1-800-473-5867 CustomerService@TrampolinePro.com

Watch
Installation Video



TrampolinePro.com/pages/mat-install

TRAMPOLINEPRO.COM