



JLU FRAME MOUNTED ROCK RAILS

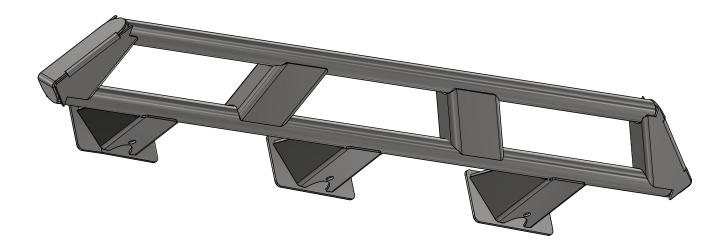


ASSEMBLY INSTRUCTIONS



KIT COMPONENTS

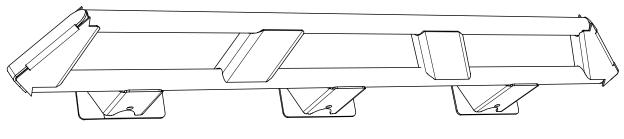


MB1158 - DRIVER Qty: 1

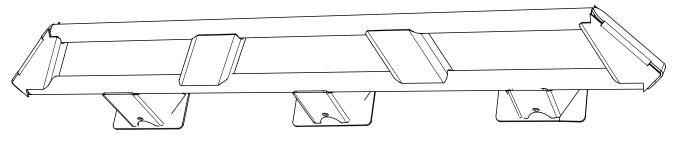

MB1158 - PASSENGER Qty: 1



POSITIONING

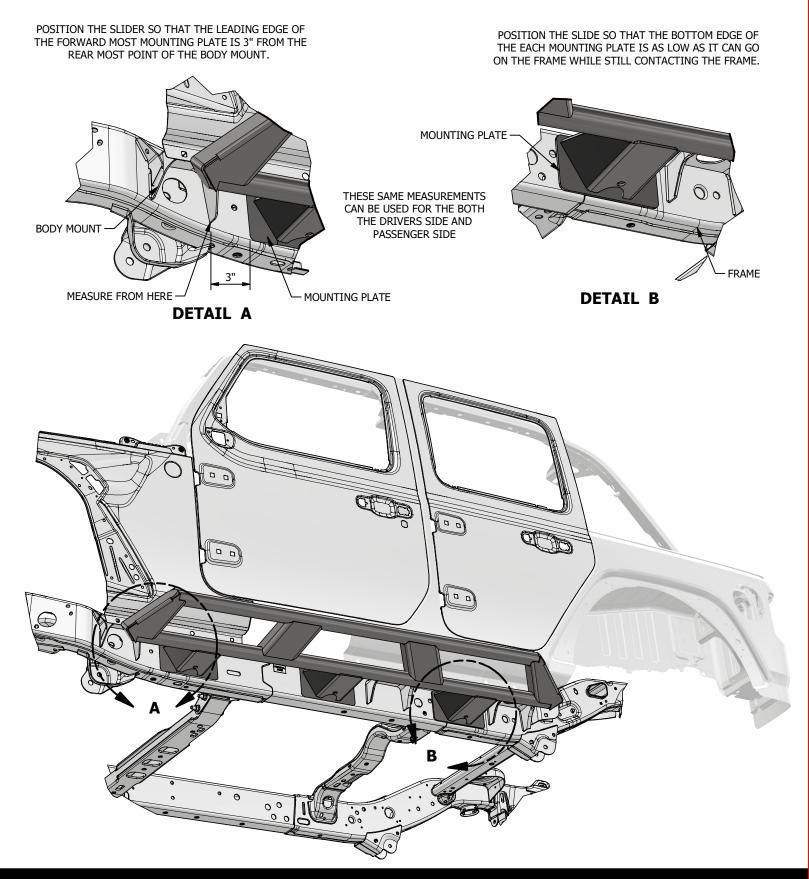



WELDING

1. DISCONNECT THE NEGATIVE TERMINAL OF THE BATTERY

2. MARK THE AREAS WHERE THE MOUNTING PLATES WILL BE WELDED TO THE FRAME. REMOVE THE ROCK SLIDERS AND CLEAN THE AREA OF ANY PAINT OR DEBRIS.

- 3. REPOSITION THE ROCK SLIDERS AND TACK INTO PLACE.
- 4. CONFIRM THE POSITION OF THE ROCK SLIDER ON THE FRAME
- 5. WELD THE CIRCUMFERENCE OF EACH MOUNTING PLATE TO THE FRAME.
- 6. PAINT OR PROTECT THE ROCK SLIDER, FRAME, AND WELDS FROM CORROSION.

