



MB1170 - Assembly Instructions 15" Stretch Over The Rail Rear Corner Armor


CONTENTS

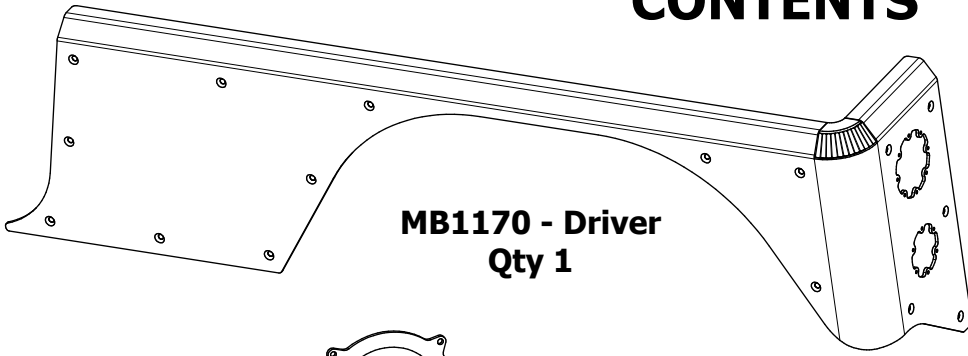


**MB1170 - Driver
Qty 1**

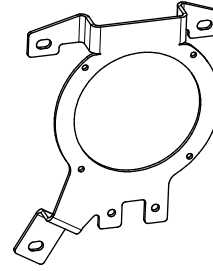


**MB1170-06
Qty 1**

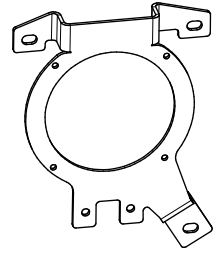


**MB1170-06_MIR
Qty 1**

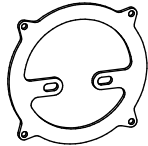


**MB1170-04
Qty 2**

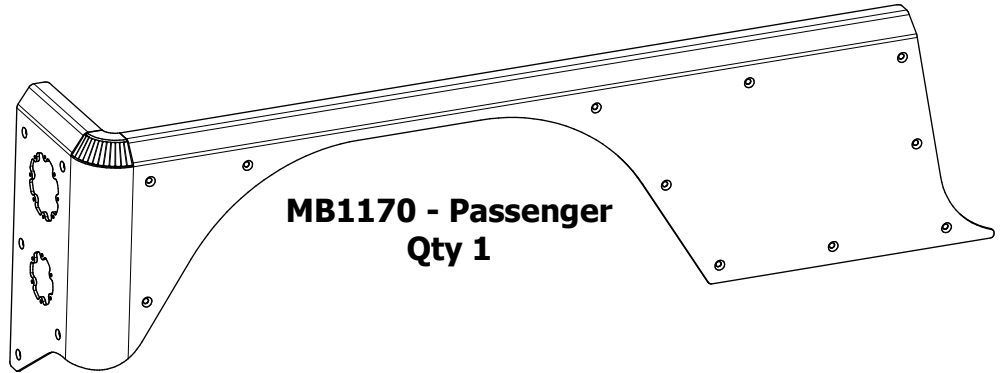


**MB1170 - Passenger
Qty 1**

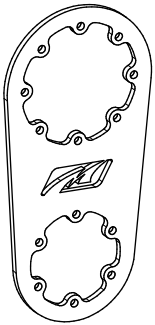


**MB1170-05
Qty 2**

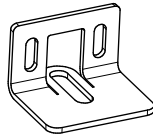


**MB1170-07
Qty 2**

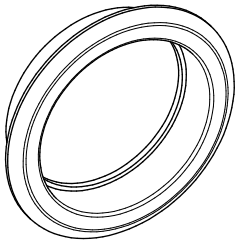


**MB6502
Tail Light Grommet
Qty 2**

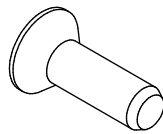


**Countersunk Screw
5/16\"-18 x 1\"
Qty 32**

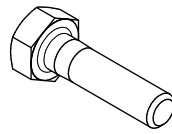

**Hex Bolt
1/4\"-20 x 1\"
Qty 4**



**Button Head Screw
#10-24 x 3/4\"
Qty 8**



**Button Head Screw
1/4\"-20 x 1/2\"
Qty 28**




**Flat Washer
5/16\"
Qty 32**



**Flat Washer
1/4\"
Qty 8**



**Flat Washer
M6
Qty 8**

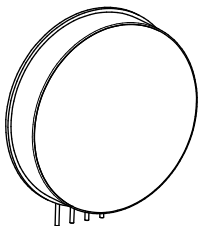

**MB6502
LED Tail Light
Qty 2**



**Nylock Nut
5/16\"-16
Qty 32**



**Nylock Nut
1/4\"-20
Qty 4**



**Nylock Nut
#10-24
Qty 8**