
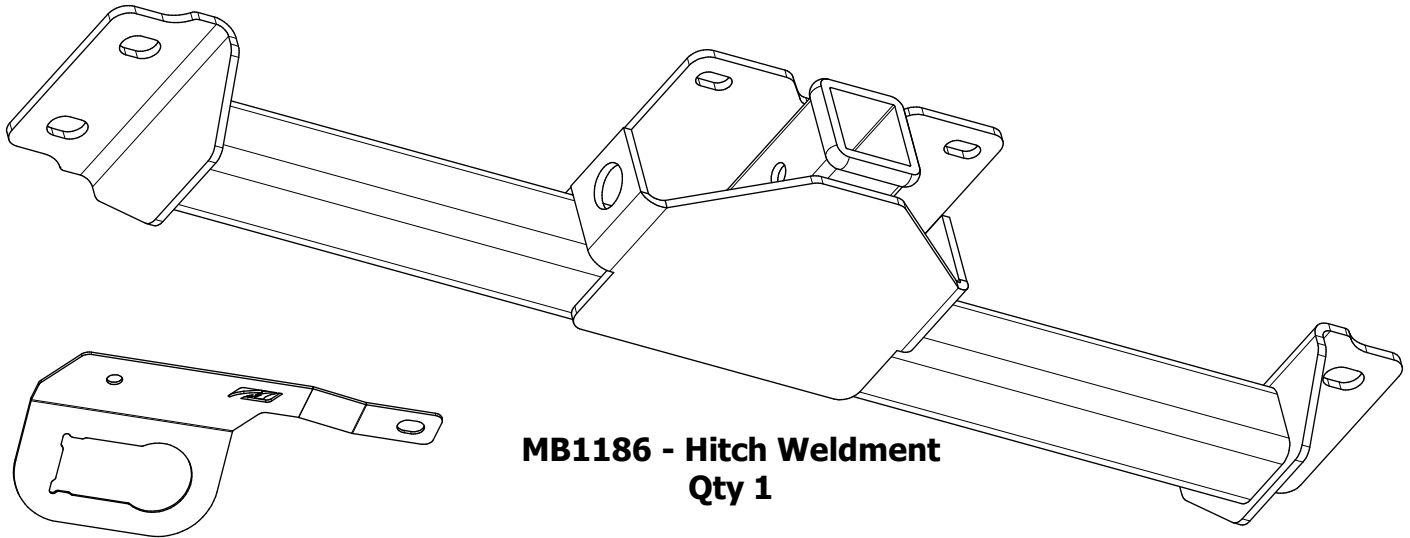


MB1186 - Assembly Instructions Tow Hitch for MB1185**CONTENTS**

**MB1186 - Hitch Weldment
Qty 1**

**MB1186-05
Wiring Mount
Qty 1**




**Hex Bolt
3/8\"-16 x 1\" Long
Qty 1**



**Flat Washer
3/8\"
Qty 2**




**Nylock Nut
3/18\"-16
Qty 1**

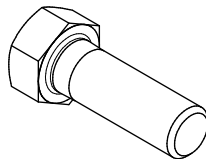


**Hex Bolt
1/2\"-13 x 1-1/2\" Long
Qty 2**




**Flat Washer
1/2\"
Qty 4**



**Nylock Nut
1/2\"-13
Qty 2**

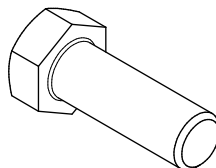

**Hex Bolt
M14x1.5 x 40mm Long
Qty 4**



**Flat Washer
9/16\"
Qty 4**