



MB1215 - MOTOBED FRONT MOLLE PANEL

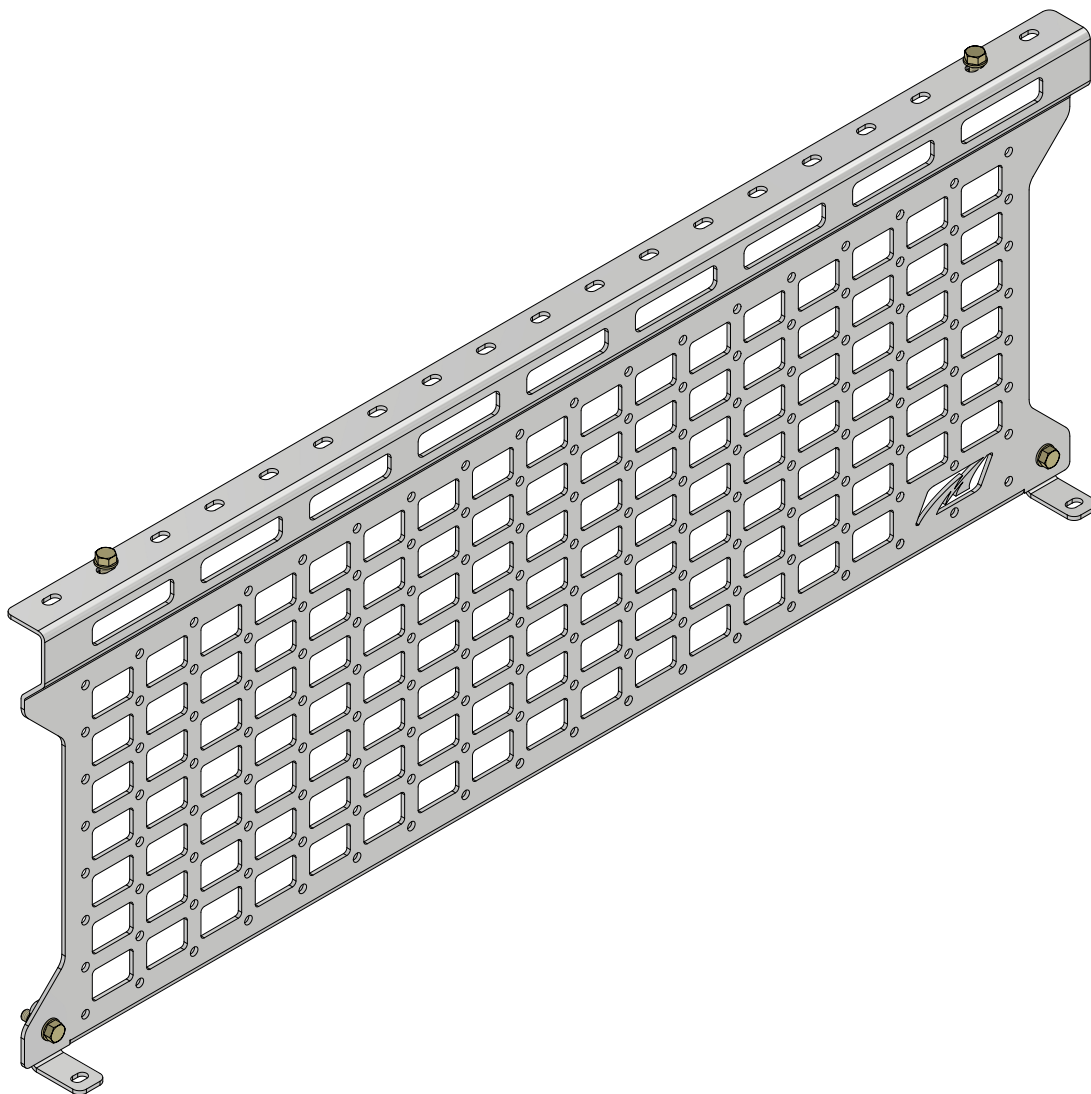

ASSEMBLY INSTRUCTIONS


MB1215 - Assembly Instructions Motobed Front MOLLE Panel

Contents

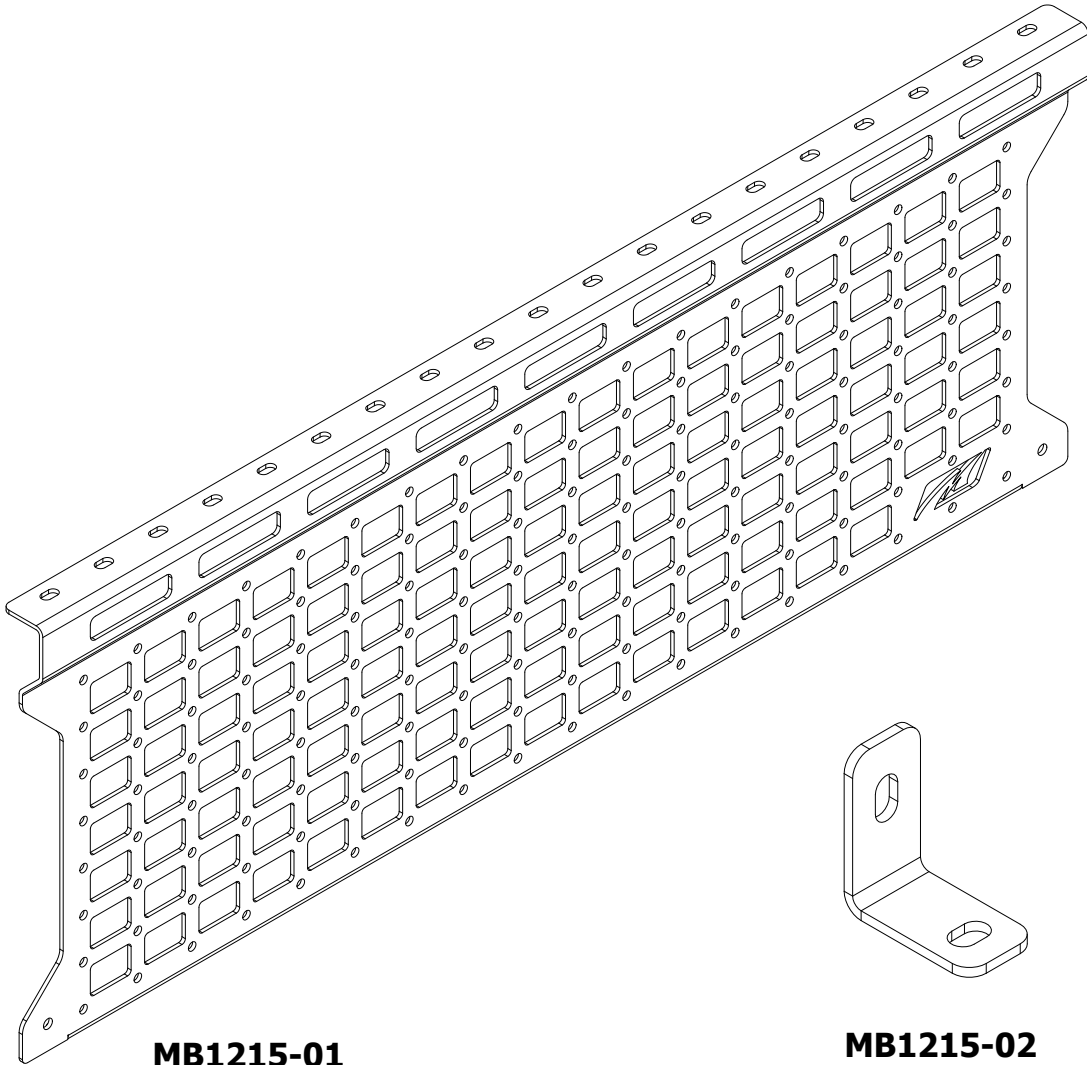


MB1215-01


MB1215-02
Qty 2

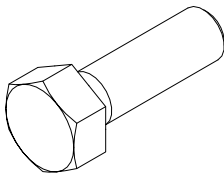

5/16\"-18 x 1\" Hex Bolt
Qty 4



5/16\" Plain Washer
Qty 8

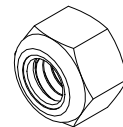

5/16\"-18 Nylon Insert Hex Locknut
Qty 4

MB1215 - Assembly Instructions Motobed Front MOLLE Panel

Step 01

