


FRONT SHOCK TOWERS FOR ORI STRUTS JL/JLU/JT

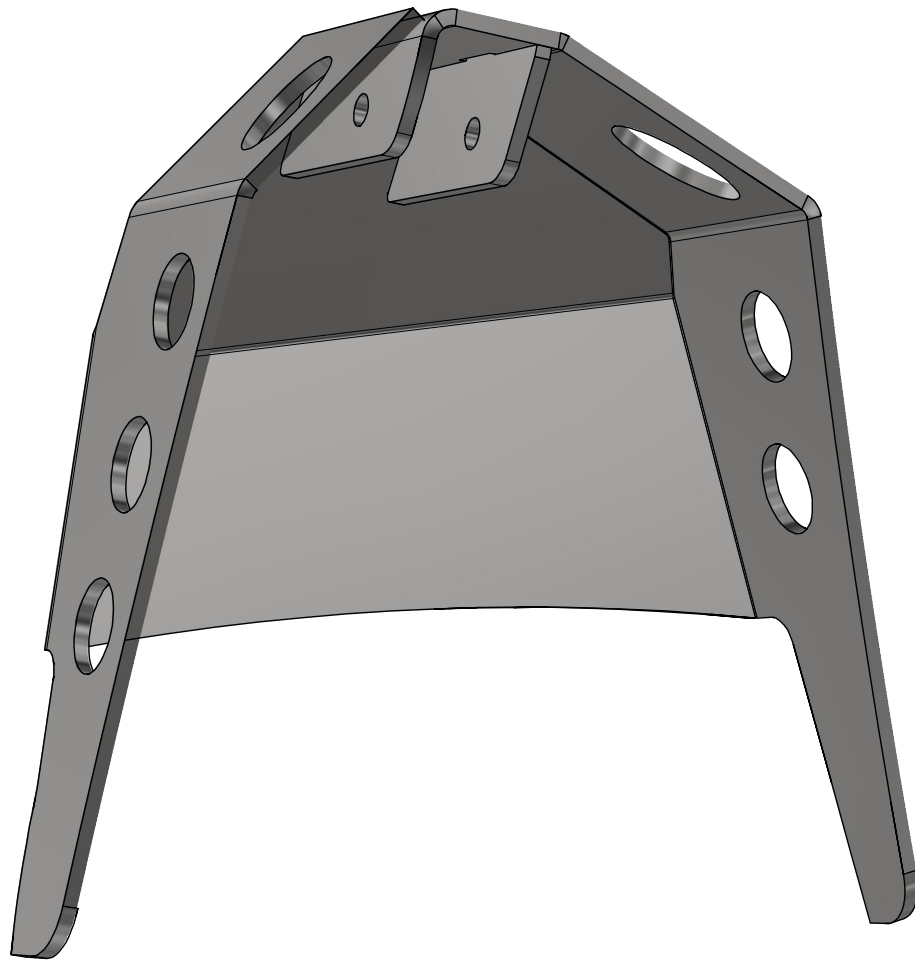


ASSEMBLY INSTRUCTIONS



MB1565 - Installation Instructions Front Shock Towers for ORI Struts JL/JLU/JT

KIT COMPONENTS


MB1565-01
Qty: 1

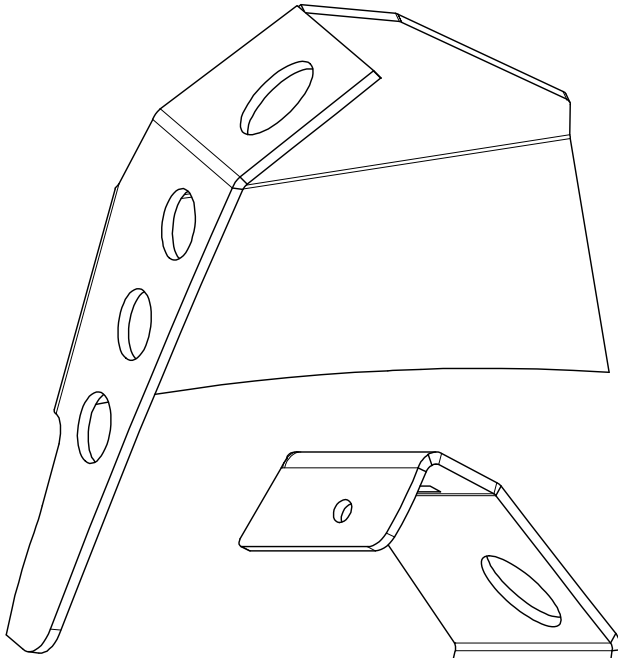


MB1565-01_MIR
Qty: 1

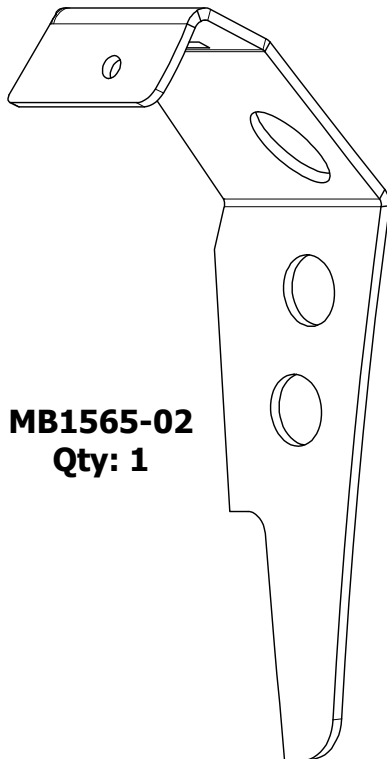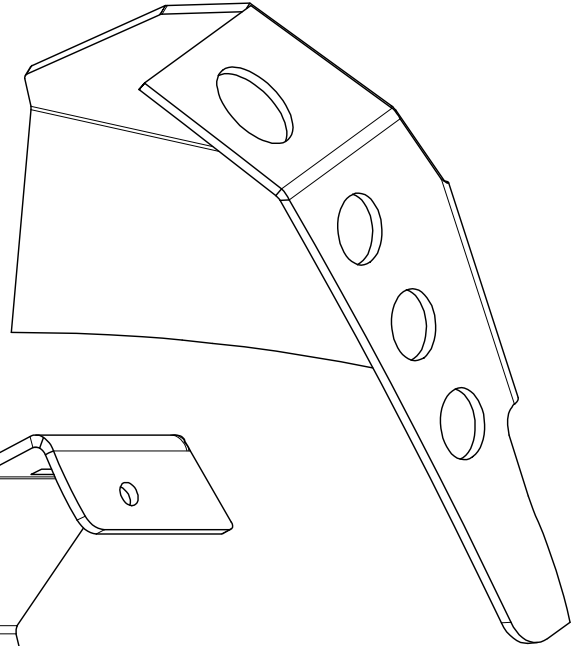


MB1565-02
Qty: 1

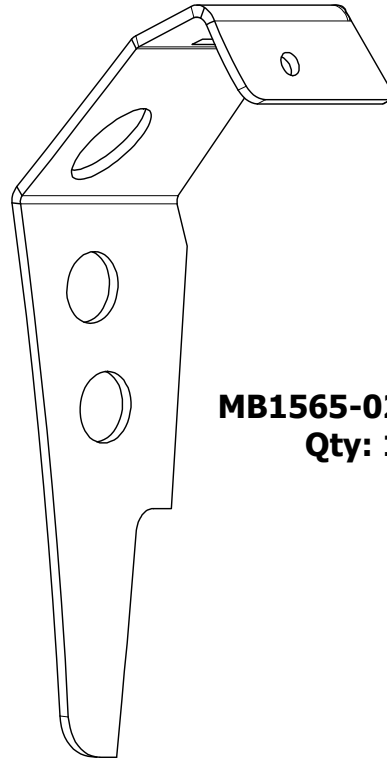

MB1565-02_MIR
Qty: 1




MB1565-03
Qty: 1



MB1565-03_MIR
Qty: 1


MB1565 - Installation Instructions Front Shock Towers for ORI Struts JL/JLU/JT

ASSEMBLY

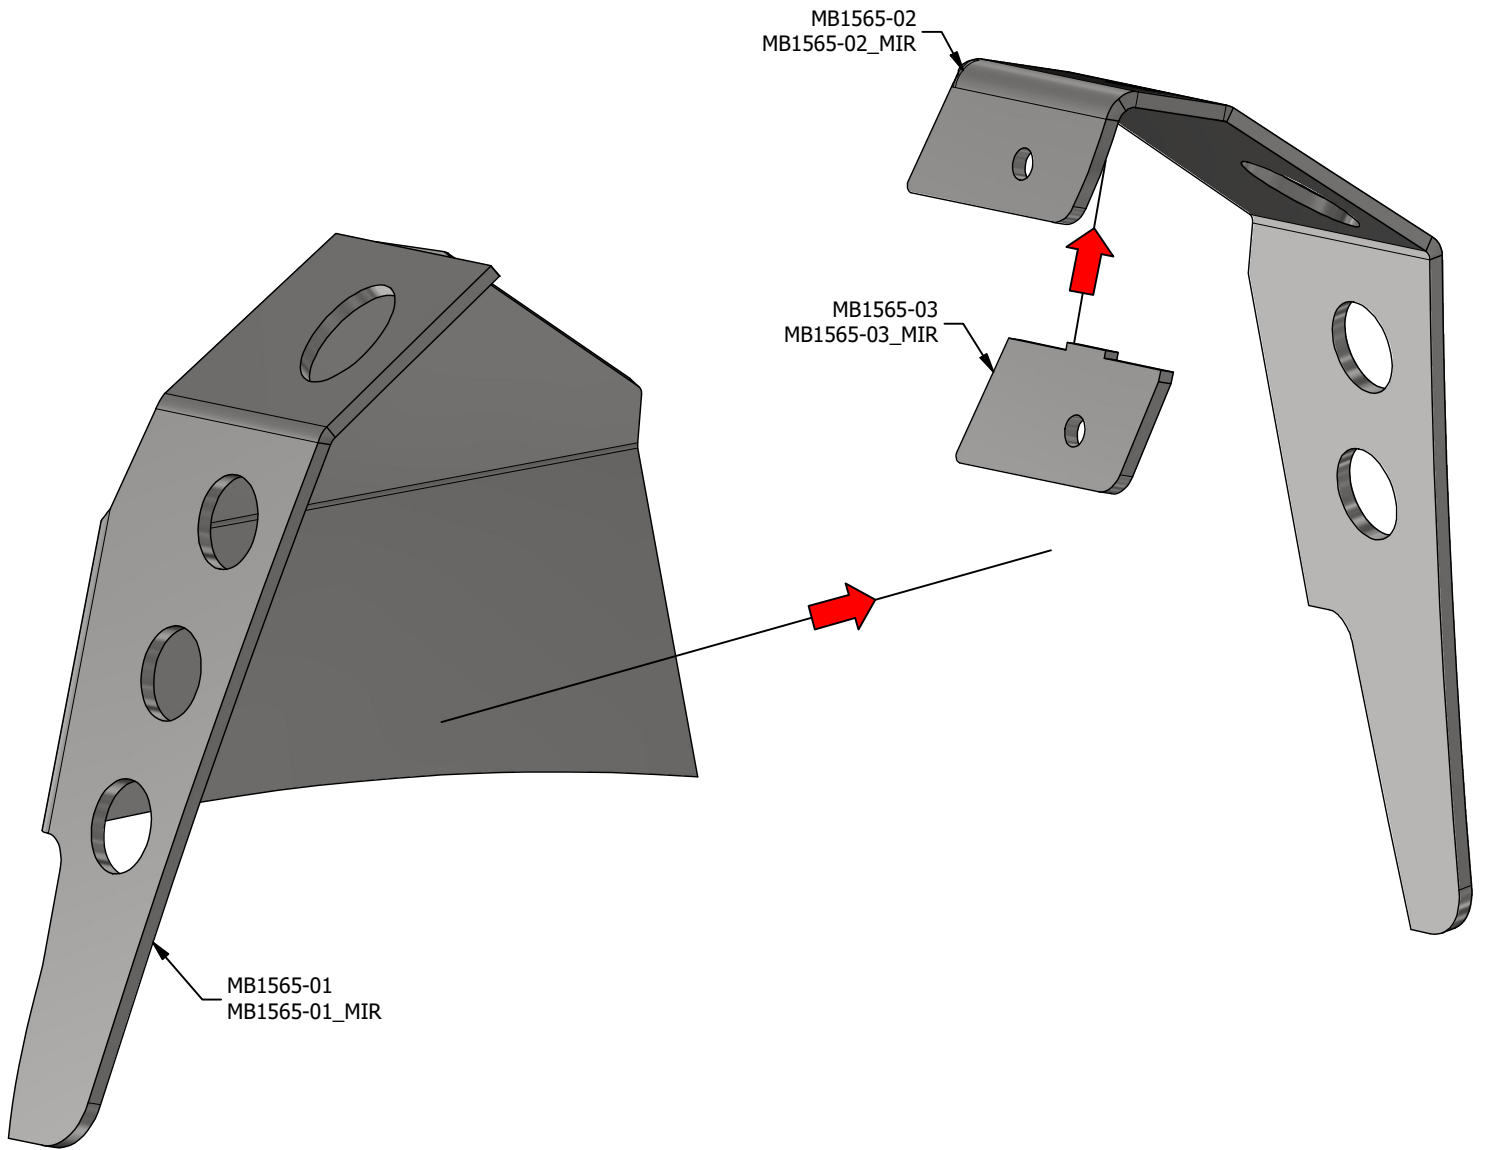


MB1565 - Installation Instructions Front Shock Towers for ORI Struts JL/JLU/JT


WELDING

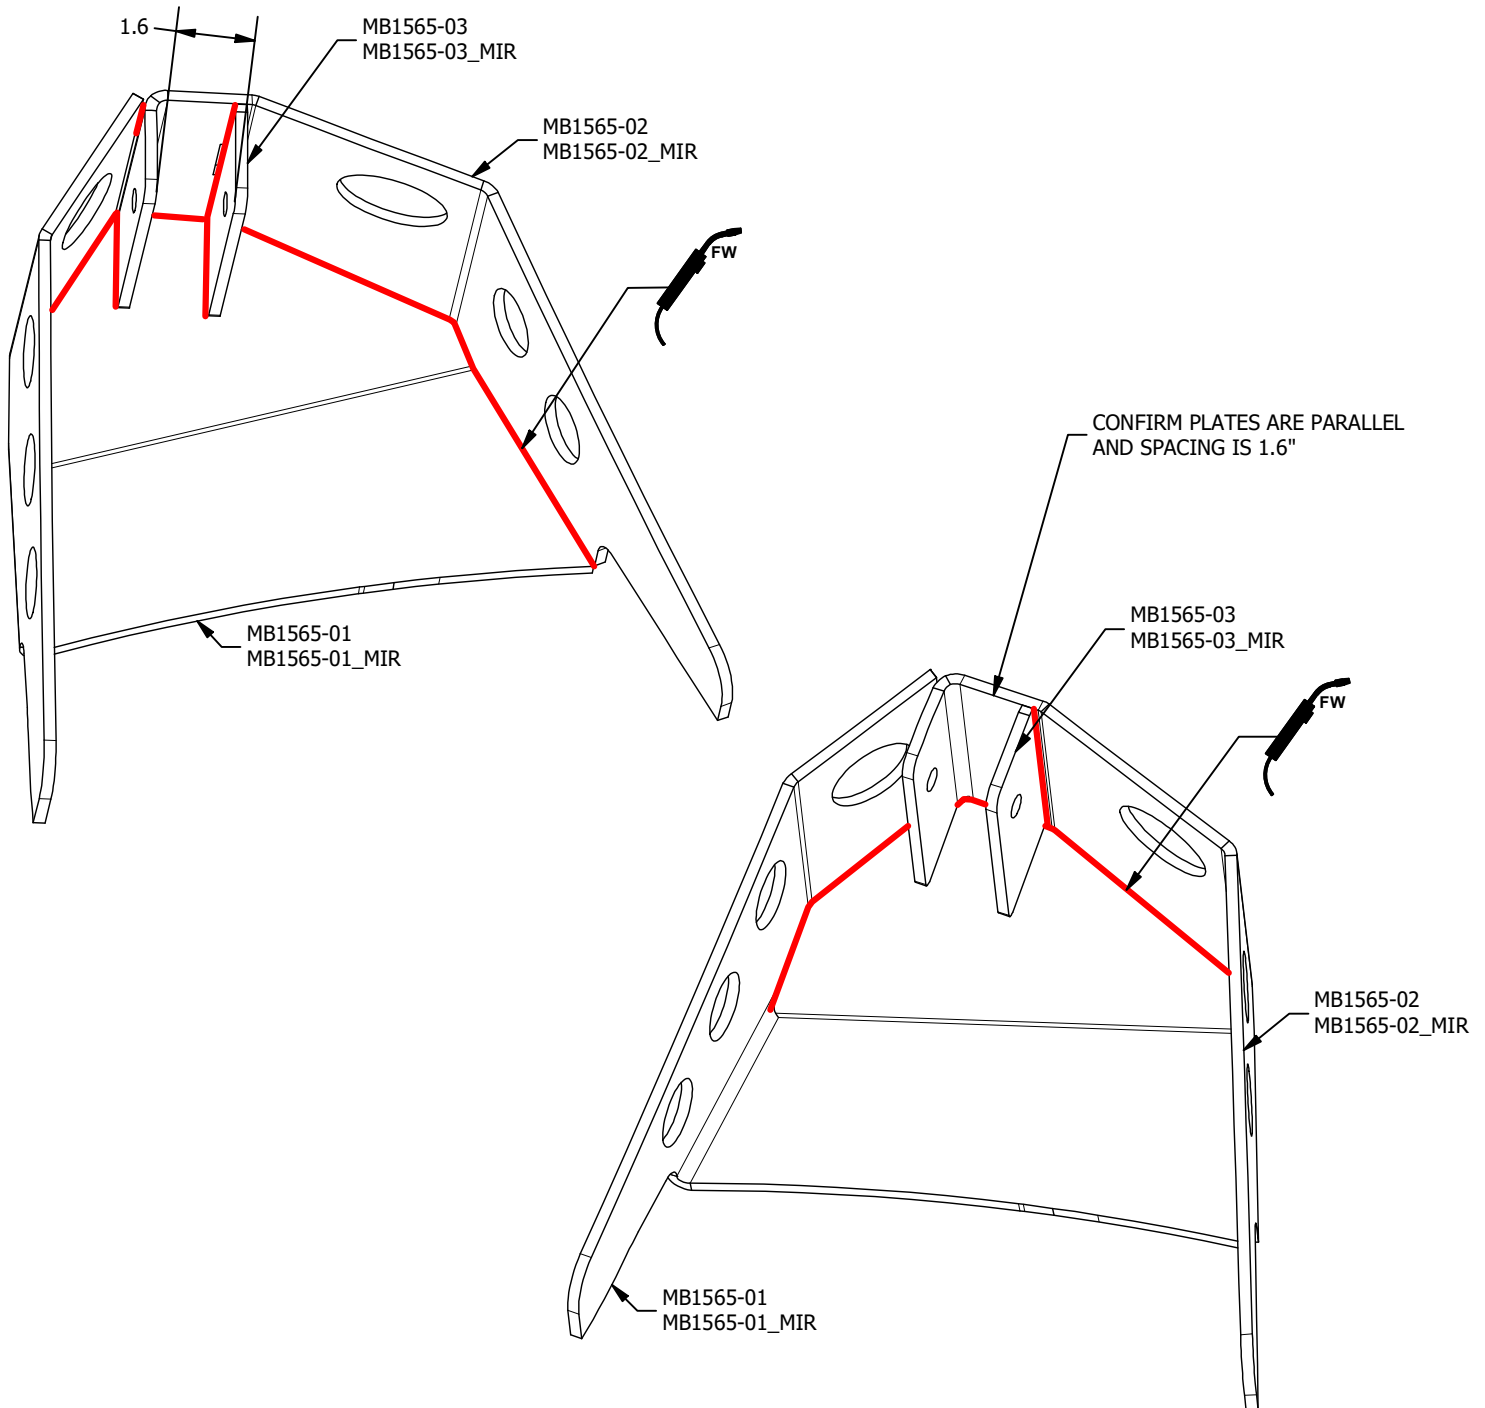

MB1565 - Installation Instructions Front Shock Towers for ORI Struts JL/JLU/JT

WELDING

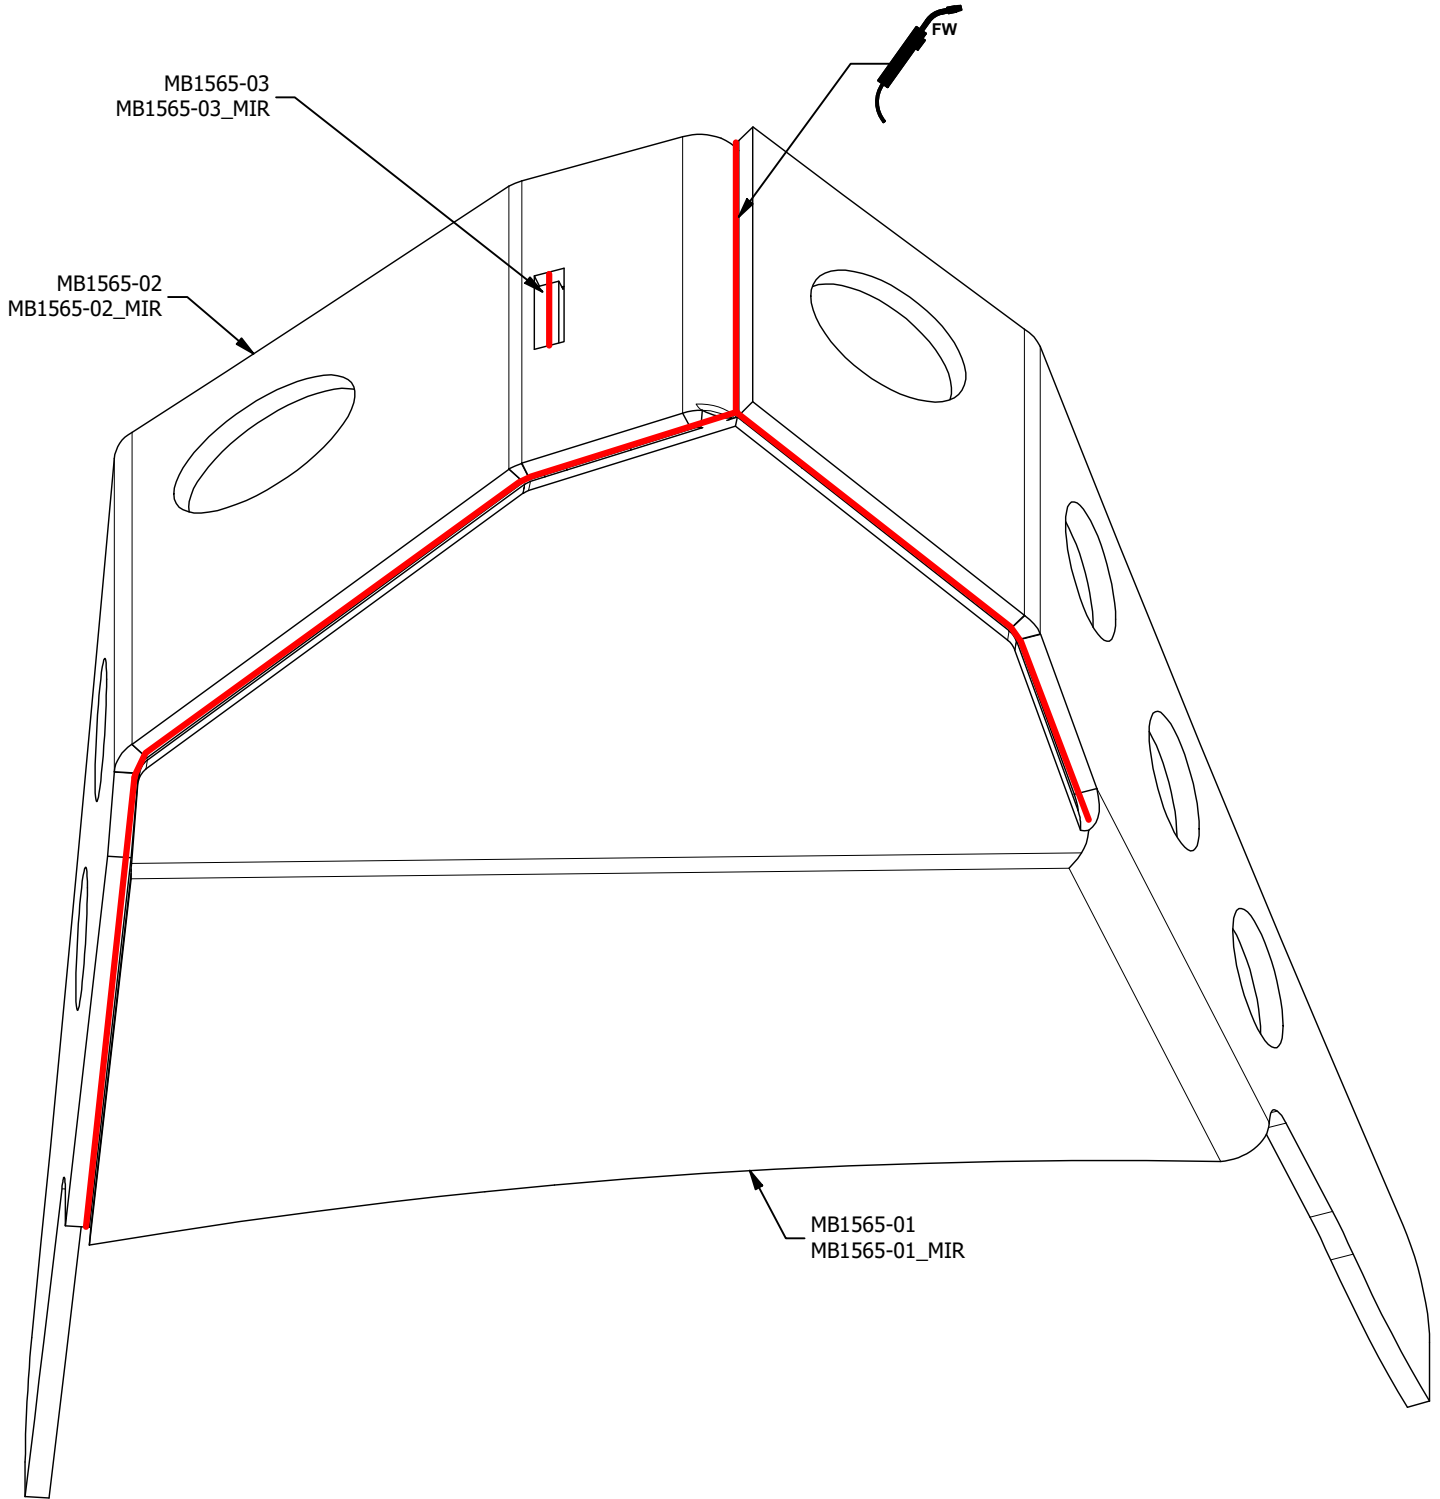

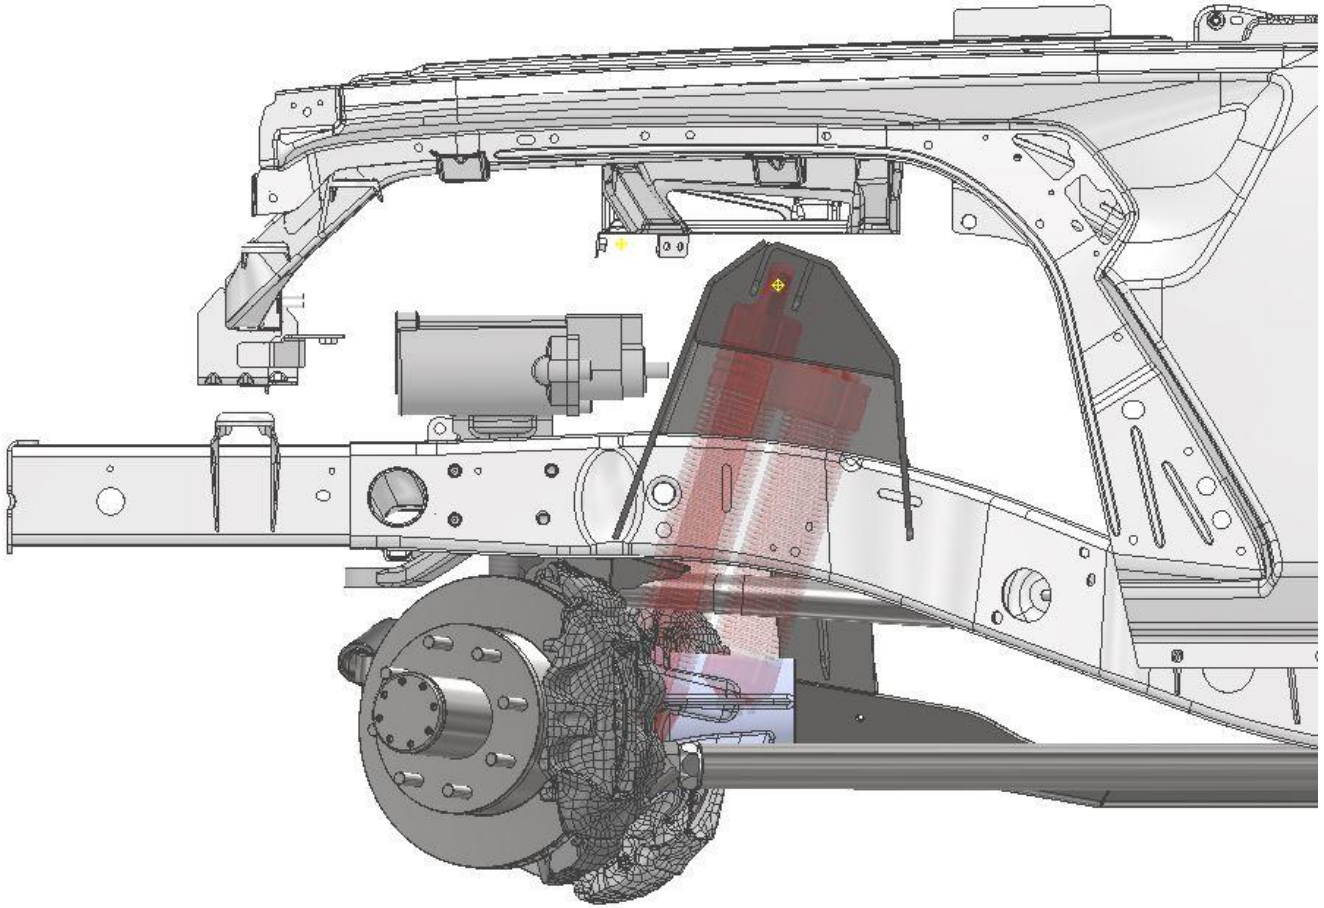MB1565 - Installation Instructions Front Shock Towers for ORI Struts JL/JLU/JT**FITMENT**

DIMENSIONS MAY VARY BASED ON THE INDIVIDUAL SET UP. ALWAYS CYCLE THE SUSPENSION AND CHECK SUSPENSION BEFORE FINISH WELDING

MB1565 - Installation Instructions Front Shock Towers for ORI Struts JL/JLU/JT

FITMENT

