



# MB3051 - Universal Mirror Brackets

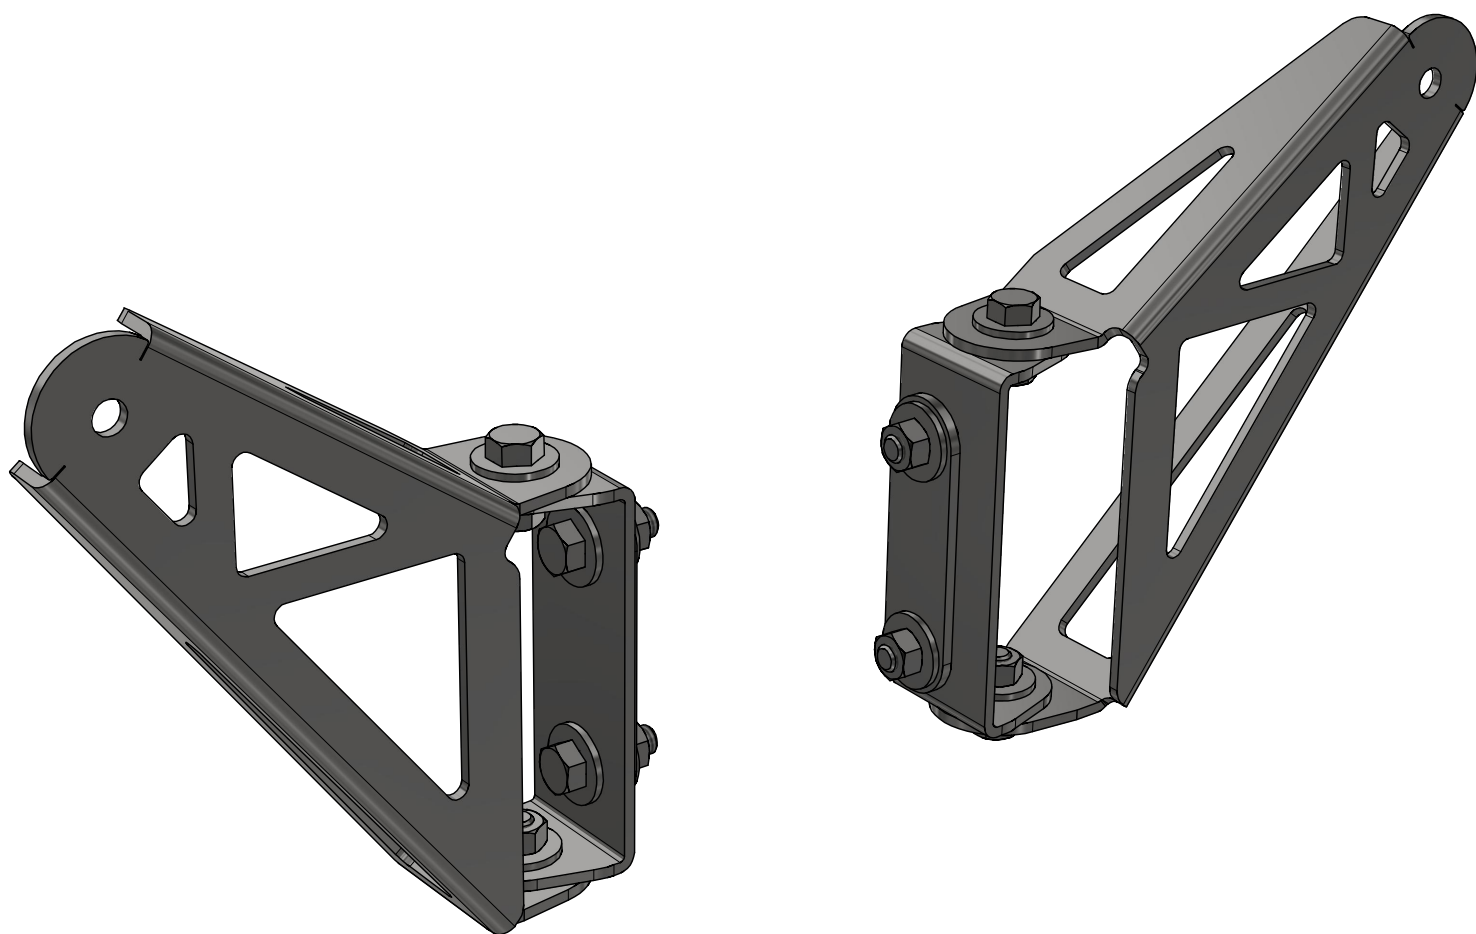


## Installation Instructions

**MB3051 - Installation Instructions Universal Mirror Brackets**


**KIT CONTENTS**

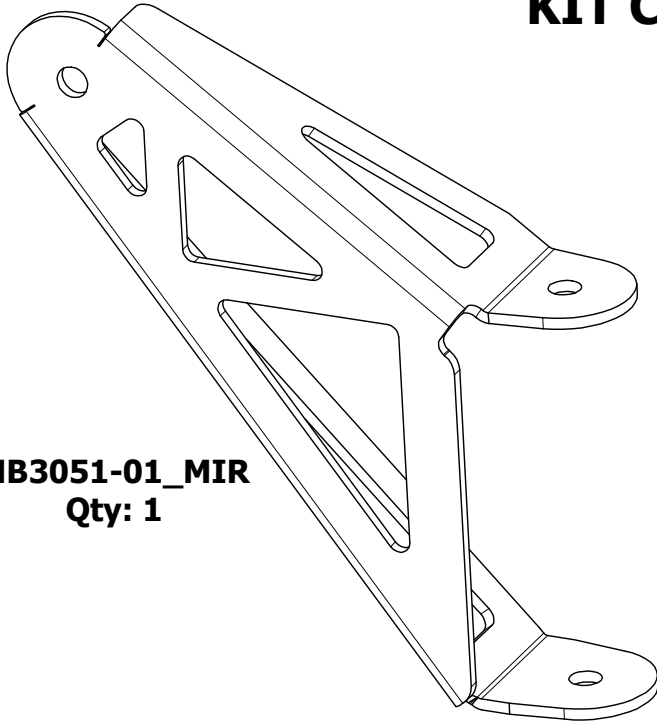

**MB3051-01\_MIR**  
Qty: 1

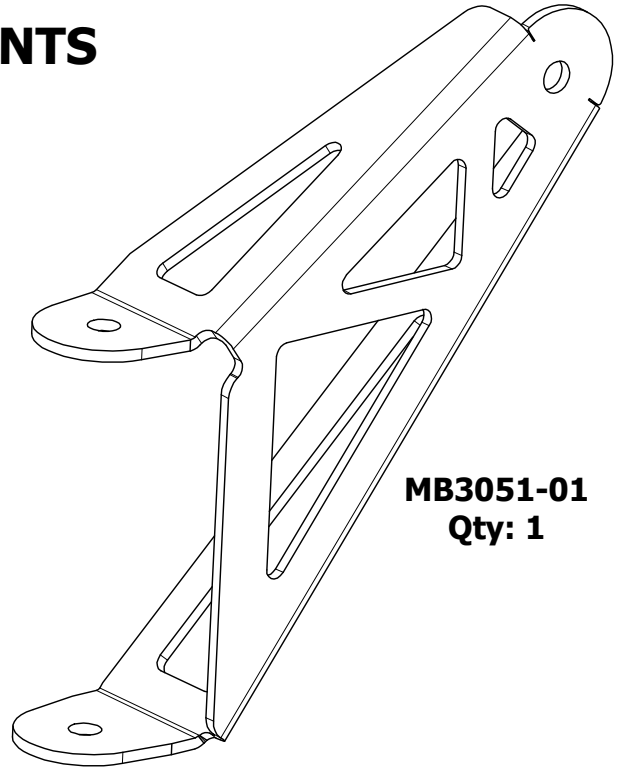


**MB3051-01**  
Qty: 1

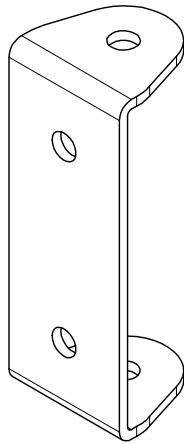


**MB3051-02**  
Qty: 2




**MB3051-03**  
Qty: 2

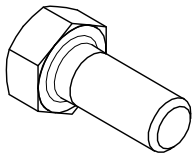


**HEX BOLT**  
5/16"-18 x 0.75"  
Qty: 4

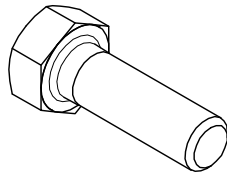

**HEX BOLT**  
5/16"-18 x 1"  
Qty: 4

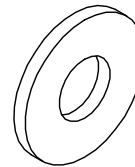


**FLAT WASHER**  
5/16"  
Qty: 16



**NYLOCK NUT**  
5/16"-18  
Qty: 8

**MB3051 - Installation Instructions Universal Mirror Brackets**

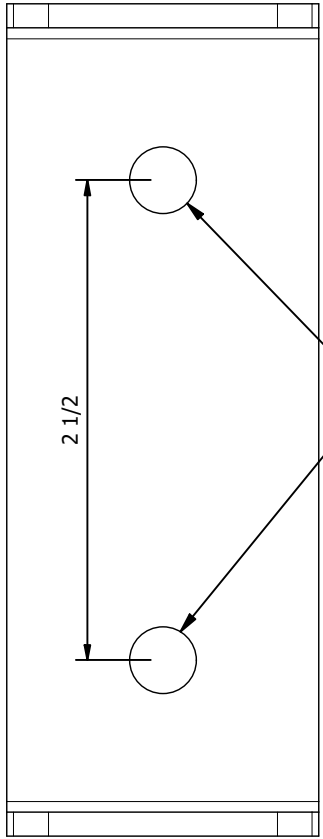


DRILL TWO (2) 5/16" CLEARANCE HOLES INTO THE DOOR OR PANEL SPACED 2-1/2" APART

CAN BE USED AS A TEMPLATE



**MB3051-02**

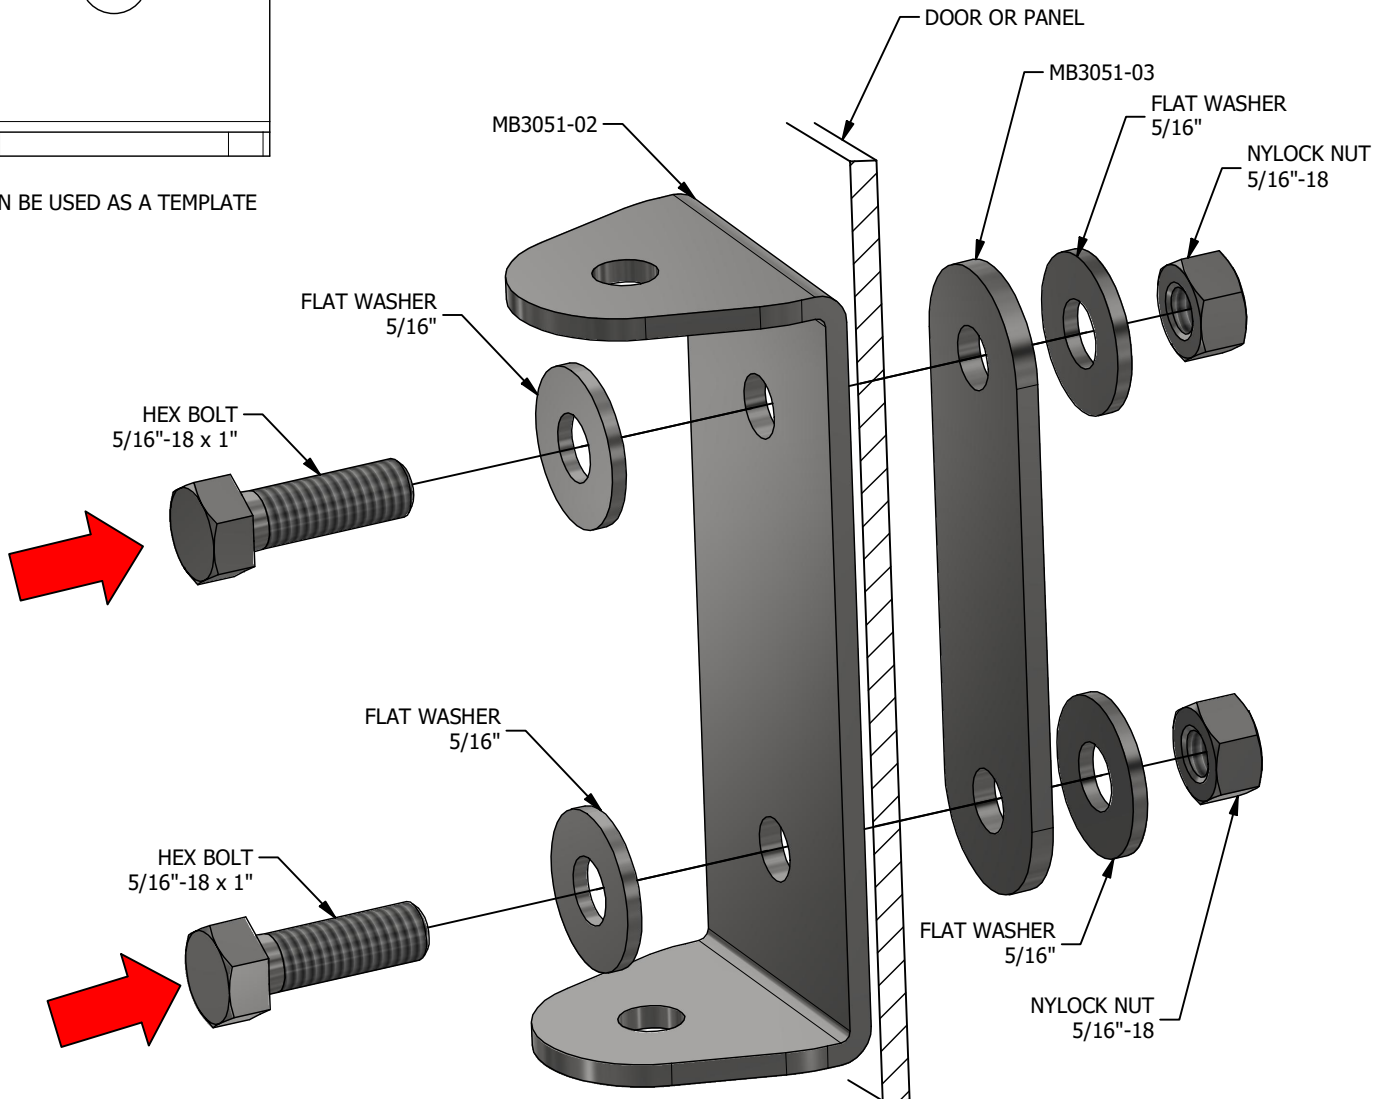

**MB3051 - Installation Instructions Universal Mirror Brackets**

