



MB3051 - Universal Mirror Brackets

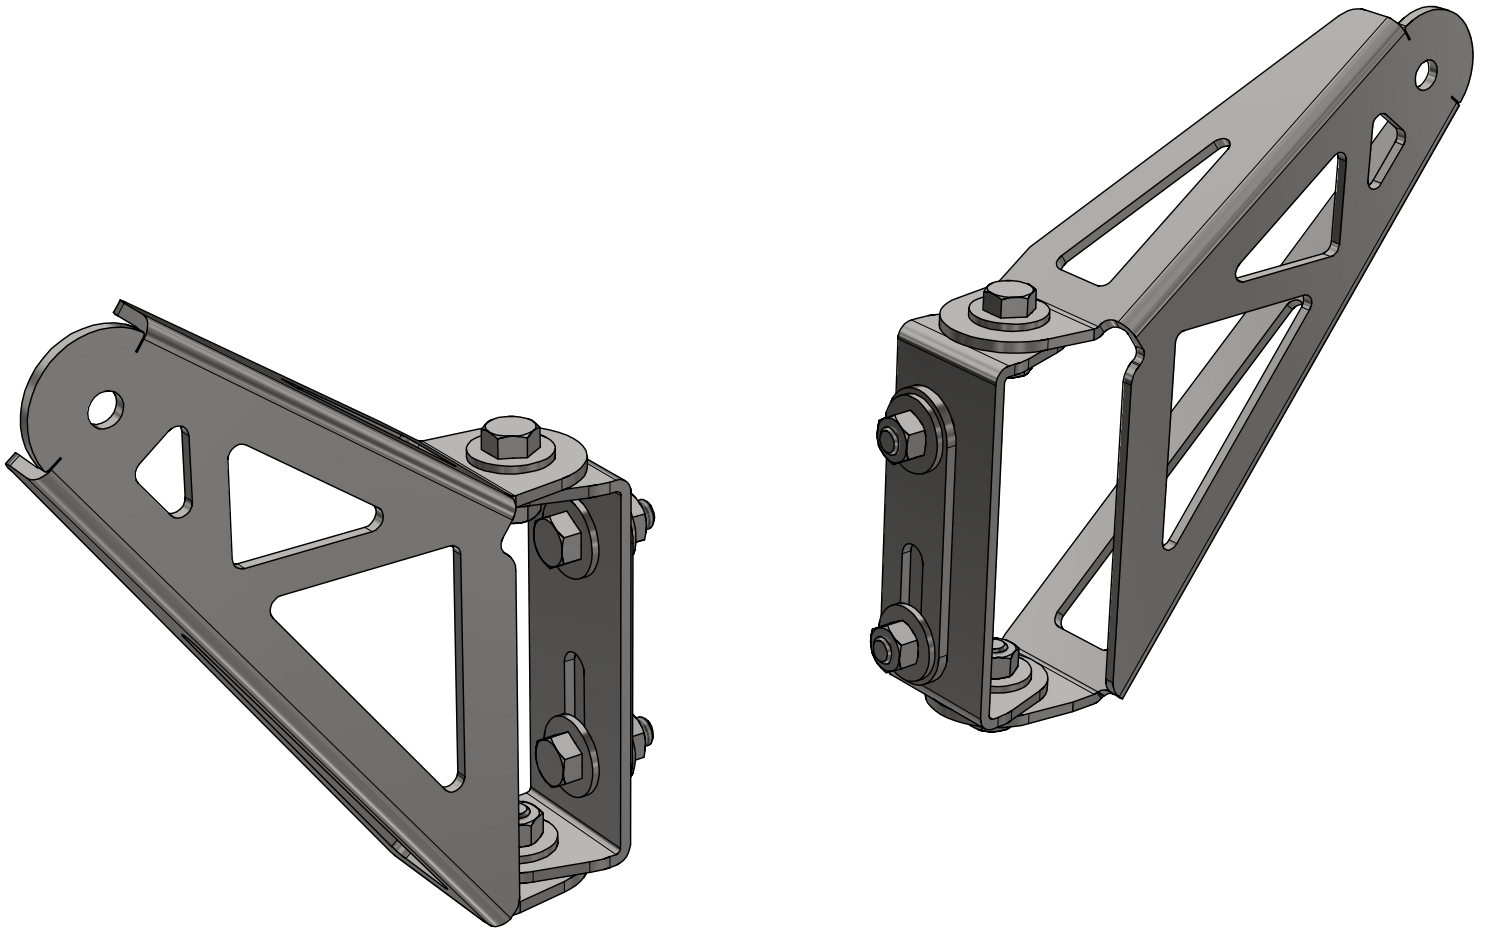


Installation Instructions

MB3051 - Installation Instructions Universal Mirror Brackets


KIT CONTENTS

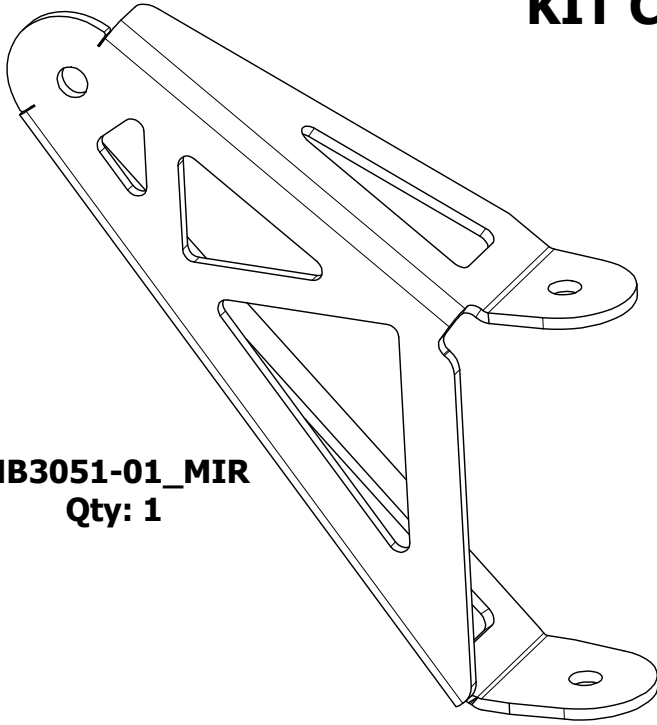


MB3051-01_MIR
Qty: 1

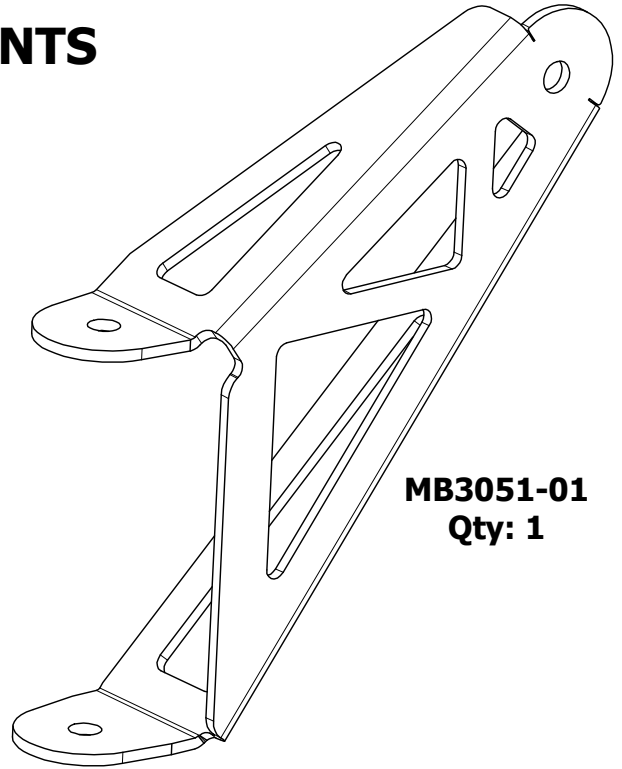


MB3051-01
Qty: 1

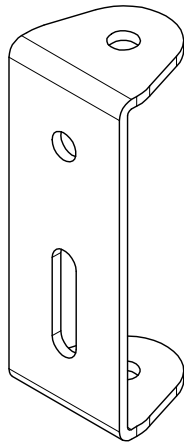


MB3051-02
Qty: 2




MB3051-03
Qty: 2

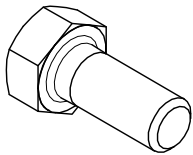


HEX BOLT
5/16"-18 x 0.75"
Qty: 4

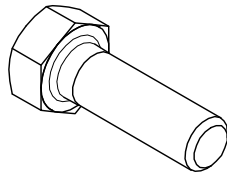

HEX BOLT
5/16"-18 x 1"
Qty: 4

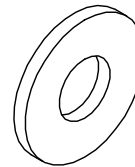


FLAT WASHER
5/16"
Qty: 16




NYLOCK NUT
5/16"-18
Qty: 8

MB3051 - Installation Instructions Universal Mirror Brackets

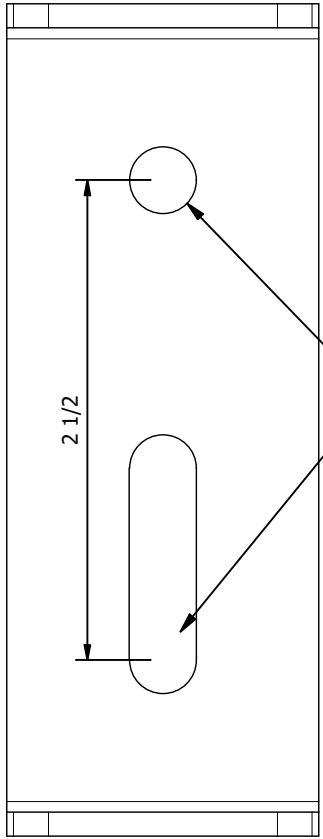


DRILL TWO (2) 5/16" CLEARANCE HOLES INTO THE DOOR OR PANEL SPACED 2-1/2" APART

CAN BE USED AS A TEMPLATE

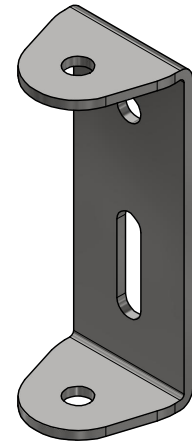

MB3051-02

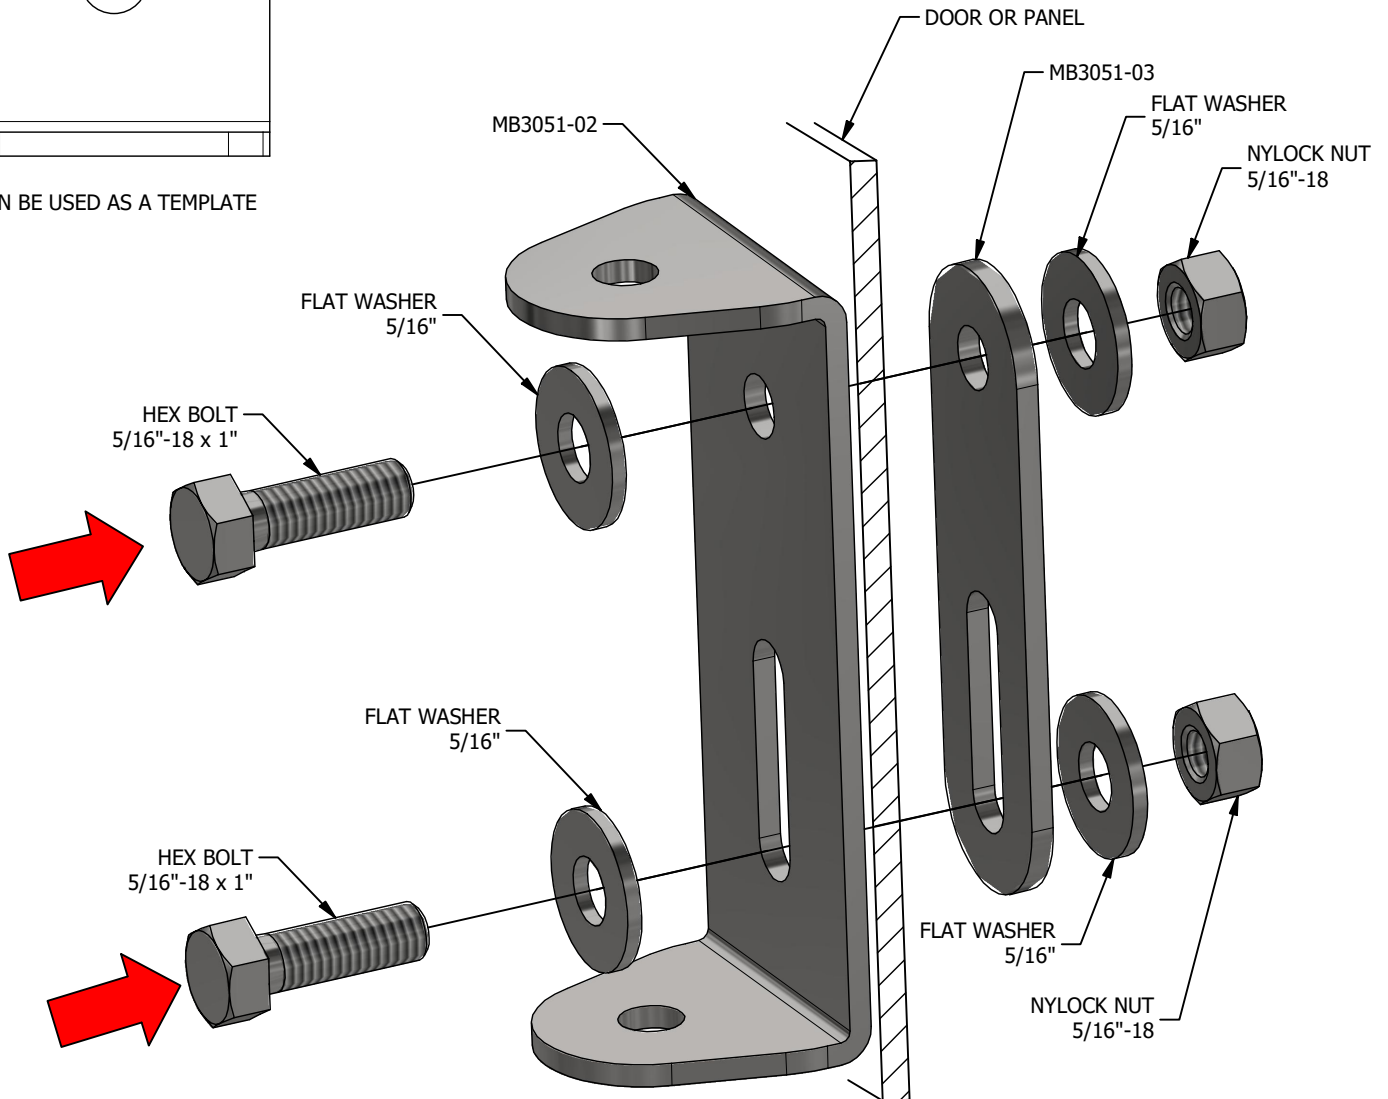

MB3051 - Installation Instructions Universal Mirror Brackets

