

MOTOBILT

ODYSSEY/DIEHARD PLATINUM BATTERY BOX 34-78

Installation Jeep TJ/LJ

Part number MB5002

We'd like to thank the author of this install, Charles Hansen, for sharing.





#2- Your support will look similar,
Metalcloak support shown

#3- Remove Factory Clip on barrel nuts



#4- Place Motobilt Battery Tray in desired location




#5- Once in position, Mark location of barrel nuts with a marker

Can also use Motobilt location if wanted






#6- Drill these locations

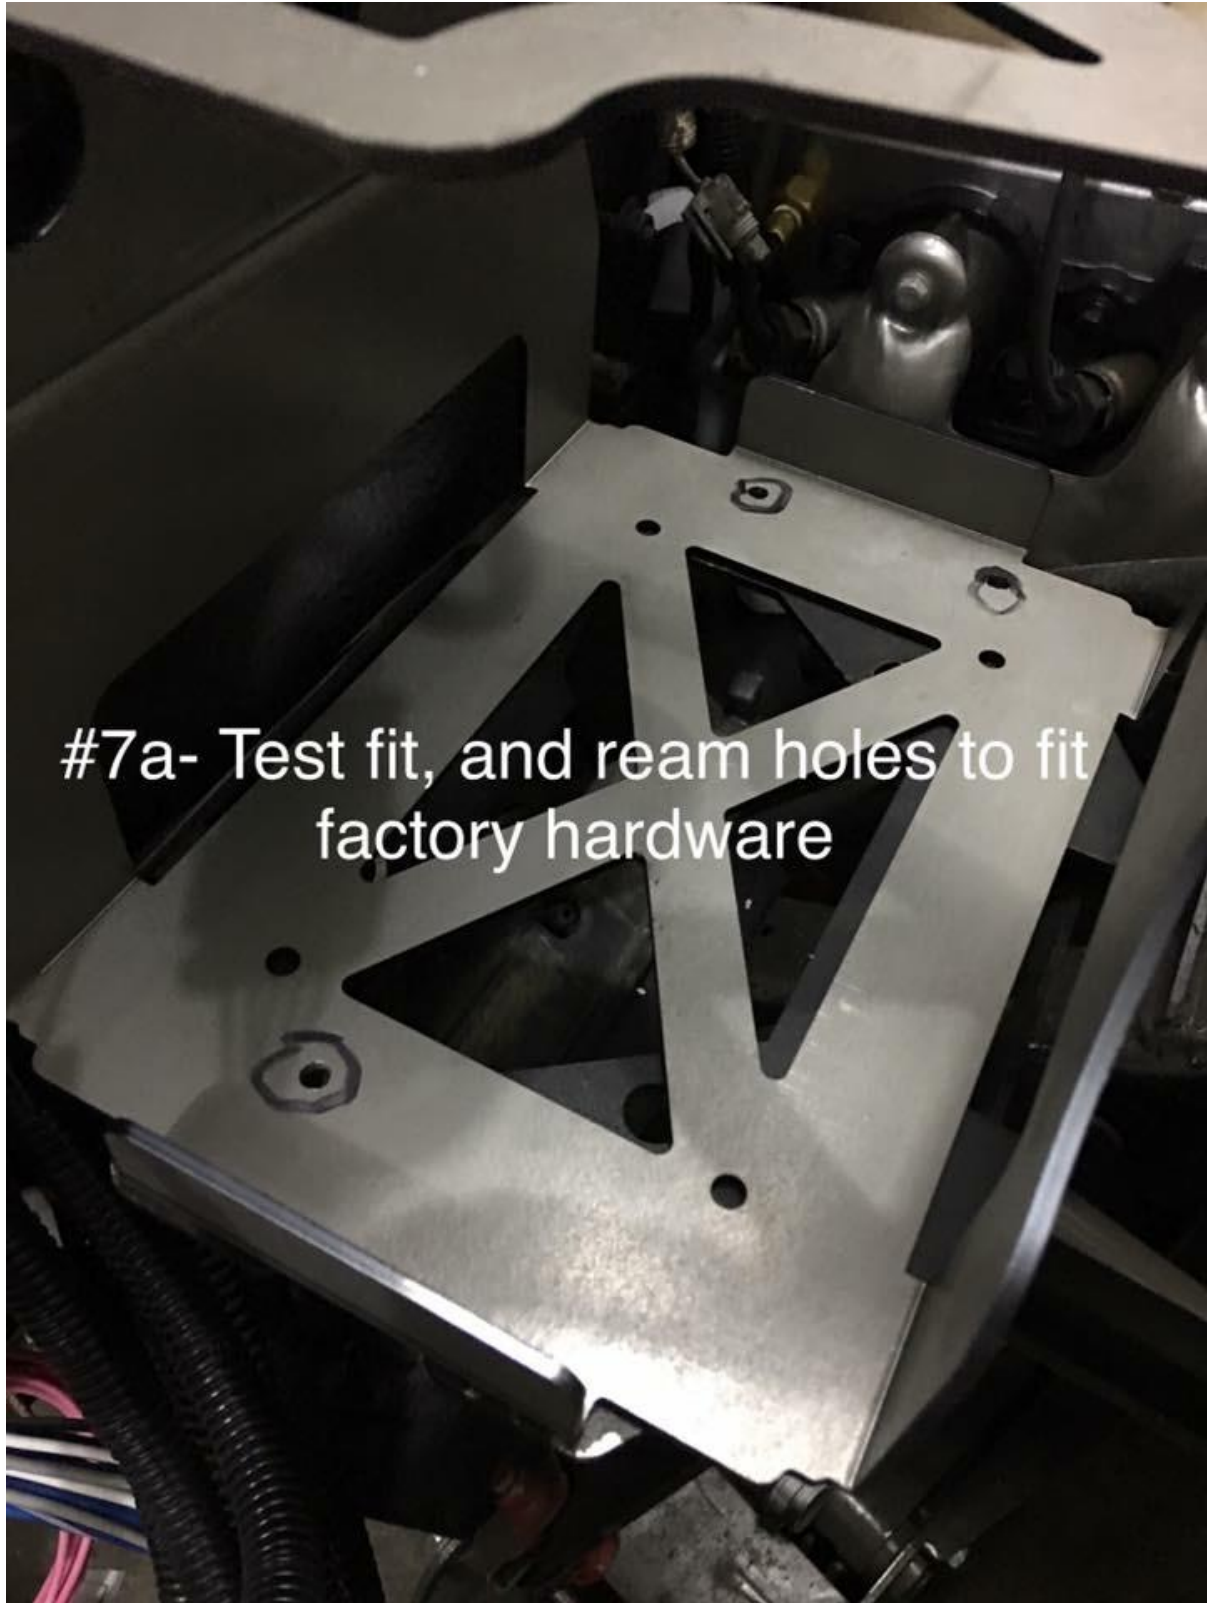

#7a- Test fit, and ream holes to fit factory hardware

#7b- Ream holes to fit factory hardware



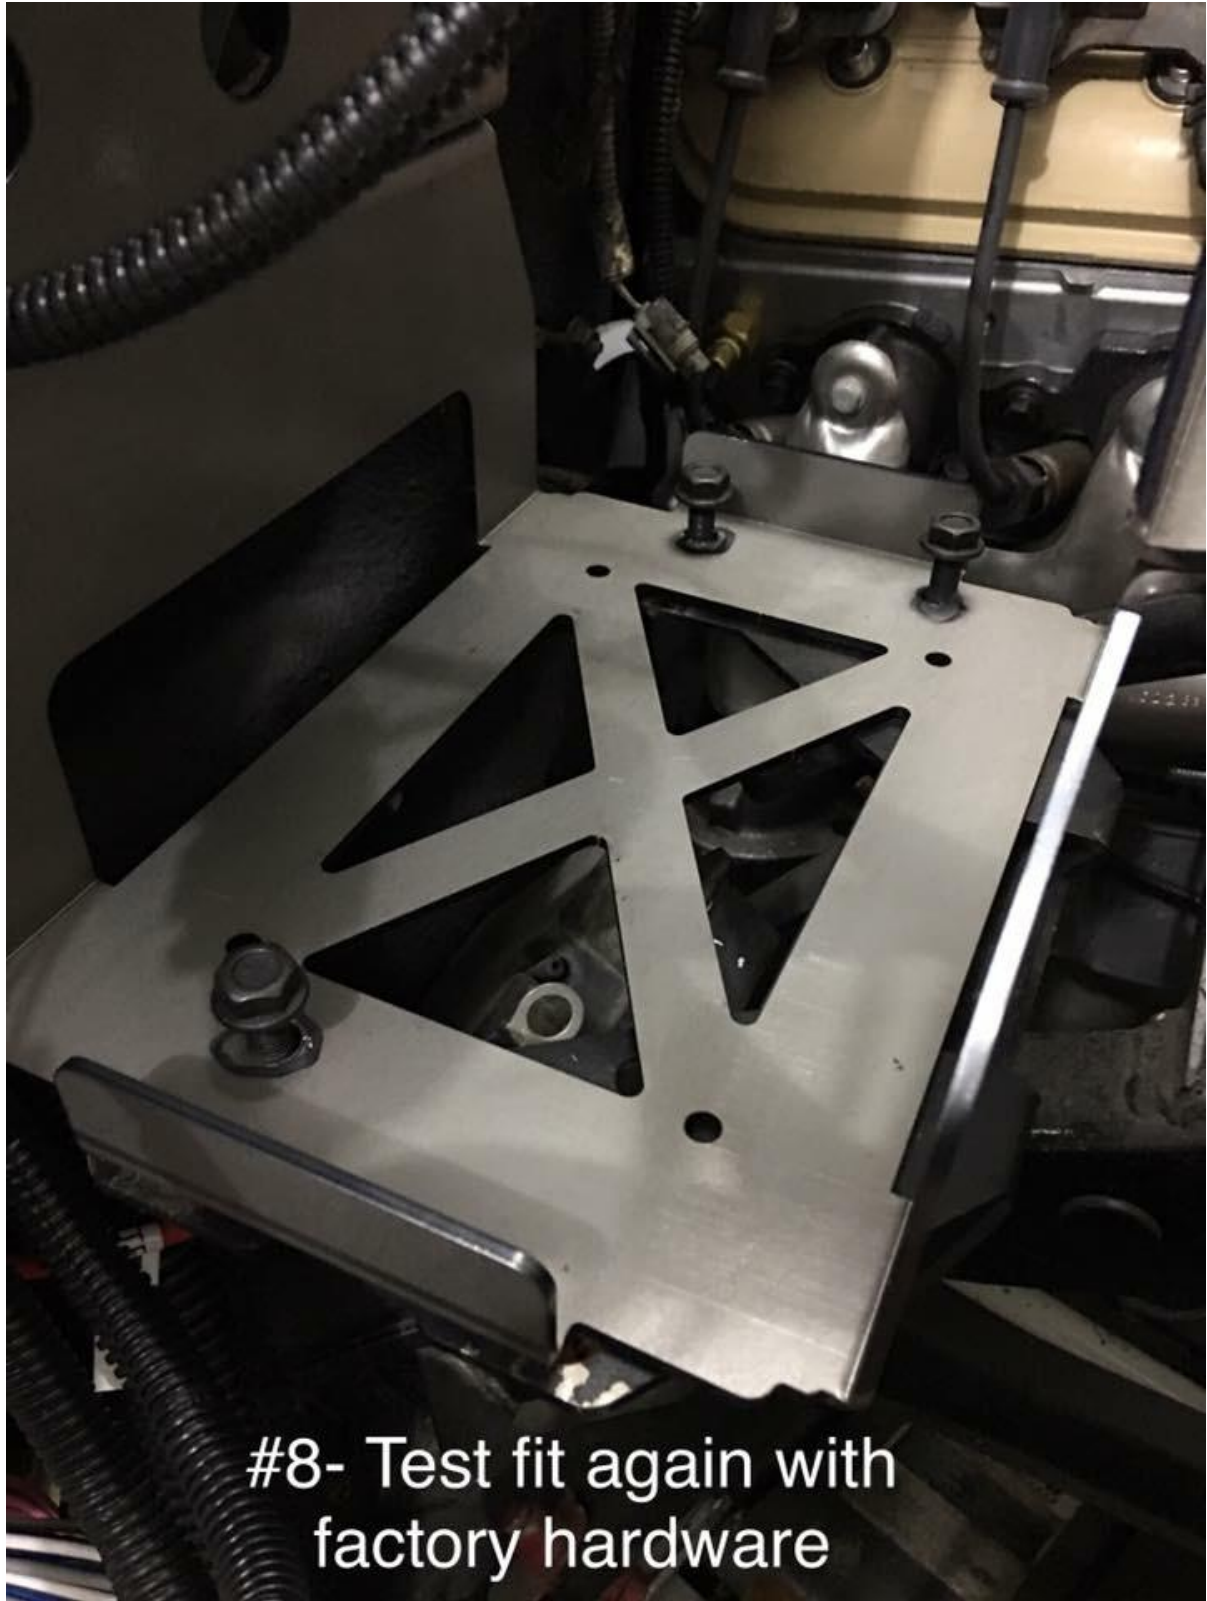

#8- Test fit again with factory hardware




#9- I wanted another bolt, so drilled out support bracket and did previous steps



#10- Replaced hardware with
Stainless Steel M8-1.25
BHCS bolts

DONE!
Just
drop in
your
new
battery!

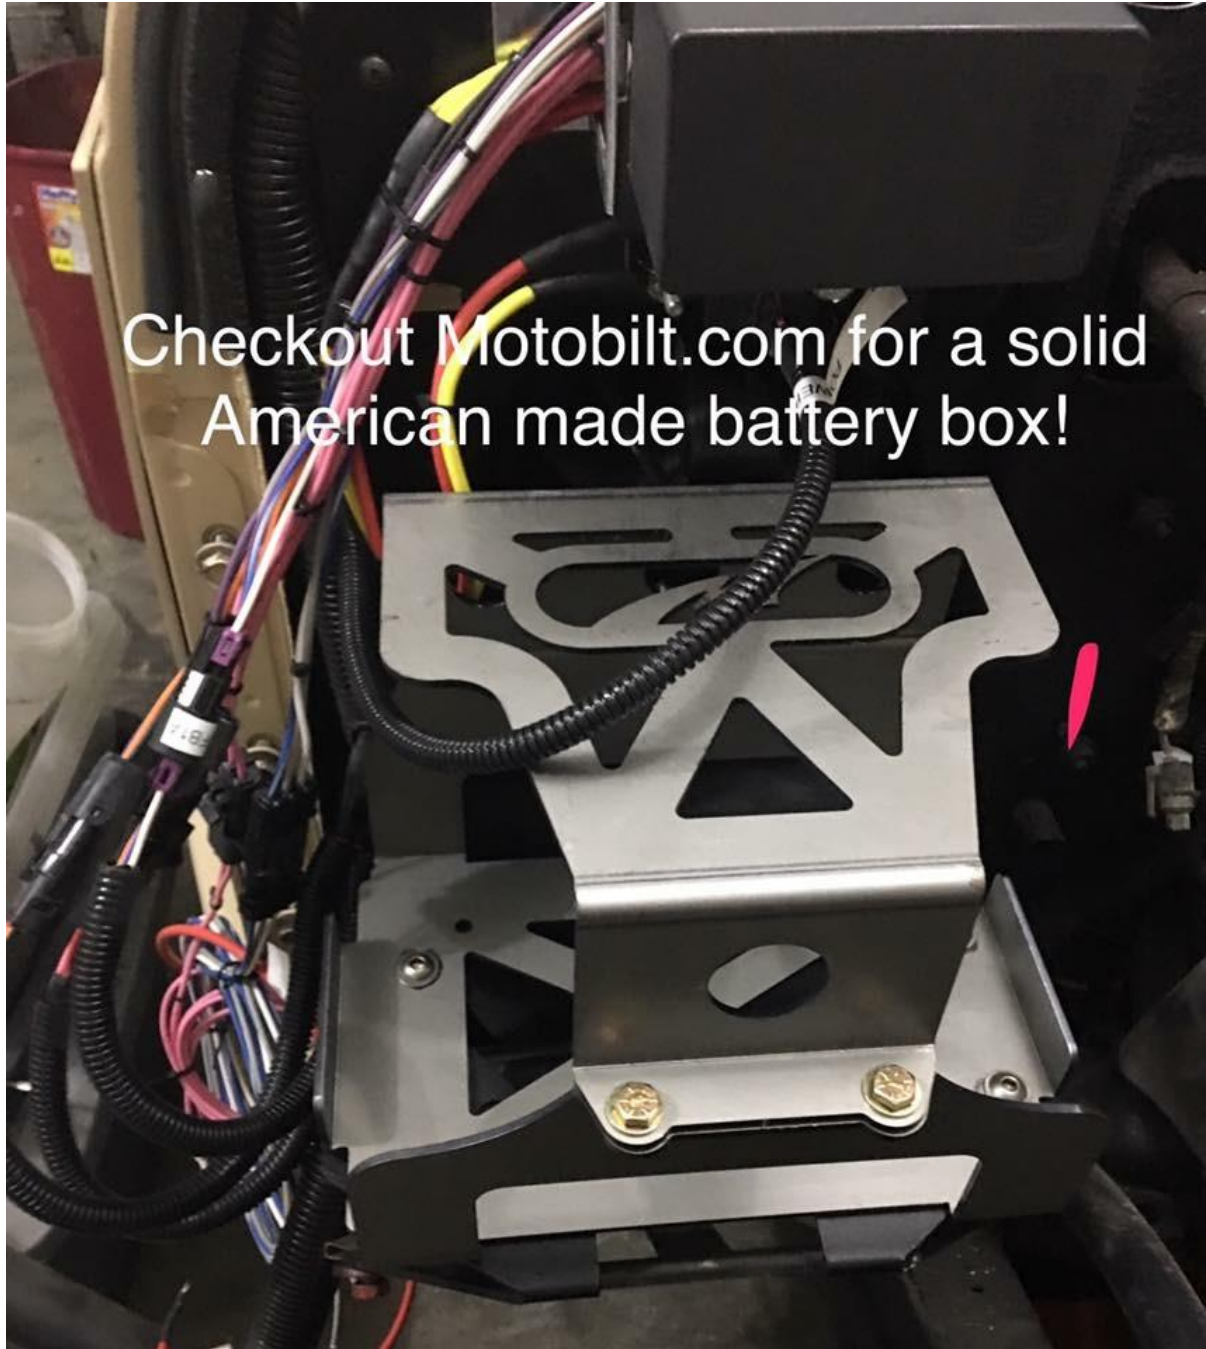

Checkout Motobilt.com for a solid American made battery box!

