




**WALL MOUNTED BATH SHOWER MIXER
INSTALLATION INSTRUCTIONS**

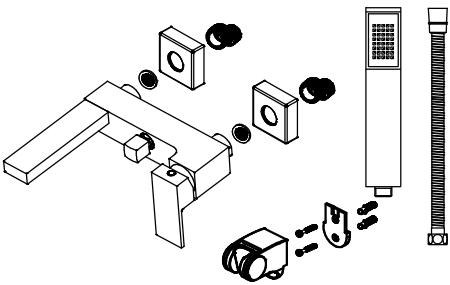


Step 1: Disassemble all the parts according to the figure above.

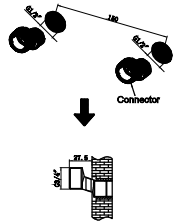

Step 2: Apply suitable thread sealant (not supplied) and attach the offset connectors to the pipework in the wall, making center distance of 150mm, 27.5mm from the wall.

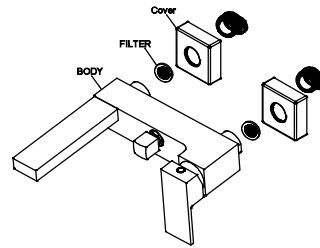


Step 3: Attach the covers against wall, place filters into the inlets. Then fix mixer onto the wall with spanner, checking for leakage.

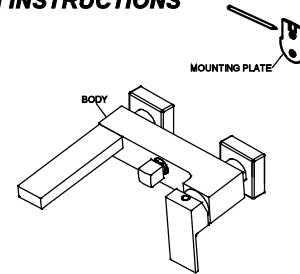

Step 4: Place mounting plate on a proper position of the wall, make markings.



Step 5: Drill a hole of 6mm with depth of 40mm, tap in wall plugs. Fit the mounting plate on the wall with screws. Finally fit handset holder against wall.

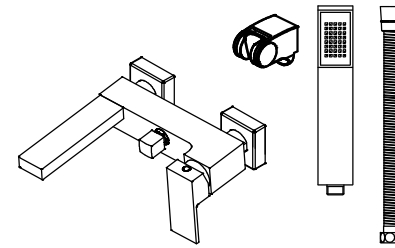

Step 6: Connect shower hose and handshower.