




## SQUARE SHOWER KIT INSTALLATION INSTRUCTIONS

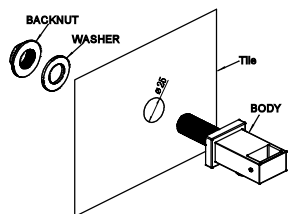


**Step 1:** Select a proper position on the tile and drill a hole of  $\varnothing 25\text{mm}$  with depth of 110mm. Fix the valve into the wall. Mount the body with washer and backnut. Connect inlet with valve body and check for leakage.

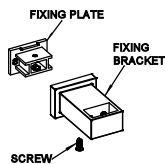

**Step 2:** Take apart the fixing plate and fixing bracket by loosening the screw.

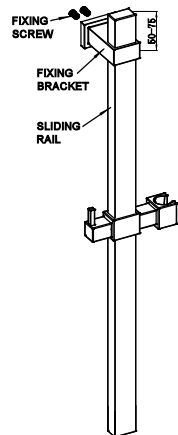


**Step 3:** Place the fixing bracket at the position of 50-75mm away from the top end of sliding rail, and then lock it with the screws inside the fixing bracket by a screw driver.

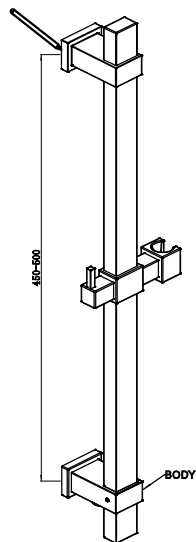


**Step 4:** Place the sliding rail into the valve body, adjust the height of the rail between 450mm and 500mm and make markings on the wall.



**Step 5:** Put the fixing plate in the center of the marking, then drill 2 holes of  $\varnothing 6\text{mm}$  with depth of 40mm. Tap in wall plugs, mount the fixing plate with screws.

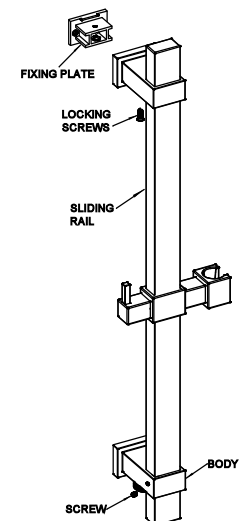

**Step 6:** Place the sliding rail into the valve body, then mount the sliding rail onto the fixing plate. Finally mount the sliding rail with locking screws.

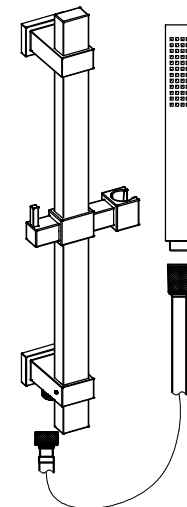

**Step 7:** Connect the shower hose with the handshower and the elbow.