

ROUND SHOWER KIT INSTALLATION INSTRUCTIONS


FIXING SCREW

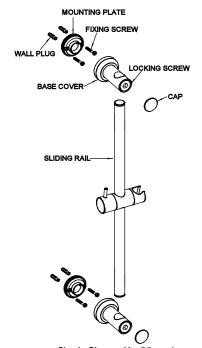

Step 1: Disassemble all the parts according to the figure above.

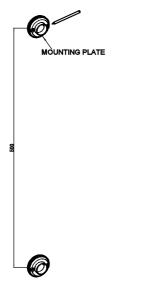


Step 2: Place mounting plates on a proper position of the wall and make markings.

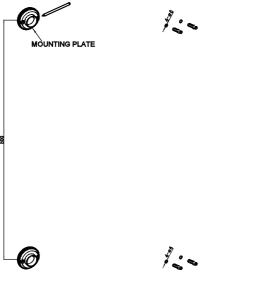


Step3: Drill two holes of Ø6mm with depth of 40mm. Tap in wall plugs.



Step4: Fix mounting plates on the wall with screws.

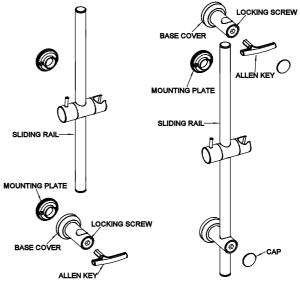

Step5: Fix bottom base cover onto the mounting plate, place sliding rail into base cover in a proper position, then turn the locking screw with allen key to tighten.

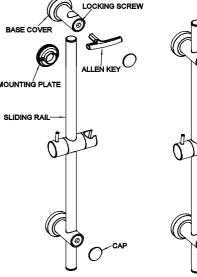

Step6: Place top base cover into sliding Step7: Connect shower hose and handshower.

rail and fix base cover against mounting plate. Turn the locking screw with allen key to tighten. Finally apply the caps.