
MFQBS0018 P SHAPED SHOWER SCREEN 760mm x 1500mm INSTALLATION MANUAL

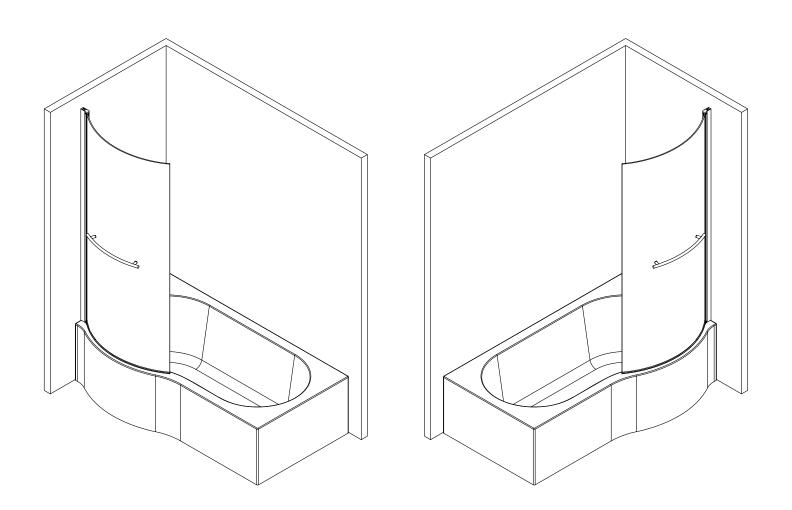

Left-handed

Right-handed


Reversible to suit both left-and right-handed baths

INSTRUCTIONS FOR ASSEMBLY, INSTALLATION AND USE

TABLE OF CONTENTS

Screen specification and contents	3
Tools Required (Not supplied)	4
Pre-installation and Technical Requirements	5
Important Safety Notes and Aftercare Instructions	5
Installation	6-13

Screen Specification and Contents

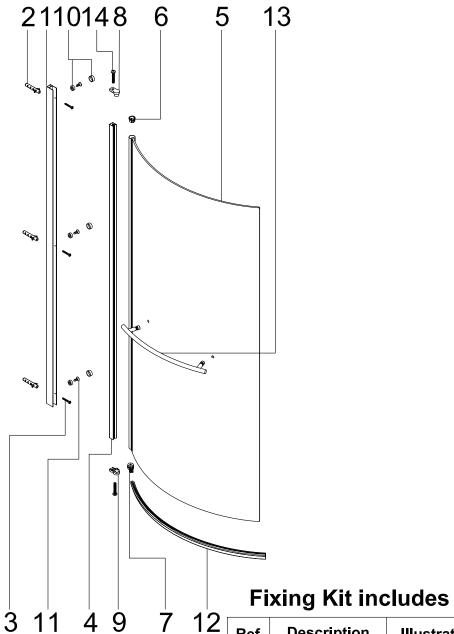

Ref	Description	Illustration	Qty
1	WALL PROFILE	n n	1
4	VERTICAL PROFILE		1
5	GLASS SCREEN		1
12	HORIZONTAL SPLASH SEAL L=735mm		1
13	TOWEL BAR		1

. ixiiig ixit iiiolaaco				
Ref	Description	Illustration	Qty	
2	Expandable wall plug	Carried States	3	
3	stainless steel screws: 3.9*35		3	
6	top plastic barrel		1	
7	bottom plastic barrel (with 2 raised lugs)		1	
8	top bracket		1	
9	bottom bracket		1	
10	screw washer & screw cap		3	
11	stainless steel screws: 3.5*10	38	3	
14	stainless steel screws: 3.9*25		2	
15	3mm Drill bit		1	
16	2mm Allen key		1	


Tools Required (Not Supplied)

TOOLS REQUIRED(NOT SUPPLIED)

When you're ready to start, make sure that you have the parts listed and the following tools to hand, plenty of space and a clean dry area for assembly.

Two people are needed. Please note: although these instructions are comprehensive, we always recommend that a technically competent installer should undertake the installation.



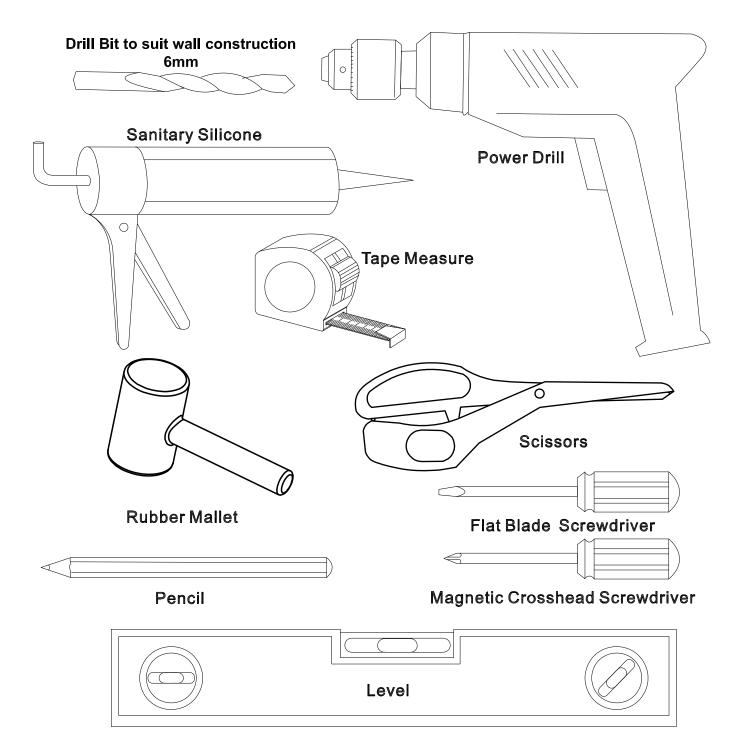

PRE-INSTALLATION AND TECHNICAL REQUIREMENTS


- -All dimensions are shown in millimeters, except where otherwise indicated.
- -Ensure that the screen set is fitted to a level bathtub and vertical wall surface.
- -Please note: The wall fixings included with this product are suitable for solid walls only. Plasterboard or stud walls may require specialist fixings (not supplied).
- -Due to the possibility of residual spray, the area around the outside of the bathtub tray should be tiled, or made otherwise water resistant.

IMPORTANT SAFETY NOTES


- -Please handle all glass with care, avoiding knocks and shock loading to all sides and edges. Safety glass cannot be reworked.
- -Care should be taken when drilling into walls to avoid hidden pipes or electrical cables.


AFTERCARE INSTRUCTIONS

- -Soap and water will be adequate to clean the glass. A glass cleaner can be used if required.
- -In hard water districts, insoluble lime salts may be deposited on the glass. If this deposit is allowed to build up it becomes increasingly difficult to remove and looks unsightly. Regular cleaning will minimize this effect.

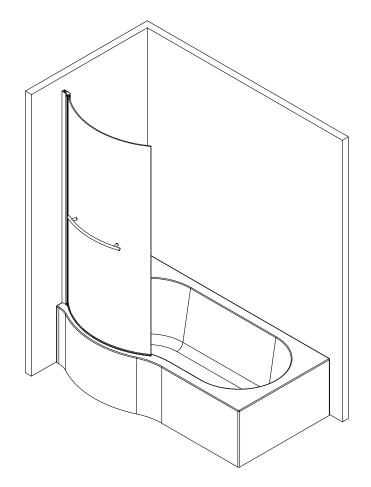

INSTALLATION

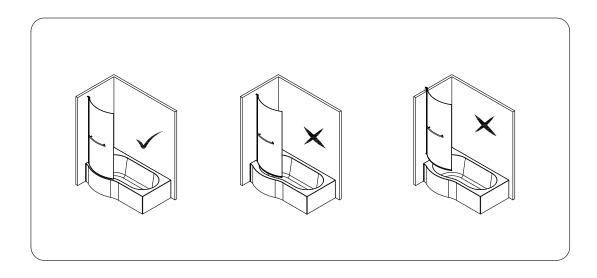

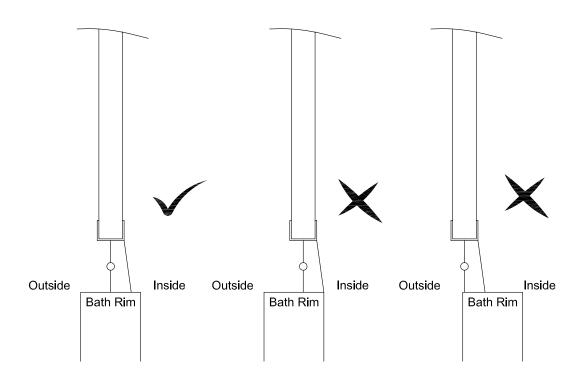

Please ensure that the screen is fitted in the center of the rim of the bath Note:Failure to install the screen as shown with the lower bracket resting on the bath edge can result in excessive weight on the brackets causing them to fail.



