

- Where Leg Cups are not factory fitted, proceed as follows:
 - With the glue supplied, apply a pea size amount of glue to the centre of the recessed foot location.
 - • Place the foot cup into the recessed location and gently press until the glue can be seen squeezing around the cup. Repeat this for the other locations.
 - Leave for a minimum of 3 hours to cure
 - Push fit the adjustable legs into bonded cups (a).
 - Adjust the height of the tray by winding the lower part of the leg to match the height of the front panel (b).
 - If required clip the panel bracket's provided onto the legs that will be supporting the panel (b).
 - If required fit the support blocks supplied between legs (c).
 - Adjust the panel bracket's so that the panel is flush with the front face of the tray (d).
 - The Matki panel(s) are supplied extra long and these can be trimmed to size if needed using a fine toothed hacksaw (e). • Align the Velcro pads supplied with the panel bracket's and fit the panel.
 - (a) ***** FOR TRAYS WITHOUT FACTOR FITTED LEG CUPS Adjustable Leg Leg Cup P (\mathbf{b}) Pan \frown Bracke

In case of query, quote order reference and date code stamped on pack label. Do not dispose of packaging.


legs, all legs must be adjusted to give firm support to the shower tray.

The shower surround should be fitted as per installation instructions and dimensions.

complete film when installation has been completed

instructions to the end customer.

Under no circumstances use cleaners with a pH level exceeding 8.

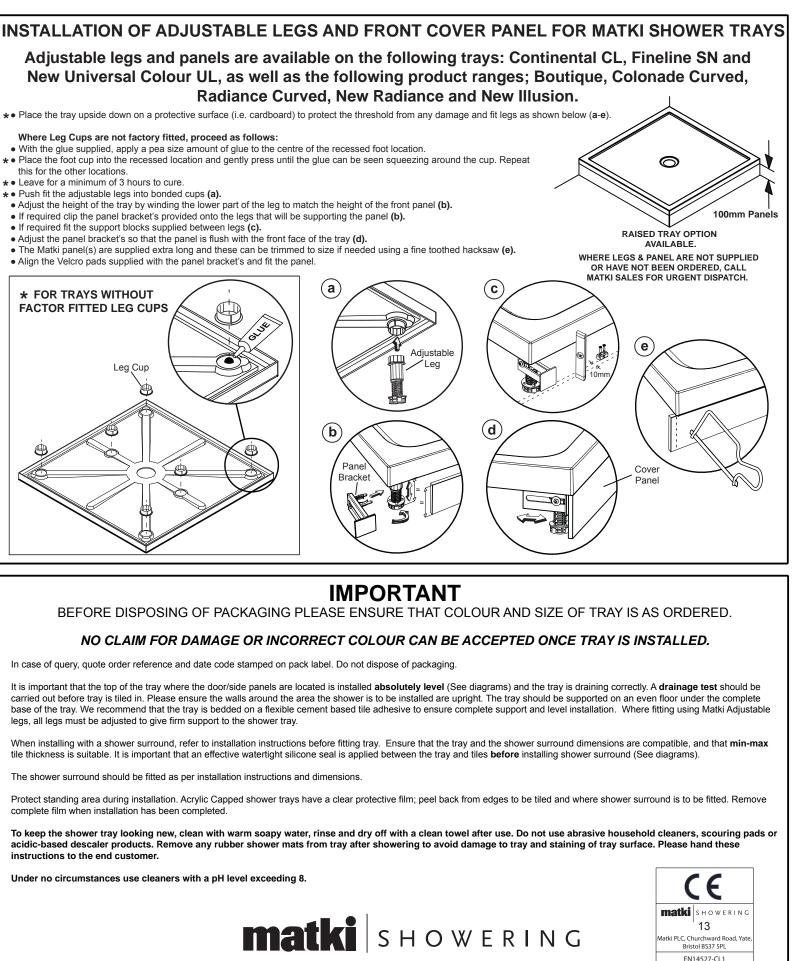

Matki Plc, Churchward Road, Yate, Bristol BS37 5PL Fax: 44(0) 1454 328821 Tel: 44(0) 1454 328816 (Customer Services) Email: techsupport@matki.co.uk

1084 AF 07/15