
## Rienza 1300mm Worktop



**Special Notes** 

Furniture units should be installed in a bathroom with adequate ventilation. Mounting kit included. Always use appropriate fixings to suit the type of wall.

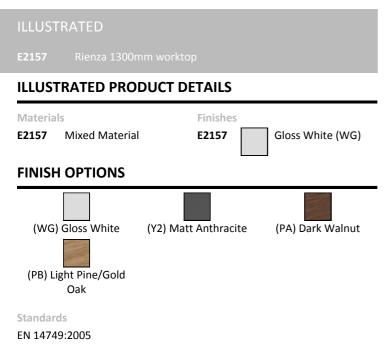

