


How to Re-spool the Masonry Line:

1. While the batteries are in the Unit, but the cover is off (so you can take out the batteries right away), darken completely and draw out the line by providing hand tension until Unit stops.
2. Then, either remove batteries or simply unplug one of the pins (red or black, 1A or 2A).
3. Follow the pattern on the green circuit board from the bottom up of the panel through all of the line diagrams.
4. Now, tie a little loop on the end of your line and hook the screw on the right hand side of the spool. Make sure to tie a big knot and a loop at the opposite end where the door will be hooked. You can use a small bead above the knot.
5. Replace batteries or black or red wire and let the line begin to move, then begin adding some tension and guiding the line back up until the bead/knot stops the unit.
6. You are now ready to hang the door and test the unit again by darkening it and check for closing and opening.

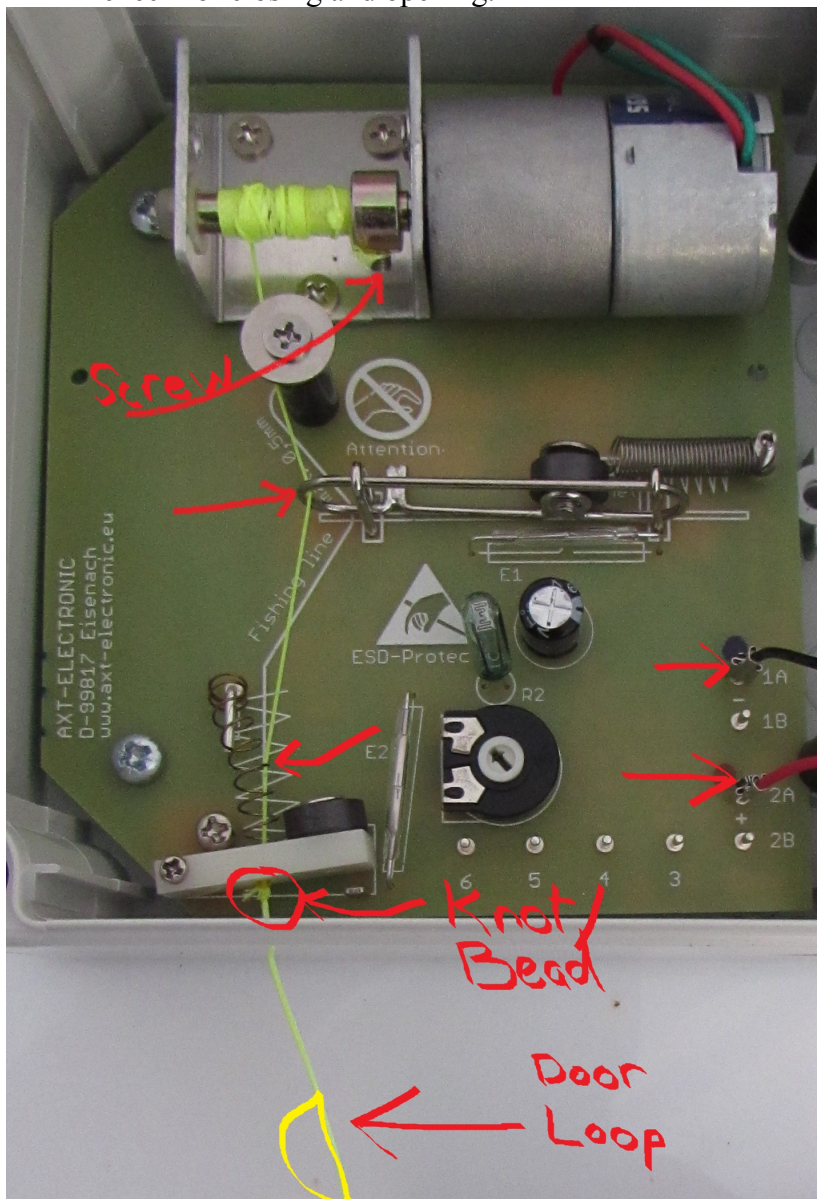

Keys to a Re-Spool:

Tie a small loop on the spool screw.

Follow the fishing line diagram.

Go through the spring.

Place a small bead and a tie a knot, or tie a big knot to stop at white pedal.

Tie a door loop.

Note: Do not lubricate the pull cord