



# Luxatemp® Ultra


Quick guide for the fabrication of temporaries

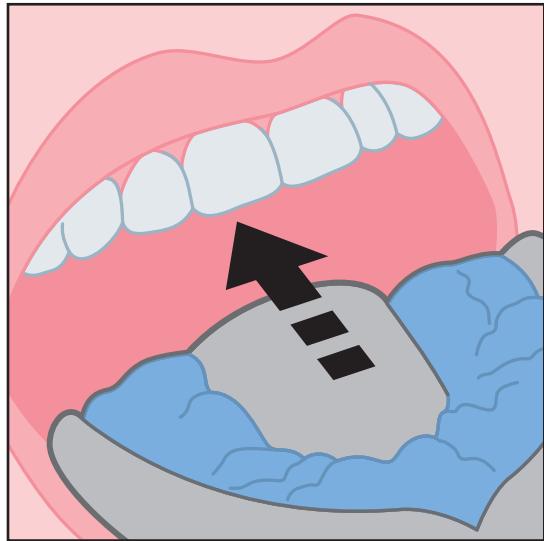


Impression taking

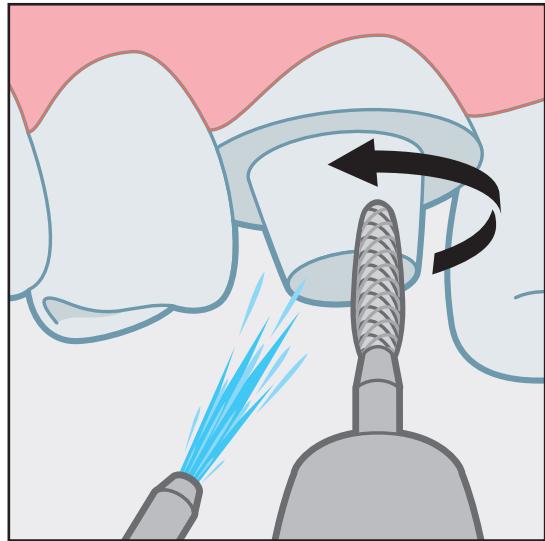

Preparation

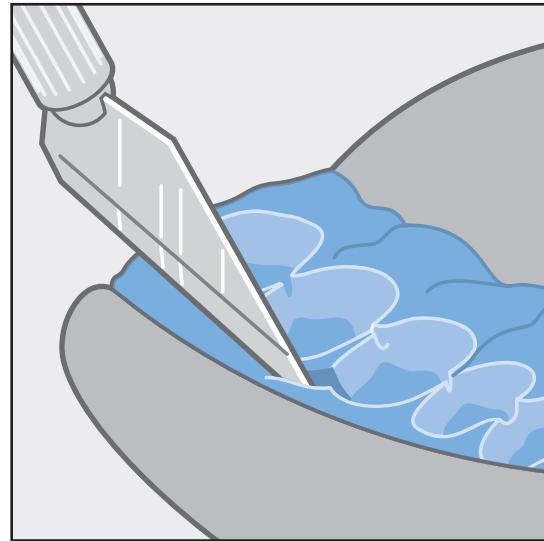


Optimization of the impression

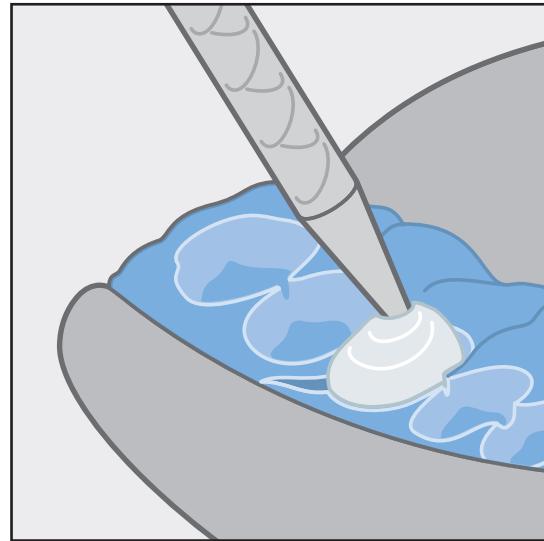


Filling and insertion  
 $\text{⌚️ } 0 - 45 \text{ s}$




Removal  
 $\text{⌚️ } 1:30 - 2:20 \text{ min}$

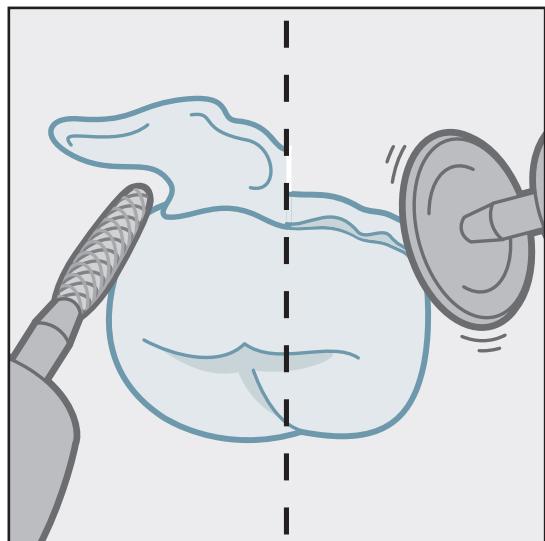


Shaping  
 $\text{⌚️ from } 5 \text{ min}$

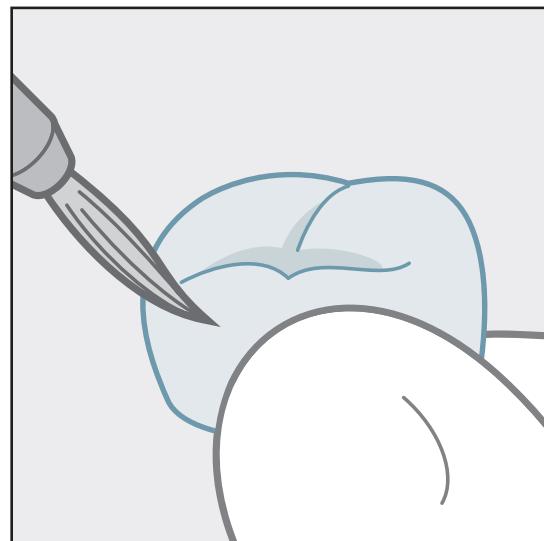

Surface finishing

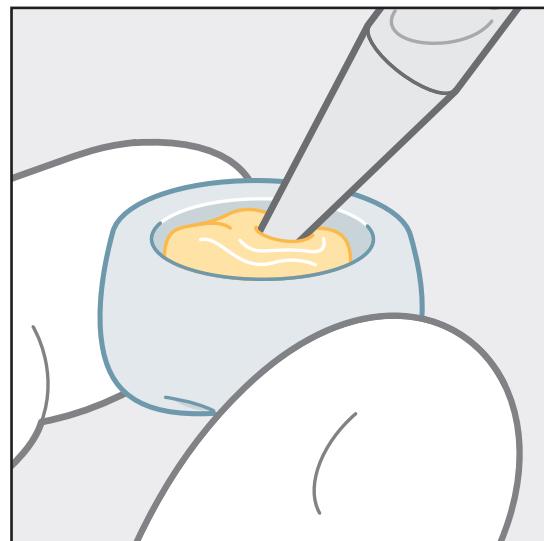

Temporary cementation

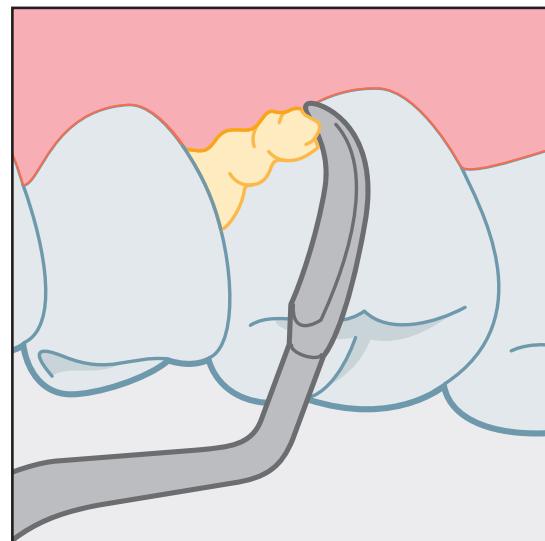

Insertion and clean-up