
SKYRIKA


for iPhone 7 Plus and 8 Plus

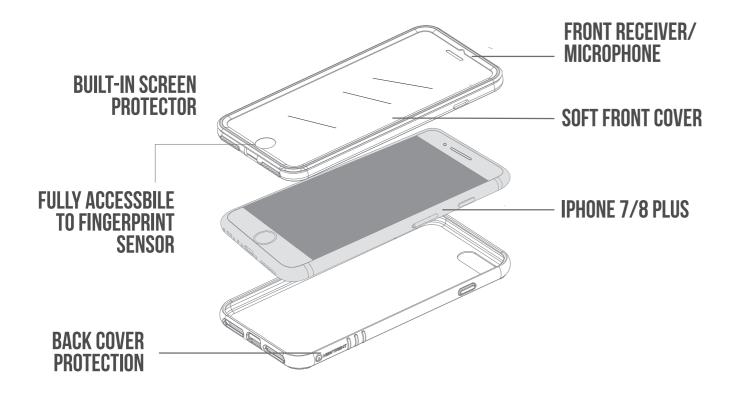

HOW TO INSTALL

NOTE: PEEL OFF ALL PREVIOUSLY INSTALLED SCREEN PROTECTORS AND FILMS TO PREVENT IMPROPER FIT.

Step 1: Peel off the soft outer case from inner case. Start with the corners.



Step 3: Re-insert the inner case with the iPhone 7/8 Plus back into the outer soft case. Make sure to align the respective ports.







New Trent Inc. San Jose, CA USA Designed in California Made in China

Any Needs, Contact Us:

www.newtrent.com/contact

Apple, the Apple logo, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. Other company and product names mentioned herein are trademarks of their respective companies.