

# Kendon Stand-Up™ TRAILERS & LIFTS

Kendon Industries, LLC. 2990 E. Miraloma Ave., Anaheim, CA 92806


## L E D TAIL LIGHT KIT

### INSTRUCTIONS

FITS ALL KENDON STAND-UP™ TRAILERS, ALSO K600, K400

TOOLS REQUIRED: WIRE STRIPPER, CUTTER AND CRIMPER. 7/16 OR ADJUSTABLE WRENCH

PARTS LIST: L E D TAIL LIGHTS, LEFT AND RIGHT, LEFT SIDE TO ILLUMINATE LICENSE PLATE. 2 EA., BLACK PLASTIC SPACER BLOCK. 4 EA., CARRIAGE BOLTS. 6 EA., BUTT CONNECTORS. 4 EA., FLANGE NUTS. 2 EA., WIRE TIE.

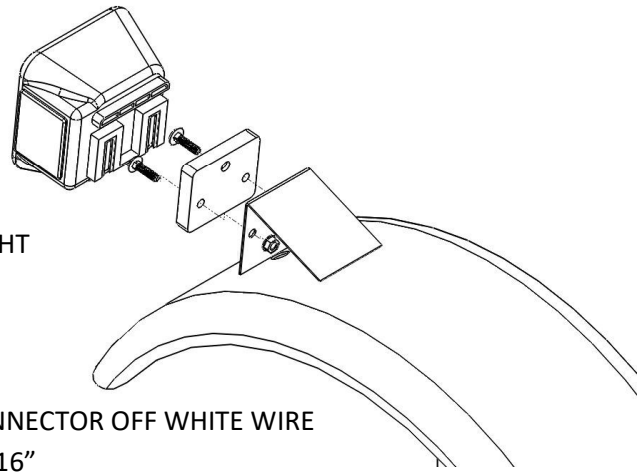

NOTE: LEFT TAIL LIGHT HAS LICENSE PLATE LIGHT IN UNDER SIDE OF LIGHT

1. REMOVE OLD TAIL LIGHT. (7/16 WRENCH)
2. CUT WIRES AT THE BACK OF OLD TAIL LIGHT AND CUT RING CONNECTOR OFF WHITE WIRE
3. TRIM WIRES TO SAME LENGTH AND STRIP INSULATION BACK 5/16"
4. FEED WIRES THRU TOP HOLE OF TAIL LIGHT FENDER BRACKET AND PLASTIC SPACER BLOCK
5. SLIDE CARRIAGE BOLTS INTO SLOTS OF L E D TAIL LIGHT
6. CRIMP WIRES TO CONNECTORS. MATCH COLORS
7. GATHER WIRES TOGETHER TO FIT IN CAVITY AND SECURE WITH WIRE TIE
8. ROUTE WIRES INTO CAVITY OF PLASTIC SPACER
9. POSITION CARRIAGE BOLTS IN L E D LIGHT THROUGH HOLES IN SPACER AND FENDER LIGHT BRACKET
10. USE AND TIGHTEN NEW FLANGE NUTS

If you have any questions please give us a call and thank you for choosing Kendon Stand-Up™ Trailers and Lifts

ph. 714-630-7144, 800-847-8618 [www.kendonusa.com](http://www.kendonusa.com)