

Item Number

RAM-VB-129 & RAM-VB-129-SW1

RAM No-Drill™ Seat Bases
RAM Mounting Systems**COMPATIBLE VEHICLES:**

DODGE CHARGER (2005, 2011-2014)
DODGE CHARGER POLICE (2005, 2011-2014)
DODGE MAGNUM (2005)
DODGE MAGNUM POLICE (2005)

DODGE CHALLENGER (2011)
DODGE SPRINTER VAN (2007-2010)
FREIGHTLINER SPRINTER VAN (2010-2011)
MERCEDES SPRINTER VAN (2010-2013)

SPECIFICATIONS**Placement**

Passenger side on horizontal section of seat rail. For Sprinter, between seat cushion and seat frame box passenger side front of seat

Drilling Required

No - uses existing seat bolts

Seat Configuration

Bucket

Construction/Finish

Steel/Black Powdercoat

Dimensions

A = 19.375" B = 7.125"
Hole Center = 16.5"

Pole or Pedestal

Purchased Separately

Weight = 4.9 lbs.

Features

Installs with no drilling required
Minimal intrusion into passenger leg space

Important Note


In 2005 and 2011 model year vehicles, the seat leg bolts may be tied to the air bag system. Tampering with these may result in disabling the air bag system and causing a severe safety hazard. The installation of this product into these vehicles should only be done by a Dodge factory authorized technician or Up-fitter familiar with Police, Fire, and Rescue vehicles and their fleet use.

RAM Mounting Systems

8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RAM-VB-129-SW1

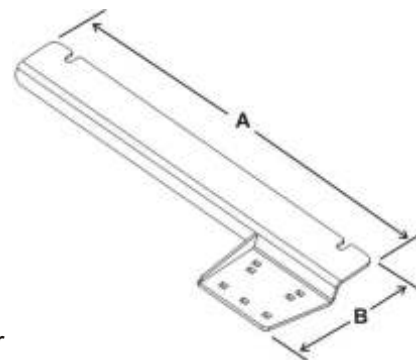

RAM-VB-129



RMR-INS-VB-129

Item Number

RAM-VB-129 & RAM-VB-129-SW1

RAM No-Drill™ Seat Bases

RAM Mounting Systems

COMPATIBLE VEHICLES:

DODGE CHARGER (2005, 2011-2014)
DODGE CHARGER POLICE (2005, 2011-2014)
DODGE MAGNUM (2005)
DODGE MAGNUM POLICE (2005)

DODGE CHALLENGER (2011)
DODGE SPRINTER VAN (2007-2010)
FREIGHTLINER SPRINTER VAN (2010-2011)
MERCEDES SPRINTER VAN (2010-2013)

INSTALLATION INSTRUCTIONS

If you are using a RAM Tele-Pole system, attach the lower female tube prior to installing the no drill base in the vehicle. It is suggested to install the mounting hardware so the rubber nut caps are on the top side.

1. Loosen the seat leg bolts on the passenger side that hold the seat to the floor pan. These are located at the front center of the seat tracks. It is not always necessary to remove these. For late model 2013 and new 2014 vehicles, use the longer seat leg bolts provided. For earlier model years, only loosen the bolts enough to clear the no drill base.
2. Once the bolts are loose, gently lift the front of the seat to create enough space for the base to fit between the seat frame legs and floor board.
3. Align the slots with the seat leg bolts and slide the base under the legs.
4. Once the base is in position, fully tighten the seat leg bolts to secure the no drill base in place.

For installation into Vans, the slots are not used but the holes instead.

1. Remove the two seat bolts holding the seat tracks to the seat frame box.
2. Place the base between the seat tracks and seat frame box and align the holes. Replace the seat bolts and fully tighten.



RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-129