# RAM No-Drill ™ Seat Bases

RAM Mounting Systems

Vehicle base for the

FORD TRANSIT CONNECT (2010-2013) DODGE GRAND CARAVAN (2008-2009, 2012-2014) CHRYSLER TOWN & COUNTRY (2008-2009, 2012-2013)

#### **SPECIFICATIONS**

**Placement** Passenger side between seat track & seat frame.

Drilling Required No - uses existing seat bolts

Seat Configuration Bucket

Construction/Finish Steel/Black Powdercoat

Pole or Pedestal Purchased Separately

**Weight** 4.5 lbs.

**Dimensions** A = 19.875", B = 7.25", C = 2.125" Hole Center = 17" and 18.25"

### **Features**

Installs with no drilling required Minimal intrusion into passenger leg space

## <u>Misc.</u>


Durable construction Lifetime warranty

#### **RAM Mounting Systems**

8410 Dallas Ave S Seattle, WA 98108 Phone: (206) 763-8361 Fax: (206) 763-9615 www.rammount.com support@rammount.com



RAM-VB-175-SW1

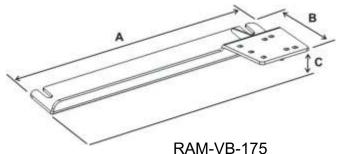

RAIVI-VD-175



RMR-INS-VB-175

This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.

RAM Mounting Systems

## Vehicle base for the

# FORD TRANSIT CONNECT (2010-2013) DODGE GRAND CARAVAN (2008-2009, 2012-2014) CHRYSLER TOWN & COUNTRY (2008-2009, 2012-2013)

#### INSTALLATION INSTRUCTIONS

- 1. Move the passenger seat back to its rearmost position and loosen the front seat rail nuts with a 15MM wrench.
- 2. Gently lift the front of the seat to create a small gap between the seat frame and seat track.
- 3. Align the slots in the base with the seat bolts and slide the base into place. Press the No-Drill<sup>™</sup> base as far in as possible so that the back of the slots engage the seat bolts. The pedestal platform should be near the console.
- 4. Re-tighten the nuts to secure the No-Drill<sup>™</sup> base.

Special note: Once the base is installed, passenger side front seat travel will be limited. In order to collapse and store the mid row seat behind the front passenger seat, the front passenger seat must be moved all the way forward. With the base installed, this will not be possible. The mid row seat should be left up or stowed, whichever it to be the most common orientation, prior to the installation of this product.



This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.