

Item Number
RAM-VB-179

RAM No-Drill™ Seat Bases

RAM Mounting Systems

Vehicle base for the **TOYOTA YARIS (2008-2009)** **TOYOTA PRIUS C (2014)**

SPECIFICATIONS

Placement

Passenger side on the floor, under front seat

Drilling Required

No - uses existing seat bolts

Seat Configuration

Bucket

Pole or Pedestal

Sold Separately

Construction/Finish

Steel/Black Powdercoat

Weight

6 lbs.

Dimensions

A = 20.31", B = 9.375", C = 1.375"

Hole Centers = 18.5625"

Features


Installs in minutes with no drilling required
Low profile keeps mount away from passenger leg space
This product will reduce the amount of seat travel once installed.

Misc.

Rock solid construction
Lifetime warranty



Shown In Use

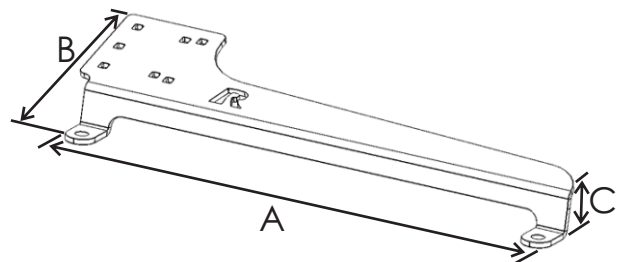

RAM-VB-179

RAM Mounting Systems

8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-179

Item Number
RAM-VB-179

RAM No-Drill™ Seat Bases

RAM Mounting Systems

Vehicle base for the **TOYOTA YARIS (2008-2009)** **TOYOTA PRIUS C (2014)**

INSTALLATION INSTRUCTIONS

Yaris

1. Move the passenger seat back to its rearmost position and remove the front seat rail bolts on the passenger side.
2. Without moving the seat, place the No-Drill™ base over the front of the seat frame legs.
3. Align the holes in the base with those of the seat frame legs. The pedestal platform should be near the console.
4. Re-install the seat bolts and fully tighten.

Prius C

1. Move the passenger seat back to its rearmost position and remove the front seat rail bolts on the passenger side. This requires an E-10 socket. If plastic trim is covering this hardware, gently remove it and store for later use should the no drill base be removed.
2. Without moving the seat, place the two supplied 3/4" steel tube stand offs over the threaded holes. Next, place the No-Drill™ base over the stand offs.
3. With the holes aligned over the seat frame legs, start the thread of the supplied hex bolts into the threaded holes in the floor pan. The pedestal platform should be near the console.
4. Re-install the seat bolts using a 17mm socket and fully tighten. The pedestal platform will touch the plastic of the center console.

RAM Mounting Systems
8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RMR-INS-VB-179