
RAM® WEDGE BASE ASSEMBLY GUIDE

PARTS INDEX

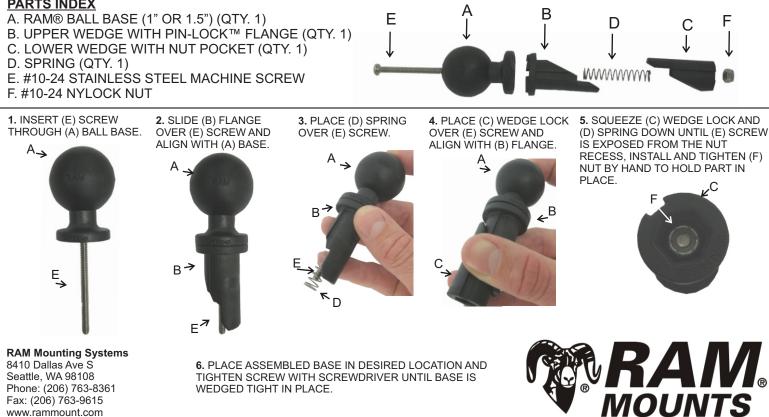

This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.

RAM® WEDGE BASE ASSEMBLY GUIDE

E

PARTS INDEX

A. RAM® BALL BASE (1" OR 1.5") (QTY. 1) B. UPPER WEDGE WITH PIN-LOCK™ FLANGE (QTY. 1) C. LOWER WEDGE WITH NUT POCKET (QTY. 1)

В≯

E

D. SPRING (QTY. 1)

support@rammount.com

- E. #10-24 STAINLESS STEEL MACHINE SCREW
- F. #10-24 NYLOCK NUT

1. INSERT (E) SCREW THROUGH (A) BALL BASE.



2. SLIDE (B) FLANGE OVER (E) SCREW AND ALIGN WITH (A) BASE.



3. PLACE (D) SPRING OVER (E) SCREW.



4. PLACE (C) WEDGE LOCK OVER (E) SCREW AND ALIGN WITH (B) FLANGE

B

D

Α



5. SQUEEZE (C) WEDGE LOCK AND (D) SPRING DOWN UNTIL (E) SCREW IS EXPOSED FROM THE NUT RECESS, INSTALL AND TIGHTEN (F) NUT BY HAND TO HOLD PART IN PLACE.

RPR-INS-354

F



RAM Mounting Systems 8410 Dallas Ave S Seattle, WA 98108 Phone: (206) 763-8361 Fax: (206) 763-9615 www.rammount.com support@rammount.com

6. PLACE ASSEMBLED BASE IN DESIRED LOCATION AND TIGHTEN SCREW WITH SCREWDRIVER UNTIL BASE IS WEDGED TIGHT IN PLACE.

RPR-INS-354

This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.