


# RAP-350 ROSE PEDAL DASH ADAPTOR INSTRUCTION SHEET

## PART INDEX



RAP-350

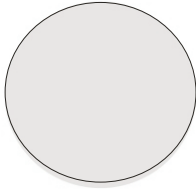

RAP-350PSA


- 1) To properly adhere the rose pedal dash adaptor (RAP-350) you need to pre-bend the pedals so that they fit the area prior to the application of the adhesive.
- 2) Once the RAP-350 is configured to the dash correctly, peel one side of the adhesive off (RAP-350PSA).
- 3) Carefully place the adhesive on the pre-bent rose pedals (RAP-350).
- 4) Once the adhesive is attached to the RAP-350B, peel the other side off and attach to surface area. The RAP-350PSA adhesive takes a full 24 hours to achieve a full bond.
- 5) Once the RAP-350 is in place, and the adhesive is secure, use one of the RAM suction cups to mount your device.

NOTE: To remove the adhesive, apply 5 minutes of continuous heat with a heat gun or hair dryer.

1



2

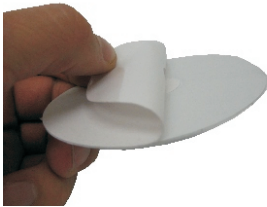

3



4



5

