



RAM® Square Post Clamp Base Assembly Guide (Side A)

PARTS INDEX:


- A. RAM® Double Suction Offset Plate (QTY. 1)
- B. Knob & Swivel Assembly (QTY. 2)
- C. RAM® Twist-Lock Suction Cup (QTY. 2)
- D. #10 X 3/4" Sheet Metal Screw (QTY. 4)
- E. #8-32 X 1/2" Machine Screw (QTY. 6)
- F. #8-32 Nylock Nut (QTY. 2)
- G. #8-32 Thin Nylock Nut (QTY. 2)

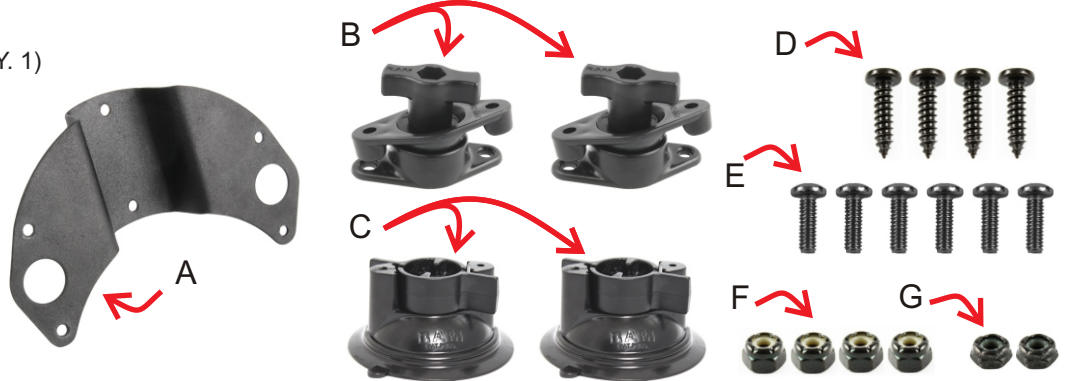


1. Disassemble one (B) Knob & Swivel Assembly as shown.

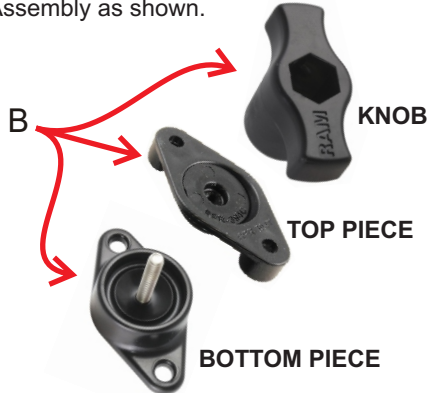

2. Attach Bottom piece from (B) Knob & Swivel Assembly to (C) Suction Cup using (D) Screws.

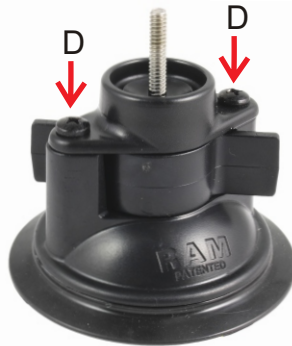

3. Attach Top piece and Ball Socket from (B) Knob & Swivel Assembly to one side of (A) Offset Plate using two (E) Screws and (F) Nuts.

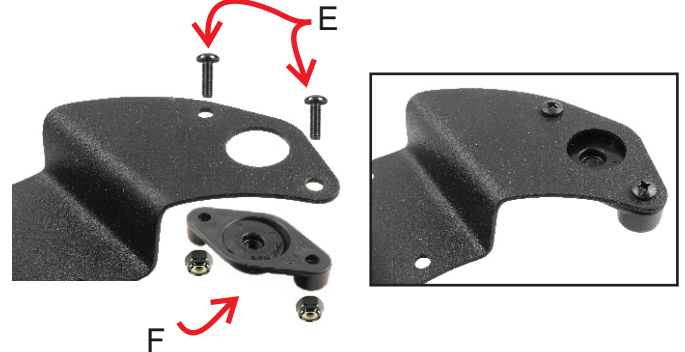

RMR-INS-189-PIV1

This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.


RAM® Square Post Clamp Base Assembly Guide (Side A)

PARTS INDEX:


- A. RAM® Double Suction Offset Plate (QTY. 1)
- B. Knob & Swivel Assembly (QTY. 2)
- C. RAM® Twist-Lock Suction Cup (QTY. 2)
- D. #10 X 3/4" Sheet Metal Screw (QTY. 4)
- E. #8-32 X 1/2" Machine Screw (QTY. 6)
- F. #8-32 Nylock Nut (QTY. 4)
- G. #8-32 Thin Nylock Nut (QTY. 2)




1. Disassemble one (B) Knob & Swivel Assembly as shown.

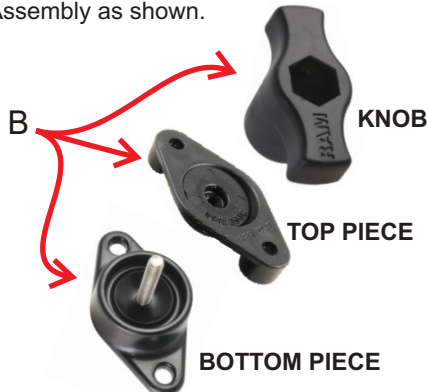

2. Attach Bottom piece from (B) Knob & Swivel Assembly to (C) Suction Cup using (D) Screws.

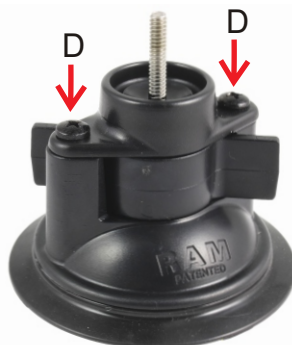

3. Attach Top piece and Ball Socket from (B) Knob & Swivel Assembly to one side of (A) Offset Plate using two (E) Screws and (F) Nuts.

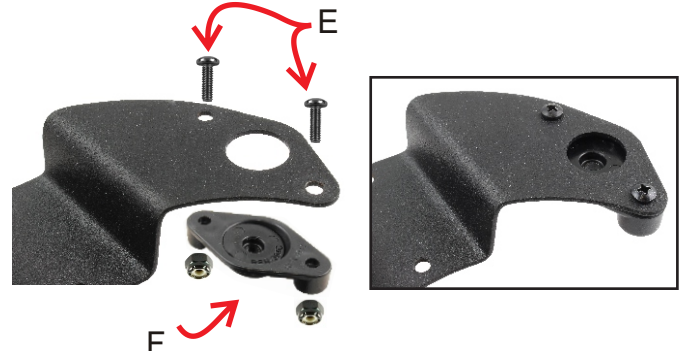

RMR-INS-189-PIV1

This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.

RAM® Square Post Clamp Base Assembly Guide (Side B)

4. Reassemble (B) Swivel Assembly with (C) Suction Cup and (A) Offset Plate.



5. Repeat Steps 1 through 4 for Second Swivel Assembly and opposite side of (A) Offset Plate.



6. Use remaining (E) Screws and (G) Nuts to attach RAM® Ball and Socket Mount to center of (A) Offset Plate. **Ball base not included in all kits.**



RAM Mounting Systems

8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RAM® MOUNTS

RMR-INS-189-PIV1

This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.

RAM® Square Post Clamp Base Assembly Guide (Side B)

4. Reassemble (B) Swivel Assembly with (C) Suction Cup and (A) Offset Plate.



5. Repeat Steps 1 through 4 for Second Swivel Assembly and opposite side of (A) Offset Plate.



6. Use remaining (E) Screws and (G) Nuts to attach RAM® Ball and Socket Mount to center of (A) Offset Plate. **Ball base not included in all kits.**



RAM Mounting Systems

8410 Dallas Ave S
Seattle, WA 98108
Phone: (206) 763-8361
Fax: (206) 763-9615
www.rammount.com
support@rammount.com



RAM® MOUNTS

RMR-INS-189-PIV1

This document, including images, may not be reproduced partly or fully without the expressed written consent of National Products, Inc.