


Assembly Instructions for Machine Guard


Loosen the set screw at the end of the gooseneck arm with the 2mm Allen wrench. Then attach the polycarbonate sheet either directly to the gooseneck arm or with the 90 Degree Angle Adapter as shown. Then gently tighten the set screw.

TOOLS REQUIRED: 2 mm and 7/32 Allen wrench (included)

DIRECT CONNECTION

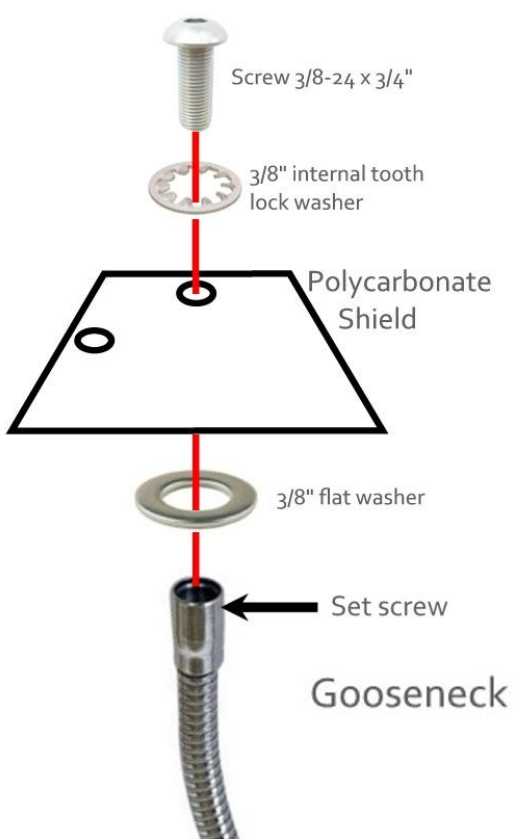

90 DEGREE ANGLE CONNECTION

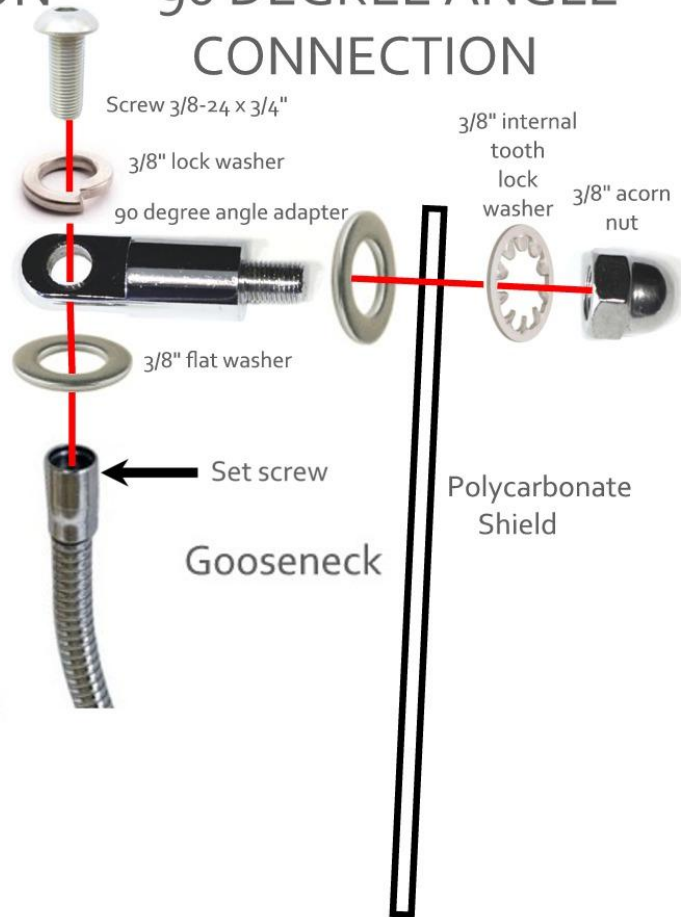

SnakeClamp Products LLC

www.SnakeClamp.com

support@snakeclamp.com

