


## How To Assemble Your Magnet Base

Loosen the set screw at the end of the gooseneck arm. Then attach the gooseneck to the magnet base using the short 3/8" screw. Insert lock washer and washers as shown. GENTLY tighten the set screw.

TOOLS REQUIRED: 2 mm and 7/32" Allen wrench (included)

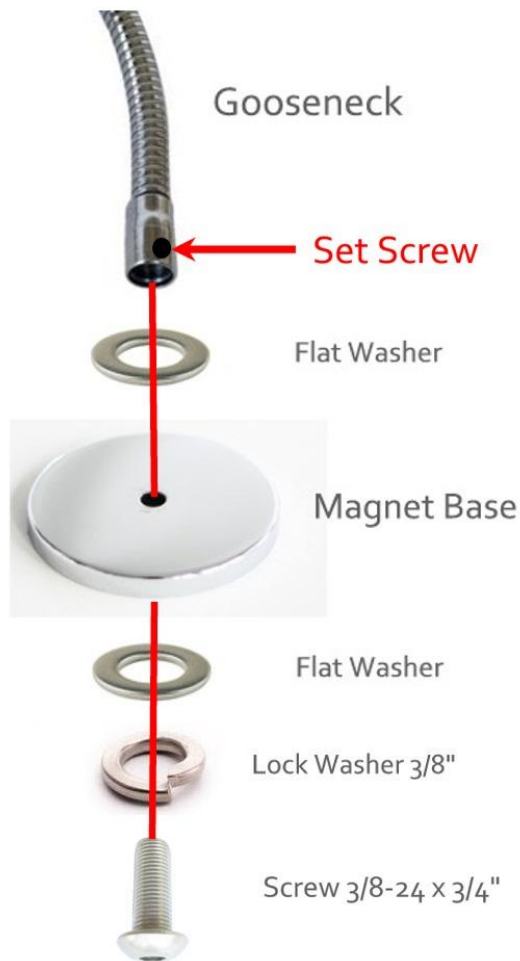

**WARNING:** Prior to inserting the 3/8" screw, you must first loosen the 4mm set screw. After tightening the 3/8" screw, GENTLY tighten the set screw.

- SnakeClamp Products -

[www.SnakeClamp.com](http://www.SnakeClamp.com)

[support@snakeclamp.com](mailto:support@snakeclamp.com)

**snakeclamp**