


Assembly Instructions for Round Base Weight

Loosen the 4mm set screw at the end of the gooseneck. Insert the 1-1/4" long 3/8" screw with flat and lock washers as shown. Gently tighten the 4mm set screw.

NOTE: 7/32" and 2mm Allen wrenches are included for assembly/disassembly. Keep these in a safe place.

TOOLS REQUIRED: 2 mm and 7/32" Allen wrench (included)

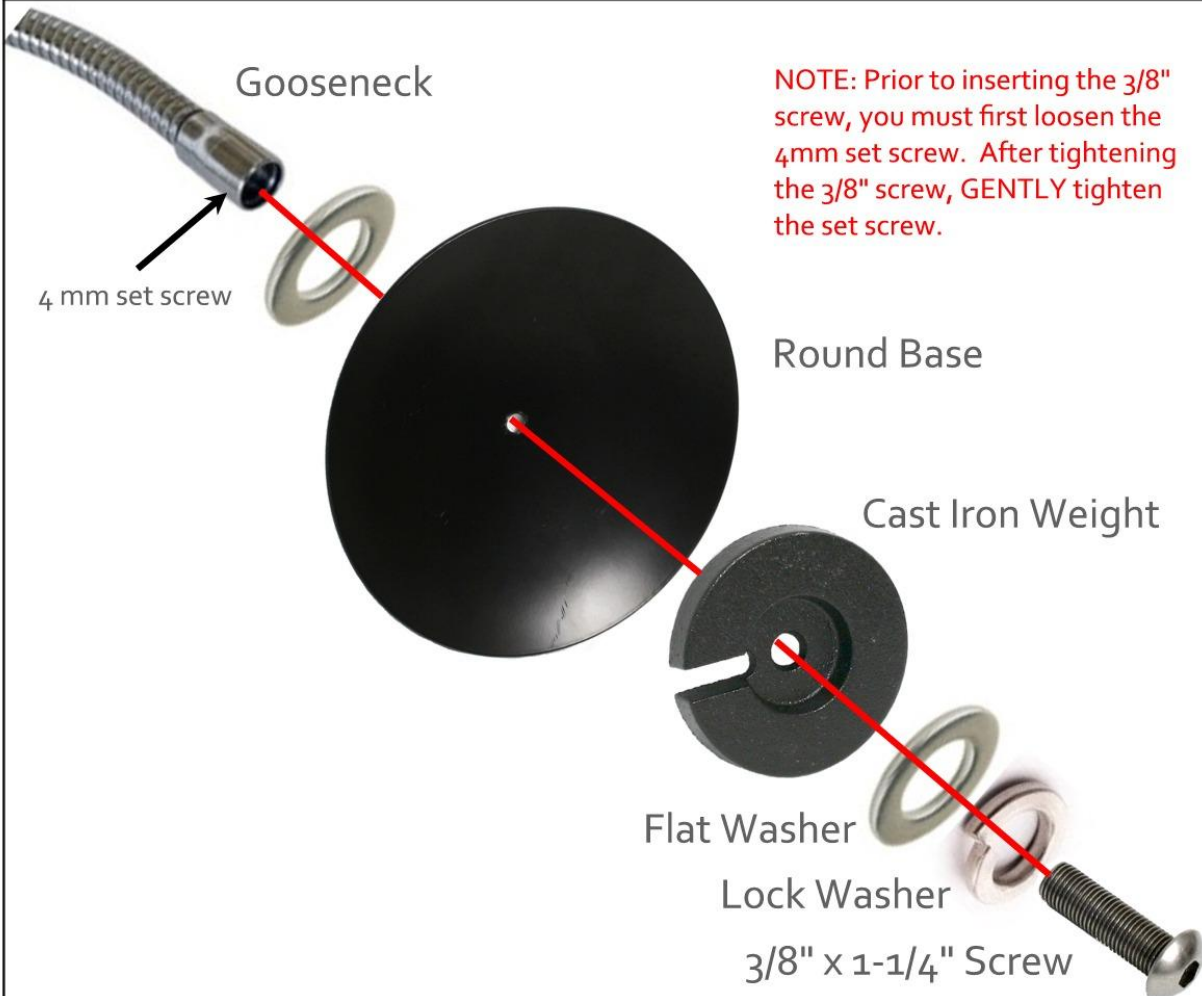

SnakeClamp Products LLC

www.SnakeClamp.com

support@snakeclamp.com


snakeclamp