


## Assembly Instructions for Spring Clamp

Loosen the set screw at the end of the gooseneck. Attach the spring clamp to the flexible gooseneck tube arm using the 3/8" screw. Insert lock washer and flat washer as shown. Gently tighten the set screw.

TOOLS REQUIRED: 7/32 and 2 mm Allen wrench (included)

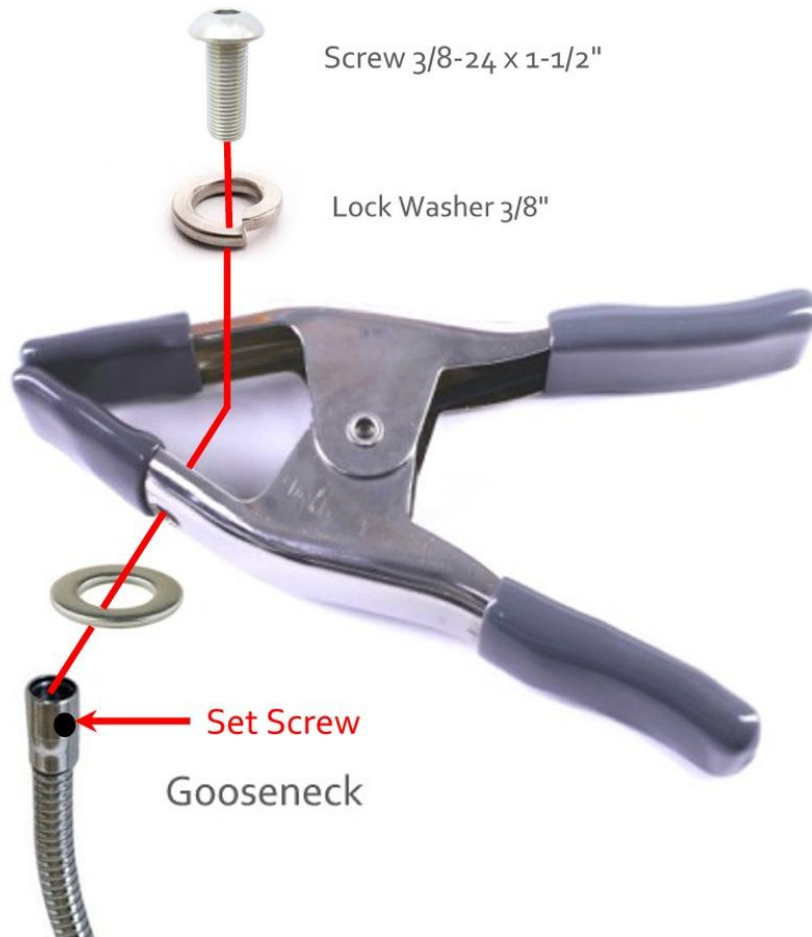

SnakeClamp Products LLC

[www.SnakeClamp.com](http://www.SnakeClamp.com) [support@snakeclamp.com](mailto:support@snakeclamp.com)

  
snakeclamp