


How To Assemble Your Square Base

Loosen the 4mm set screw at the end of the gooseneck. Then attach the gooseneck arm to the square base using one 3/8" flat-head screw. Insert lock washer and flat washer as shown. GENTLY tighten the 4mm set screw.

Four adhesive-backed felt pads are included. Apply these to the bottom four corners if desired to protect your work surface.

TOOLS REQUIRED: 2 mm and 7/32" Allen wrench (included)

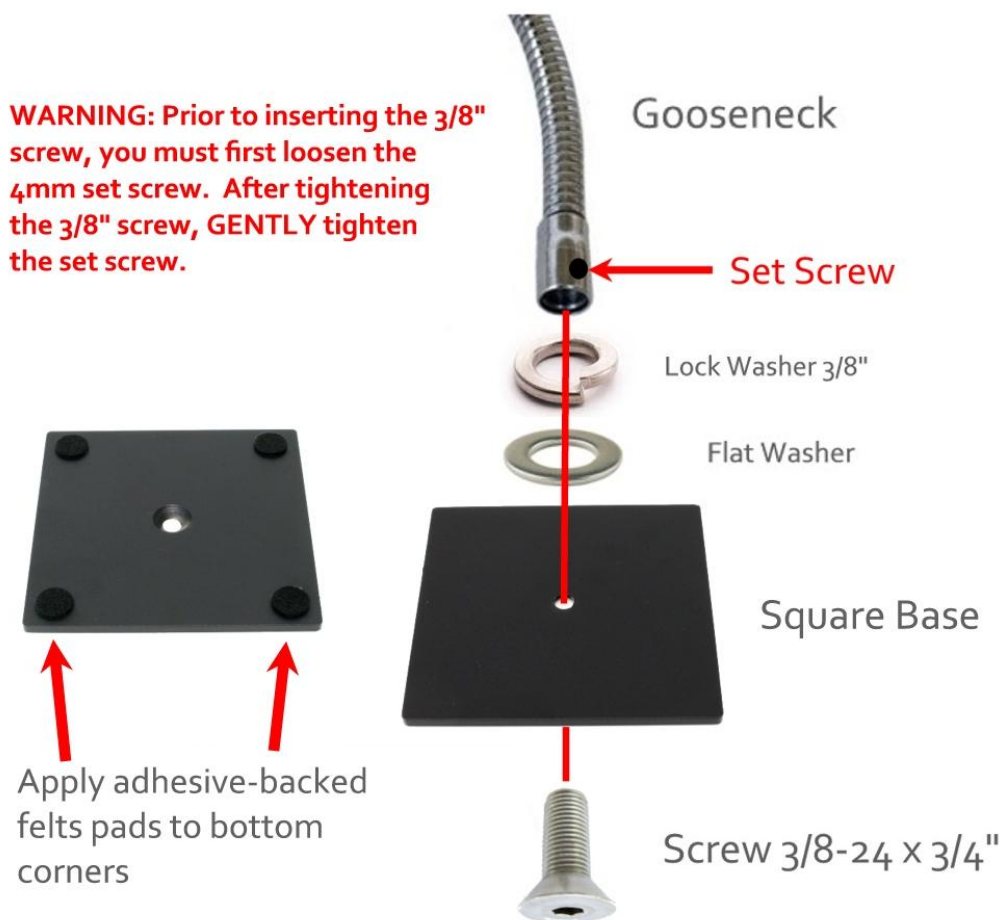

- SnakeClamp Products -

www.SnakeClamp.com

support@snakeclamp.com

snakeclamp