


verilux[®]
The Healthy Lighting Company[®] Est. 1956

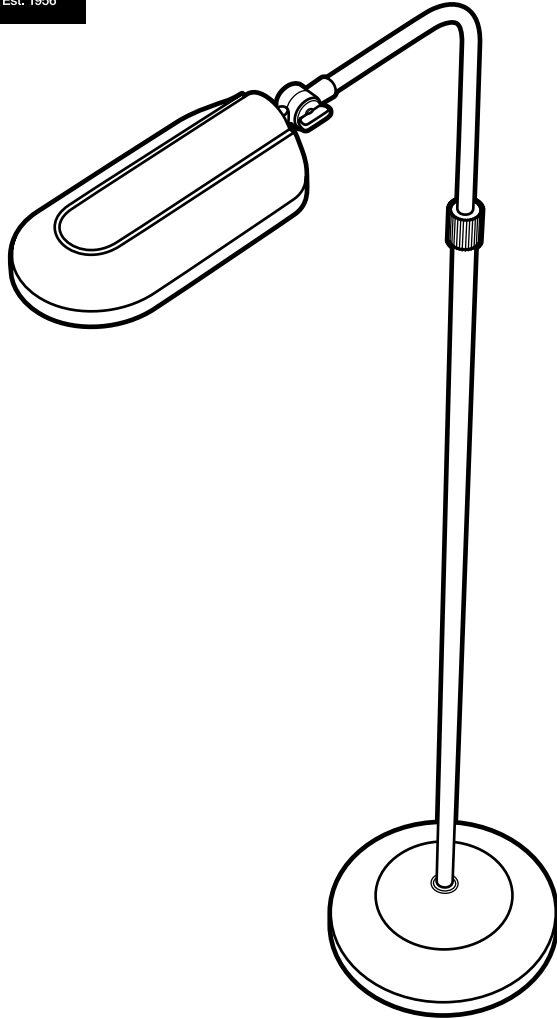

Heritage[™] | Deluxe

Natural Spectrum[®] Floor Lamp

Model: VF03



Dear Customer,

Thank you for purchasing the Verilux Brookfield™ Deluxe Natural Spectrum® Floor Lamp. You have received a quality product, backed by a one-year limited warranty. As a Verilux customer, your satisfaction means everything to us. We look forward to serving you now and in the future.

Many other healthy lighting products are available through our catalog and online. Visit us on the web at www.verilux.com to request a free catalog and learn more about all our quality Verilux products, or call us toll-free at 1-800-454-4408.

Have a bright day!

A handwritten signature in black ink that reads "Nicholas Harmon". The script is fluid and cursive.

Nicholas Harmon
President, Verilux, Inc.

READ ALL INSTRUCTIONS BEFORE USING

Important Safeguards

⚠ DANGER:

- Do not operate this device near a water source to avoid electrocution.

⚠ WARNING:

- Do NOT dismantle.
- Do not use with power supply voltage other than 120 VAC.
- Do not operate lamp in close proximity to flammable or combustible vapors, such as aerosol spray products, or where oxygen is being administered.
- Do not cut or shorten the power cord.
- The bulb in this product contains a trace amount of mercury, a chemical known to the state of California to cause birth defects or other reproductive harm. This substance may also cause injury if inhaled or ingested.

⚠ CAUTION:



- For indoor use only.
- Always unplug lamp before performing bulb replacement or installation.
- This lamp is not for use with light dimmers, timers, motion detectors, voltage transformers or extension cords.
- This product may cause interference with radios, cordless telephones or devices that use a wireless remote control, such as televisions. If interference occurs, move the product away from the device, plug the product or device into a different outlet or move the lamp out of the line of sight of the remote control receiver.
- Unplug lamp during lightning storms or when unused for long periods.
- Do not lift the lamp by the gooseneck. The lamp should be lifted by the shaft.
- Be very careful not to pinch any part of the cord between any metal pieces.
- Do not use solvents or cleaners containing abrasives, or ammonia based cleaners.
- All moisture should be properly wiped away and dried prior to restoring power.
- Do NOT use lubricating agent in assembly; please see troubleshooting section if you are having difficulty assembling your lamp.
- Disconnect lamp before performing alignment activity.
- Do not block vents on ballast. Vents are necessary for proper function of the ballast; blocking them may cause overheating of the ballast.
- Dispose of bulbs per local regulations. For more information on clean-up and disposal, see www.lamprecycle.org.

SAVE THESE INSTRUCTIONS

Getting Started


Main Parts & Controls

- | | |
|---------------------------------------|----------------------------------|
| A. Optix® Glare Control Filter | G. Lower Shaft |
| B. Switch | H. Lamp Base |
| C. Lamp Head Swivel Knob | I. Power Cord |
| D. Lamp Arm | J. Power Supply (Ballast) |
| E. Height Adjusting Collar | K. Bulb |
| F. Upper Shaft | |

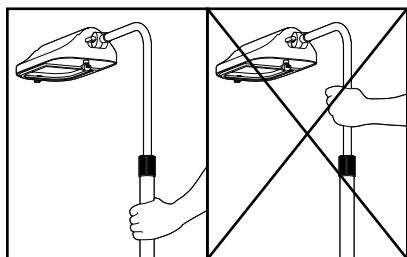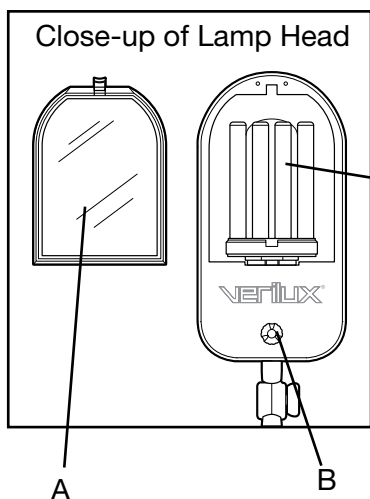

▲ CAUTION:


DO NOT LIFT THE LAMP BY THE LAMP ARM. THE LAMP SHOULD BE LIFTED BY THE VERTICAL SHAFT.

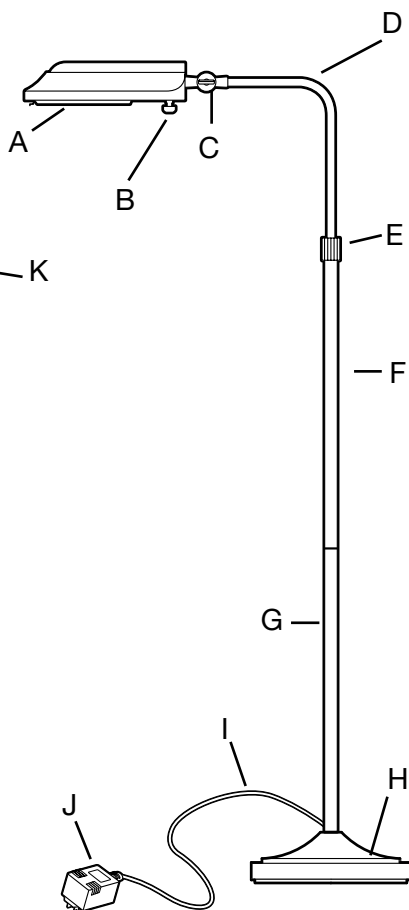

Assembly Instructions

Please Read Operating Instructions Carefully Before Using the Heritage™ Deluxe Natural Spectrum® Floor Lamp:

1. Set lamp base on the floor and insert the lower lamp shaft (G) onto the base and screw clockwise to tighten (Fig.1).
2. Pull the slack of the electrical cord through the lamp base (I).
3. Loosen the height adjusting collar (E) to free lamp arm (D).
4. With one hand holding the lamp arm (D), screw the upper shaft (F) onto the lower shaft (G) (see assembly detail below).
5. Tighten height adjusting collar to secure lamp arm.
6. To lift lamp head, loosen swivel knob (C), adjust head to desired angle. Tighten swivel knob.

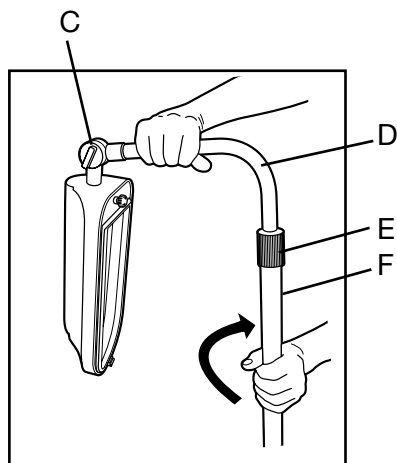

Assembly Detail

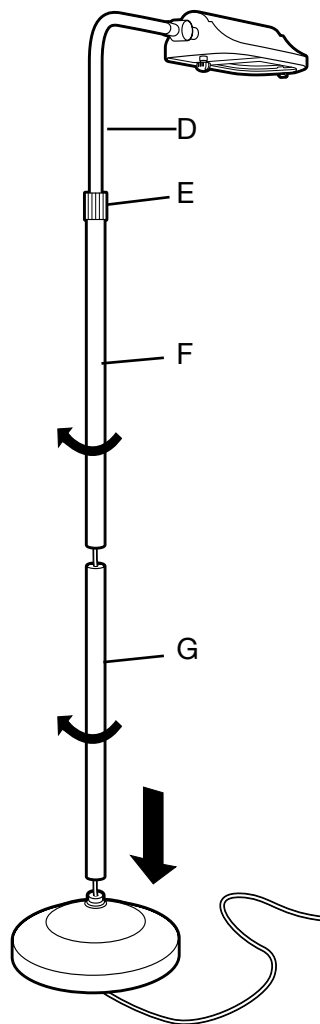


Fig. 1

Assembly Instructions — continued

7. Attaching the Optix® glare control filter:

- Remove glare control filter from protective plastic bag. Take care to hold filter by the edges only.
- Insert tabs on bottom of filter into opening. (Fig. 2)
- Press into place using thumb tab.

Do not touch or press on the filter material itself.

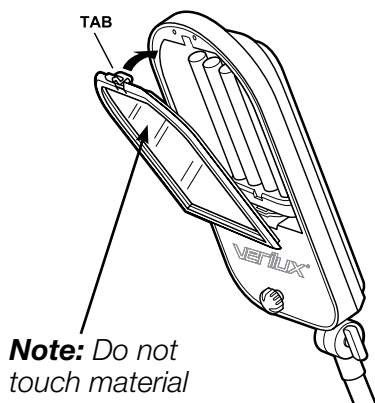


Fig. 2

8. Attach the ballast to the power cord. Use care to align the 4-pin plug properly. DO NOT FORCE. The 4-pin plug was designed to fit in only one orientation (Fig. 3).

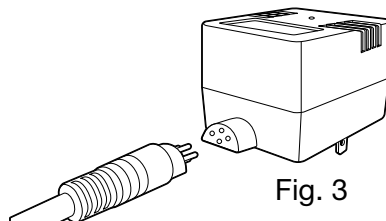


Fig. 3

9. Plug ballast into a standard 120V 50/60Hz outlet. Turn lamp on. The green LED indicator on center of the ballast should be illuminated (Fig. 4). If the LED indicator does not illuminate, please refer to the troubleshooting section of this manual (see page 9).

10. If bulb does not illuminate instantly, please refer to the troubleshooting section of this manual.

11. Adjust lamp brightness to the desired level.

▲WARNING: Do not block vents on ballast. Vents are necessary for proper function of the ballast; blocking them may cause overheating of the ballast.

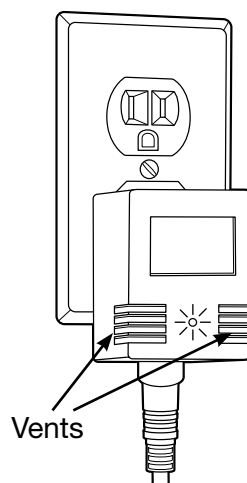


Fig. 4

Adjusting the Heritage™ Floor Lamp

The Heritage Floor Lamp adjusts several ways:

1. To adjust lamp height – hold upper shaft (F) with one hand, loosen height adjusting collar. Raise or lower lamp arm (D) to desired height. Tighten collar (Fig. 5).

Note: Do not stand on cord or otherwise restrict its movement while raising or lowering the height of the lamp.

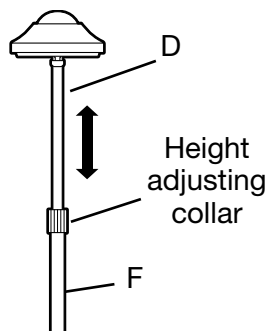


Fig. 5

2. To rotate the lamp head right or left, loosen height adjusting collar, swing lamp arm to desired position. Tighten collar. Lamp arm rotates a full 360° (Fig. 6).

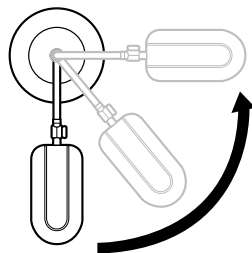


Fig. 6

3. To adjust lamp head angle up or down – loosen swivel knob counterclockwise, place head at desired angle, tighten swivel knob to secure (Fig. 7).

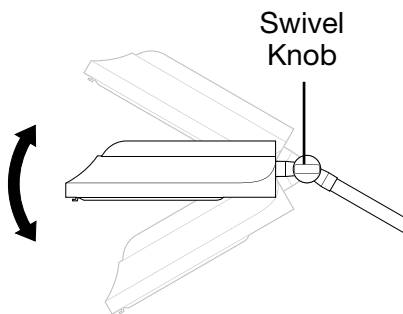


Fig. 7

4. To tilt lamp head toward you or away from you – simply move head to desired position (Fig. 8).

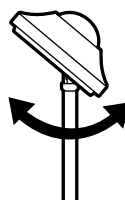


Fig. 8

Bulb Replacement Instructions

Removal

1. Unplug lamp from power source.
2. To access the bulb, remove Optix® glare control filter by depressing the thumb tab and lifting it out.
3. Firmly hold bulb base (B) and pull bulb (C) from the socket (A) in an outward motion (Fig. 9).


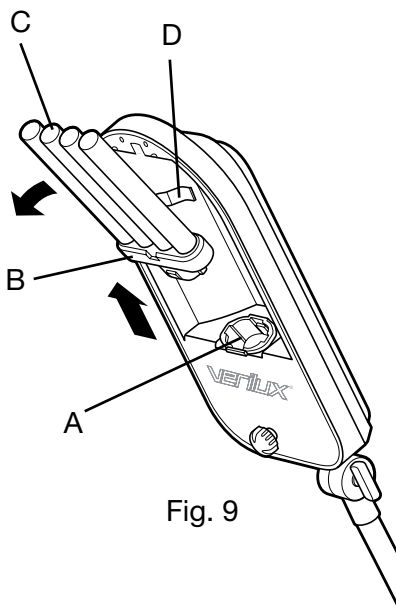


Fig. 9

Installation

1. Unplug lamp from power source.
2. Firmly hold base (B) and push bulb (C) into the socket (A).
3. Be sure bulb is firmly seated in the socket (see below) and snapped into the metal bulb clip (D) (Fig. 10).
4. Replace Optix glare control filter.

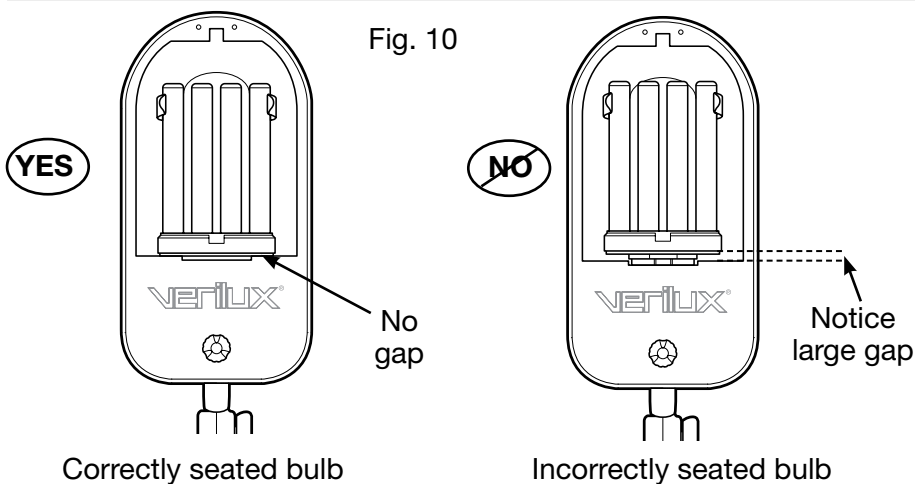

Correctly seated bulb

Incorrectly seated bulb

⚠ CAUTION: ALWAYS UNPLUG LAMP BEFORE PERFORMING BULB REPLACEMENT OR INSTALLATION.

Troubleshooting

Before requesting service on your Verilux® lamp, please read the following:

- Make sure all power connectors, cords and plugs are inserted fully and securely.
- Be sure the bulb is securely seated into the socket (see page 8).
- Make sure there is power to the wall outlet or try another outlet.

| PROBLEM | CHECK | SOLUTION |
|--------------------------------------|---|---|
| Light Won't Come On | Has the plug come loose? | Insert plug securely into wall outlet. |
| | Is the bulb old? | Check bulb for blackening/darkening at bottom of spiral where it joins the base (an indicator of bulb life) and replace bulb. |
| | Is the bulb connected securely into socket? | Be sure the bulb is securely seated into socket, repeat the bulb installation process. |
| Blackening/Darkening at Ends of Bulb | Is the bulb new? | Sometimes when a new bulb is turned on for the first time the tube will darken, but this will fade after a few minutes. |
| | Is the bulb old? | With older bulbs, darkening of the tube indicates end of bulb life (this doesn't affect operation except to reduce the amount of light available since the phosphor in that area has become inactive). Bulb replacement is recommended. |
| Light Flickers | Has the plug come loose? | Insert plug securely into wall outlet. |
| | Is the bulb connected securely to the socket? | Be sure the bulb is securely seated into the socket, repeat the bulb installation process. CAUTION: ALWAYS UNPLUG LAMP BEFORE PERFORMING BULB REPLACEMENT OR INSTALLATION. |
| | Is the lamp connected to a dimmer switch? | Connect lamp plug only to wall outlet without dimmer switch. |

▲WARNING: *Do not block vents on ballast. Vents are necessary for proper function of the ballast; blocking them may cause overheating of the ballast and increase risk of fire.*

Care and Cleaning

Your lamp is made from high quality materials that will last for many years with minimum care. You may want to periodically clean the lamp using a mild non-abrasive cleaner and soft cloth. When cleaning, make sure you have turned off and unplugged the unit and allowed sufficient time for the unit to cool. All liquid should be properly wiped away and dried prior to restoring power.

▲CAUTION: DO NOT USE SOLVENTS OR CLEANERS CONTAINING ABRASIVES, OR AMMONIA BASED CLEANERS.

▲WARNING: All moisture should be properly wiped away and dried prior to restoring power.

Note: *Do not use any cleaning agents, including window cleaner, on the Optix® glare control filter. If needed, dust with a clean, dry cloth.*

One Year Limited Warranty

ATTENTION! ONCE OPENED, PLEASE **DO NOT** RETURN THIS PRODUCT TO THE STORE WHERE IT WAS PURCHASED FOR REPAIR OR REPLACEMENT!

Many questions may be answered by visiting www.verilux.com, or you may call our Customer Service Department at 1-800-786-6850 during normal business hours.

This limited warranty is provided by: Verilux, Inc., 340 Mad River Park, Waitsfield, VT 05673

Verilux warrants this product to be free from defects in material and workmanship for a period of one year from the date of the original retail purchase from Verilux or an authorized Verilux distributor. **Proof of purchase is required for all warranty claims.** During the limited warranty period, Verilux, Inc. will, at its option, repair or replace defective parts of this product, at no charge to the customer, subject to the following limitations: This limited warranty does not include any postage, freight, handling, insurance or delivery fees. This warranty does not cover damage, defect or failure caused by or resulting from accident, external destruction, alteration, modification, abuse, misuse or misapplication of this product.

This warranty does not cover damage to the product resulting from return shipping or handling. The use of shipping insurance is recommended to help protect your product.

Return Authorization is required for all returns. To obtain a Return Authorization, please contact the Verilux Customer Service Department at 1-800-786-6850.

If, during the first year of ownership, this product fails to operate properly, it should be returned as specified at www.verilux.com/warrantyreplacement or as instructed by a Verilux customer service representative at 1-800-786-6850.

Note: *Verilux recommends using a quality surge suppressor on all electronics equipment. Voltage variations and spikes can damage electronic components in any system. A quality suppressor can eliminate the vast majority of failures attributed to surges and may be purchased at electronics stores.*

Due to ongoing improvements, actual product may have slight variations from the product described in this manual.

Please visit our website at www.verilux.com or call our Customer Service Department at

1-800-786-6850

Representatives are available Monday — Friday, 9am — 5pm EST

verilux®

340 Mad River Park, Waitsfield, VT 05673

