



# REPLACING A CAROUSEL MOTOR (All models of Silent Partner ball machines)

1. Remove the four screws that hold the carousel cover.

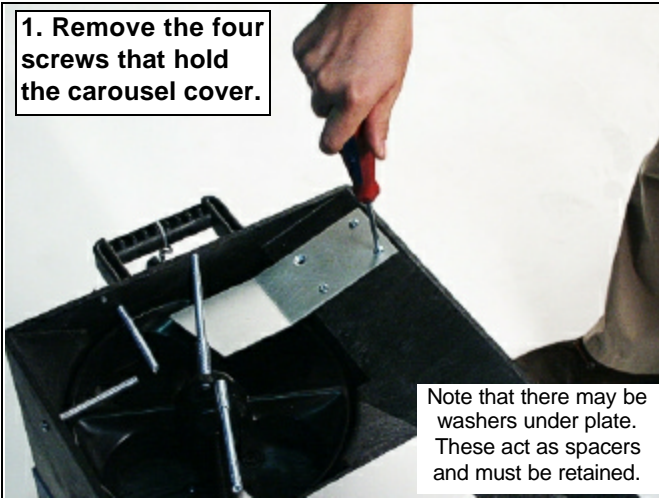

2. Remove the two stationary springs. A #2 square tip screw driver is used along with pliers or vise grips.

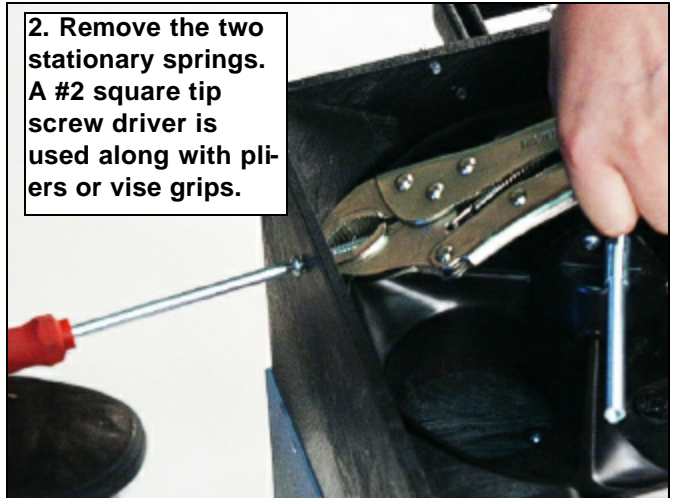


3. Pull the carousel upward. Strong steady force may be needed.




4. Remove three of the four screws that hold the carousel motor.



5. Remove the fourth screw while holding the motor inside the machine.

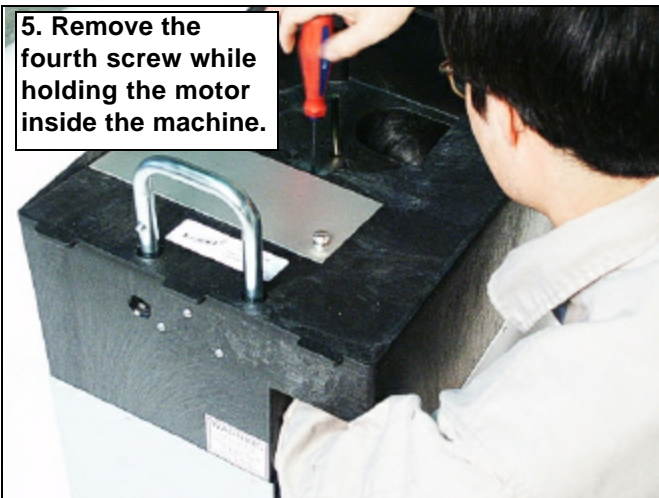

6. Extract the motor with connected wires. Cut wires and connect new motor using parts supplied.

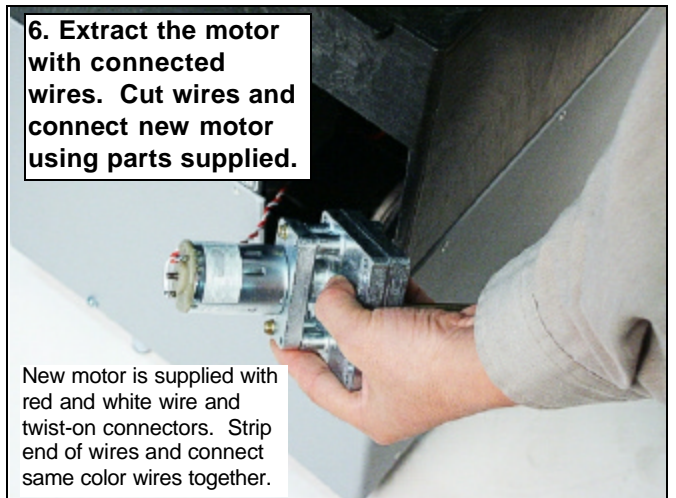

Retrace your steps to install new motor in machine.