

# Platinum.™

## Service Manual


### Gas Hob

AUPL-GWF62SS

#### **IMPORTANT**

The information contained in this Service Manual is intended for licensed service personnel only. If you have any questions please do not hesitate to contact our customer service team on 1300 985 815

# Exploded View

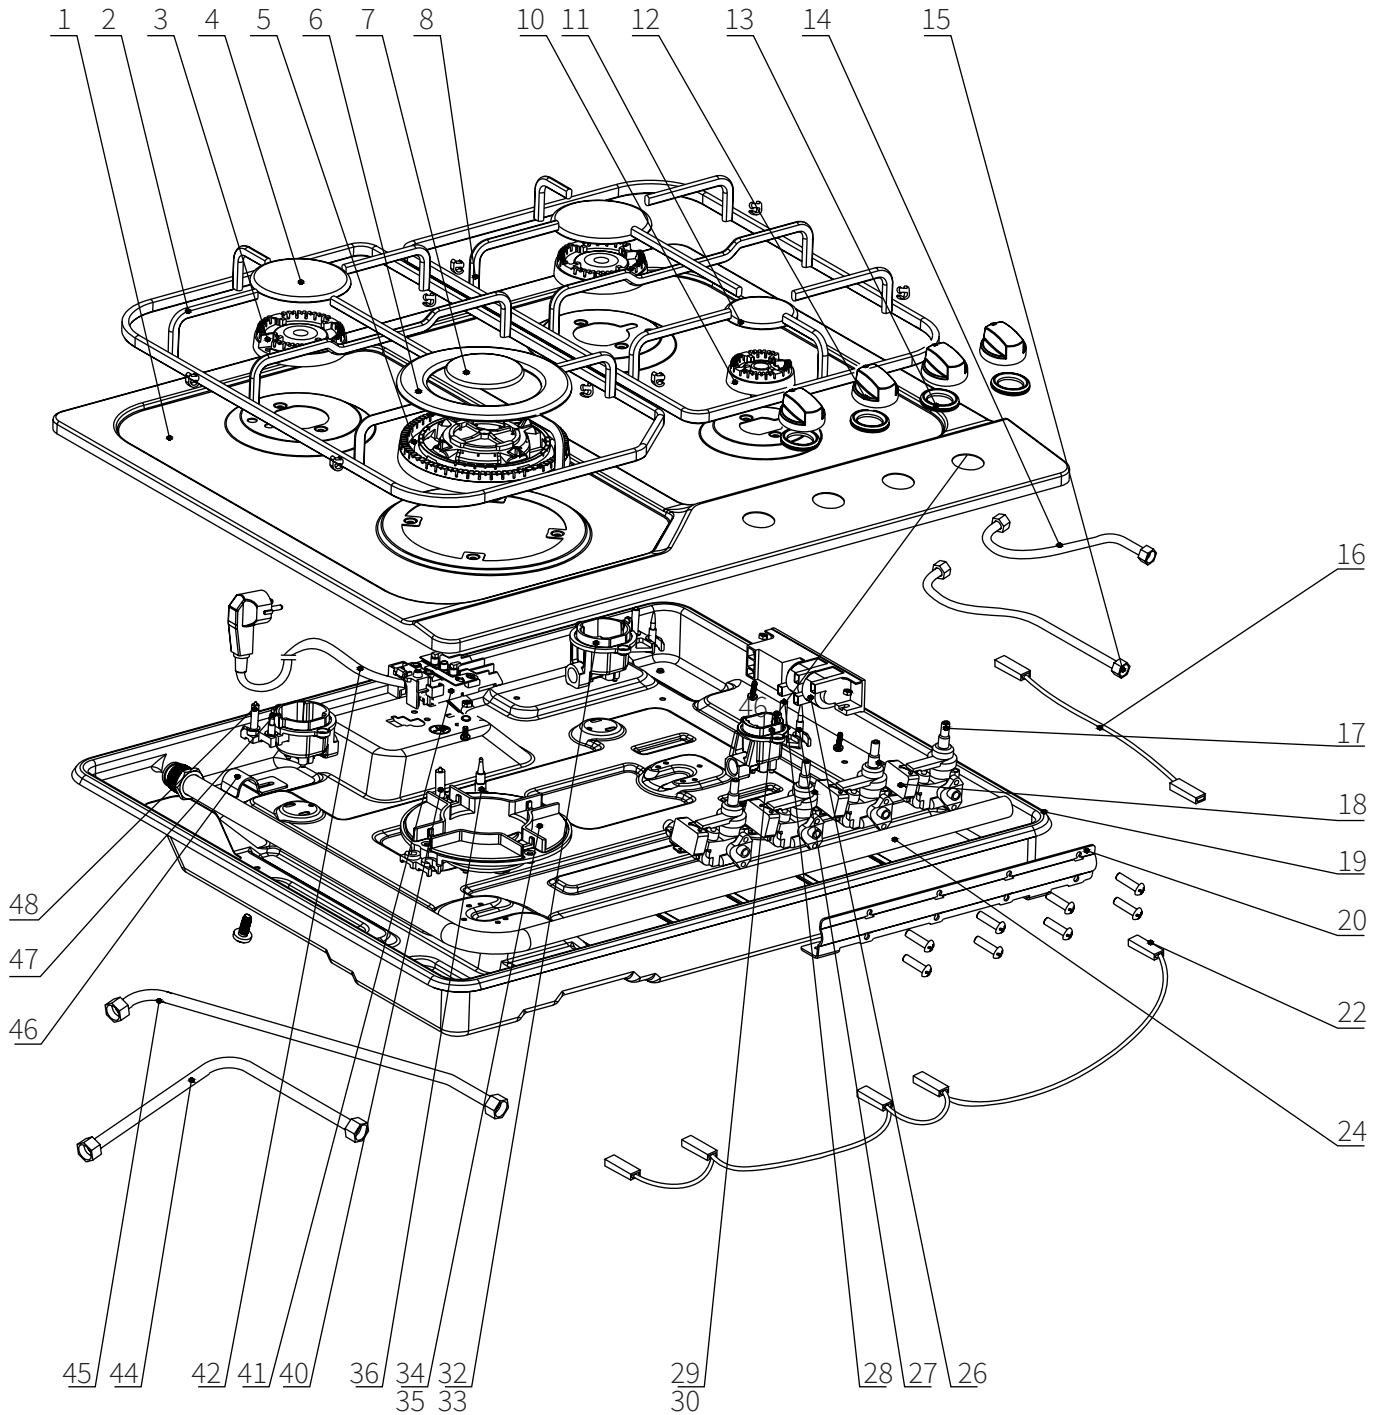

\*Exploded view for illustrative purposes. Your internal composition may vary slightly visually but all relevant components are listed in the parts list on page 3 and 4.

# Parts List

ID	Part Number	Description
1	2201108	Top plate - stainless steel (Platinum)
2	2299300	Left trivet
3	2299354	Semi-rapid burner diffuser
4	2299350	Semi-rapid burner cap
5	2299355	Wok burner diffuser
6	2299351	Wok outer burner cap
7	2299349	Wok inner burner cap
8	2299301	Right trivet
10	2299356	Aux.burner diffuser
11	2299352	Aux. burner cap
12	2299401	Knob - Silver
13	2299402	Gasket - top plate knob cutouts
14	2299605	Gas pipe - Aux. burner
15	2299606	Gas pipe - rear right semi-rapid burner
16	2299507	Connection wire
17	2299653	Gas valve, FFD - aux. burner
17	2299655	Gas valve, FFD - wok burner
17	2299654	Gas valve, FFD - semi- rapid burner
18	2299583	Microswitch wiring
19	2299100	Bottom plate - stainless steel
20	2299101	Bracket for gas valves
22	2299509	Wire for microswitches - long
24	2299604	Gas Inlet manifold
26	2299511	Ignition generator - 4 points
27,47	2299524	Thermocouple FFD - aux./rapid/semi-rapid burners (650mm)
28,48	2299527	Ignition candle - aux./rapid/semi-rapid burners (850mm)
29	2299360	Aux. burner cup (base)
30	2299657	Gas injector Ø 0.93 - aux. burner (& rapid burner)
32	2299358	Semi-rapid burner cup (base)
33	2299651	Gas injector Ø 1.15 - semi-rapid burner
34	2299359	Wok burner cup (base)
35	2299652	Gas injector Ø 1.72 - wok burner
36	2299516	Thermocouple FFD - wok.burner
40	2299519	Ignition candle - wok burner
41	2299513	Electrical terminal block
42	2299512	Flexible power cord - AUS 10A


# Parts List

ID	Part Number	Description
44	2299607	Gas pipe - wok burner
45	2299608	Gas pipe - rear left semi - rapid burner
46	2299102	Pipe clamp
ULPG Kit	2299660	Gas injector Ø 1.00 - wok burner
	2299630	Gas injector Ø 0.68 - semi-rapid burner
	2299650	Gas injector Ø 0.58 - aux. burner
	2299638	Test point - gas pressure
	2299637	Gas regulator - Laite
	2299639	Elbow - gas fitting
	2299078	Wok Support Trivet - Ring
	2299107	Mounting bracket
	2299917	Rubber Foot

Gas Consumption Table

AUPL-GWF61SS AUPL-GWF62SS	Natural Gas			Universal LPG		
	Inj. diam. (mm)	MJ/h	Gas pressure	Inj. diam. (mm)	MJ/h	Gas pressure
Wok burner x 1	1.72	13.50	1.0kPa	1.00	13.50	2.75kPa
Semi-rapid burner x 2	1.15	6.30	1.0kPa	0.68	6.30	2.75kPa
Auxiliary burner x 1	0.93	4.30	1.0kPa	0.58	4.30	2.75kPa
Total NHGC	30.40			30.40		

# Wiring Diagram

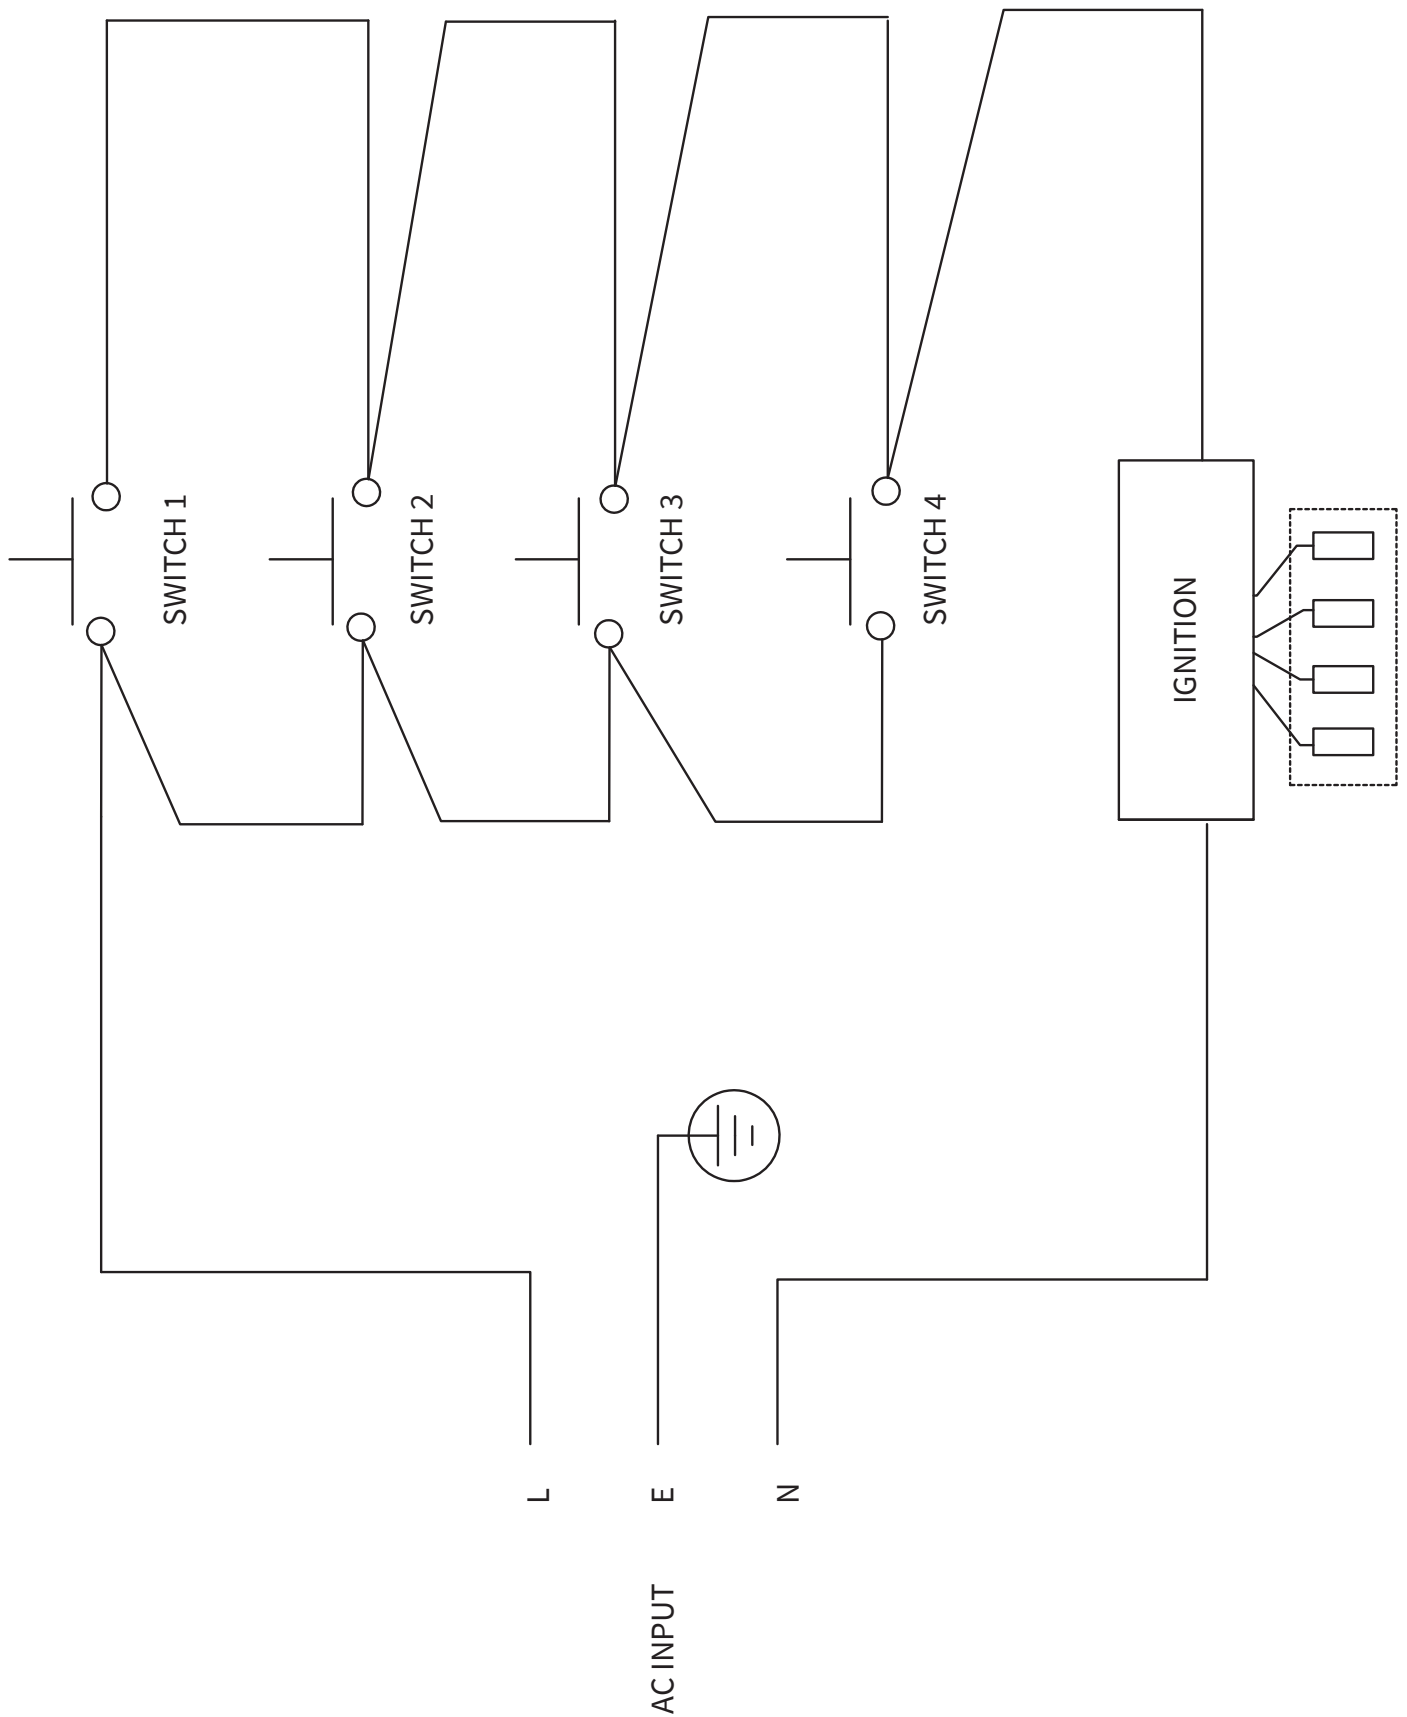

# Platinum.™

## CONTACT DETAILS

Australia

Platinum Appliances

### Customer care

☎ 1300 985 815

✉ [customercare@platinumappliances.com.au](mailto:customercare@platinumappliances.com.au)

🌐 [platinumappliances.com.au](http://platinumappliances.com.au)

### Spare parts & Manuals

✉ [customercare@platinumappliances.com.au](mailto:customercare@platinumappliances.com.au)

🌐 [service.platinumappliances.com.au](http://service.platinumappliances.com.au)

📍 PO Box 7785

Norwest, NSW 2153

Platinum is committed to ongoing research and development. Every effort has been made to ensure all information in this service manual is correct at time of going to print. Dimensions should be used as a reference only and actual dimensions should be taken from the physical product only.

Manufacturer reserves the right to change specifications without notice.