



ELECTROLUX HOME PRODUCTS PTY LTD
ABN 51 004 762 341

Technical Publication Nº CE231.doc

Issue: 1
Date: 10/06

WEB SITE ADDRESS: www.partnship.com.au

ELECTROLUX

***ELECTRIC
600 UPRIGHT COOKERS
“INTEGRATED”***

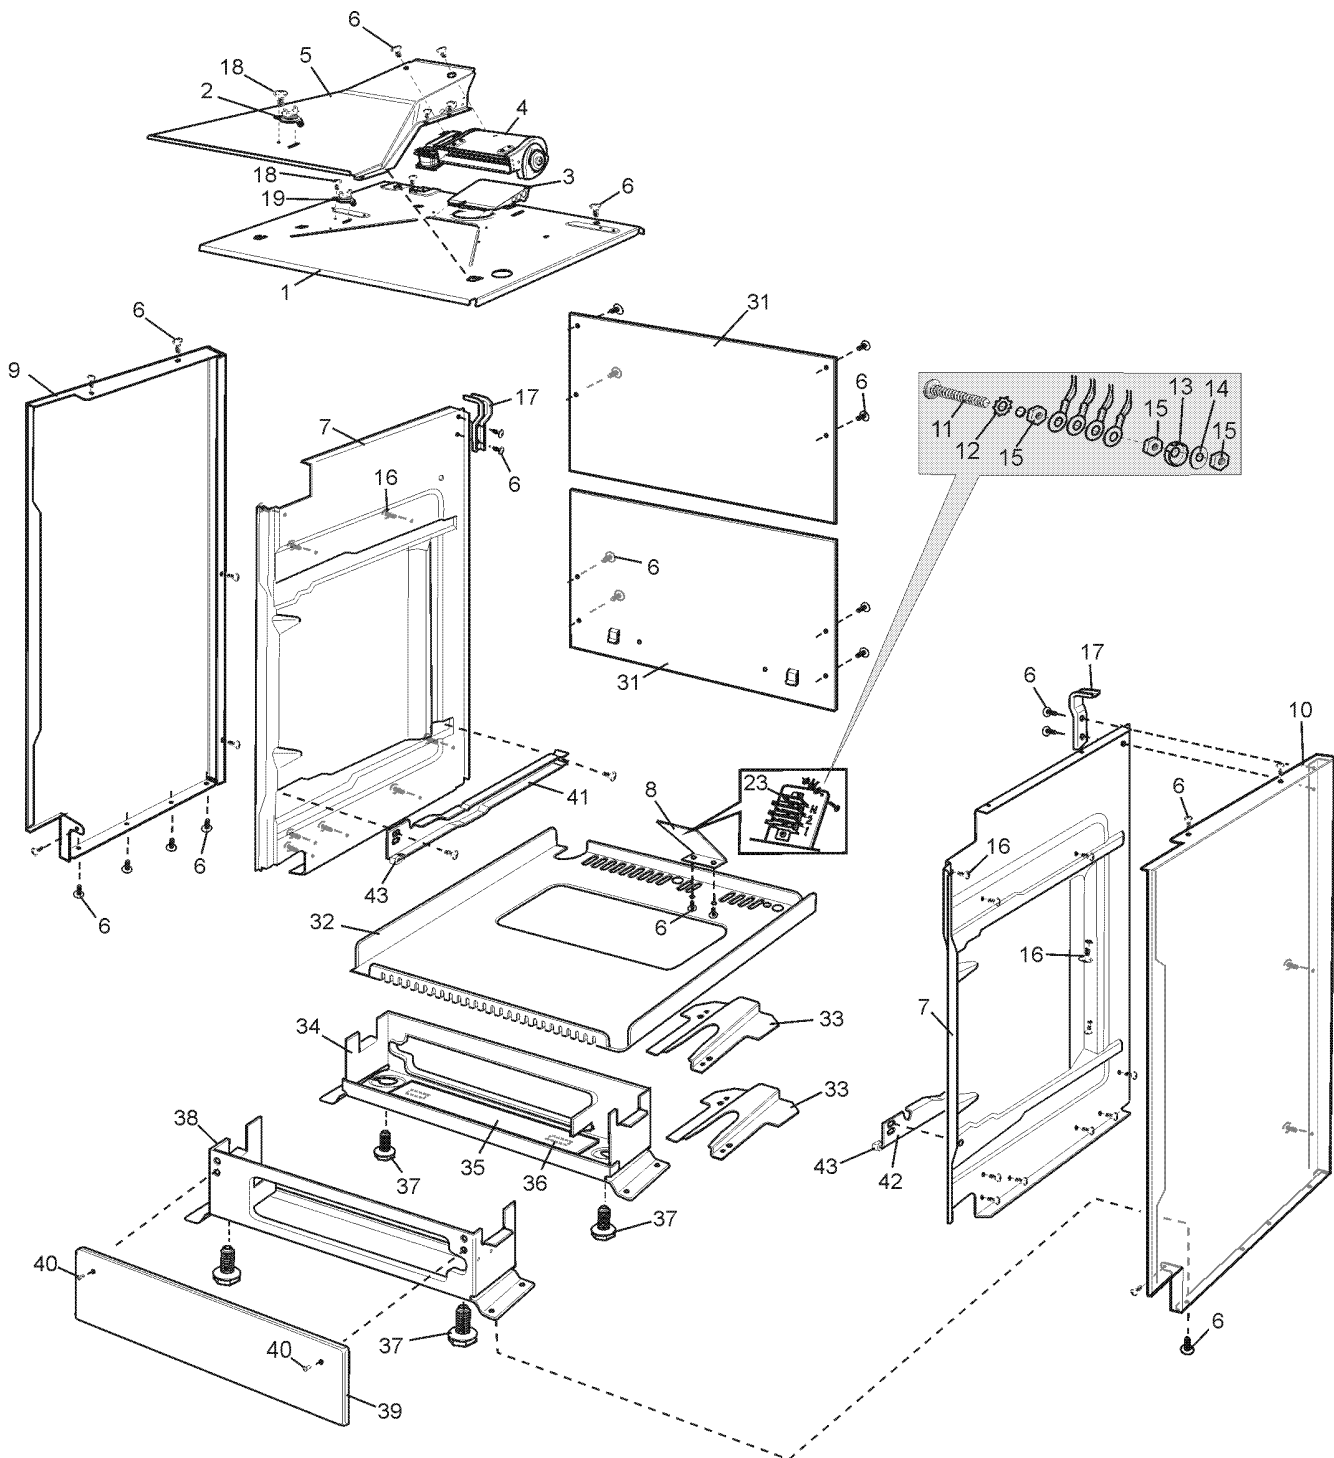
***MODEL:
ESE6634S***

First Built Dates:	
ESE6634	10/06

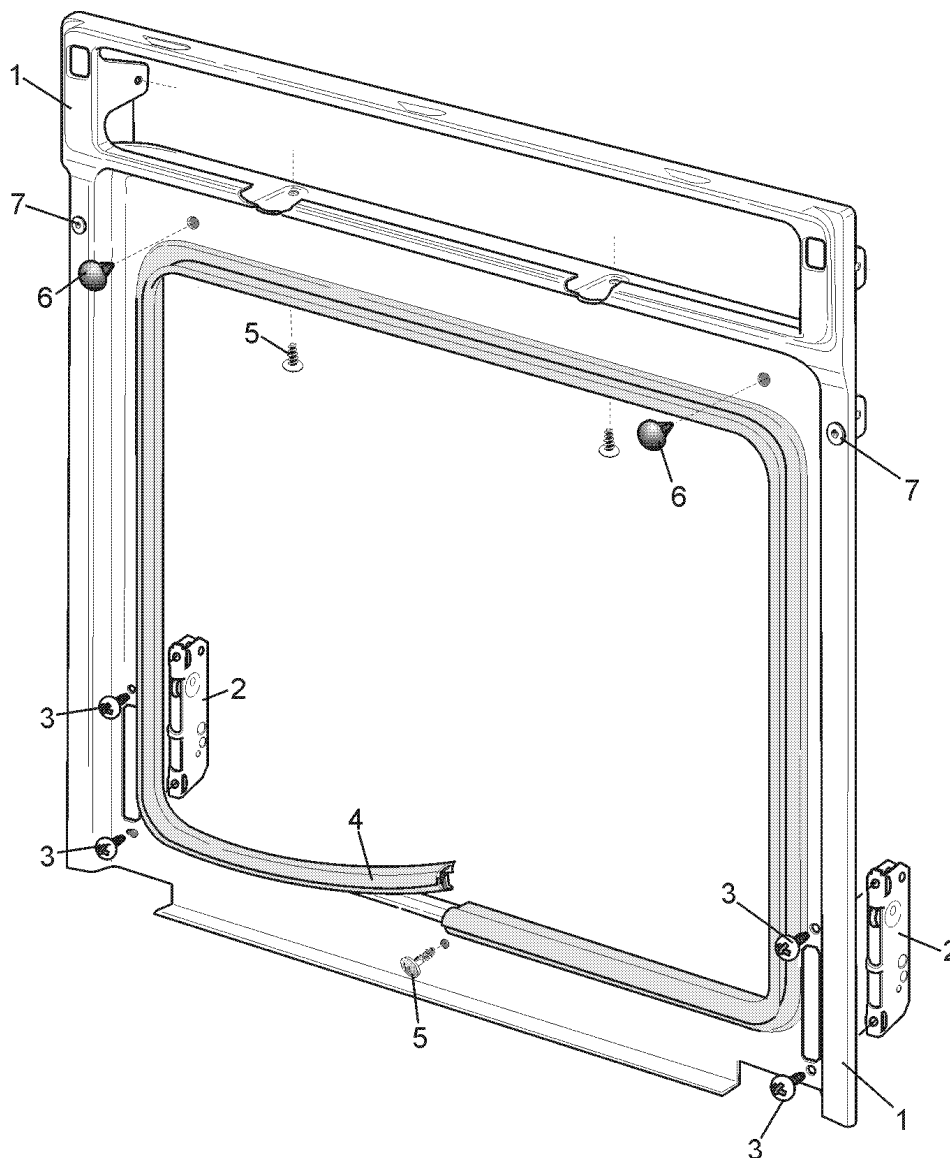
CONTENTS	PAGE Nº
FIRST BUILT DATES	2
CONTENTS	3
CHASSIS ASSEMBLY	4 & 5
FRONT FRAME ASSEMBLY	6
CONTROL PANEL ASSEMBLY	7
OVEN ASSEMBLY	8 & 9
HOB ASSEMBLY	10
INTERNAL PACK	11
OVEN DOOR ASSEMBLY	12
STORAGE DRAWER ASSEMBLY	13
CIRCUIT DIAGRAM	14

NOTE: In Parts Listings

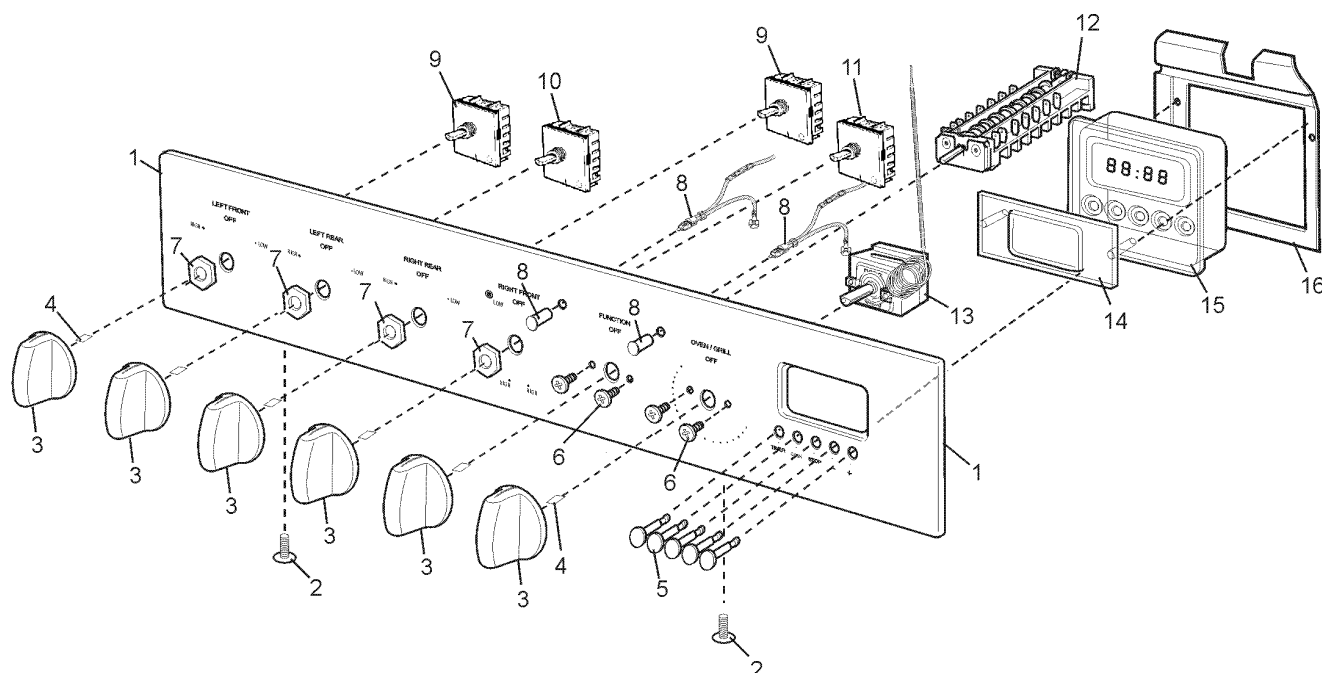
N.I. = Not Illustrated
N.P.A. = No Part Available
N.P.N. = Not Used on this Model



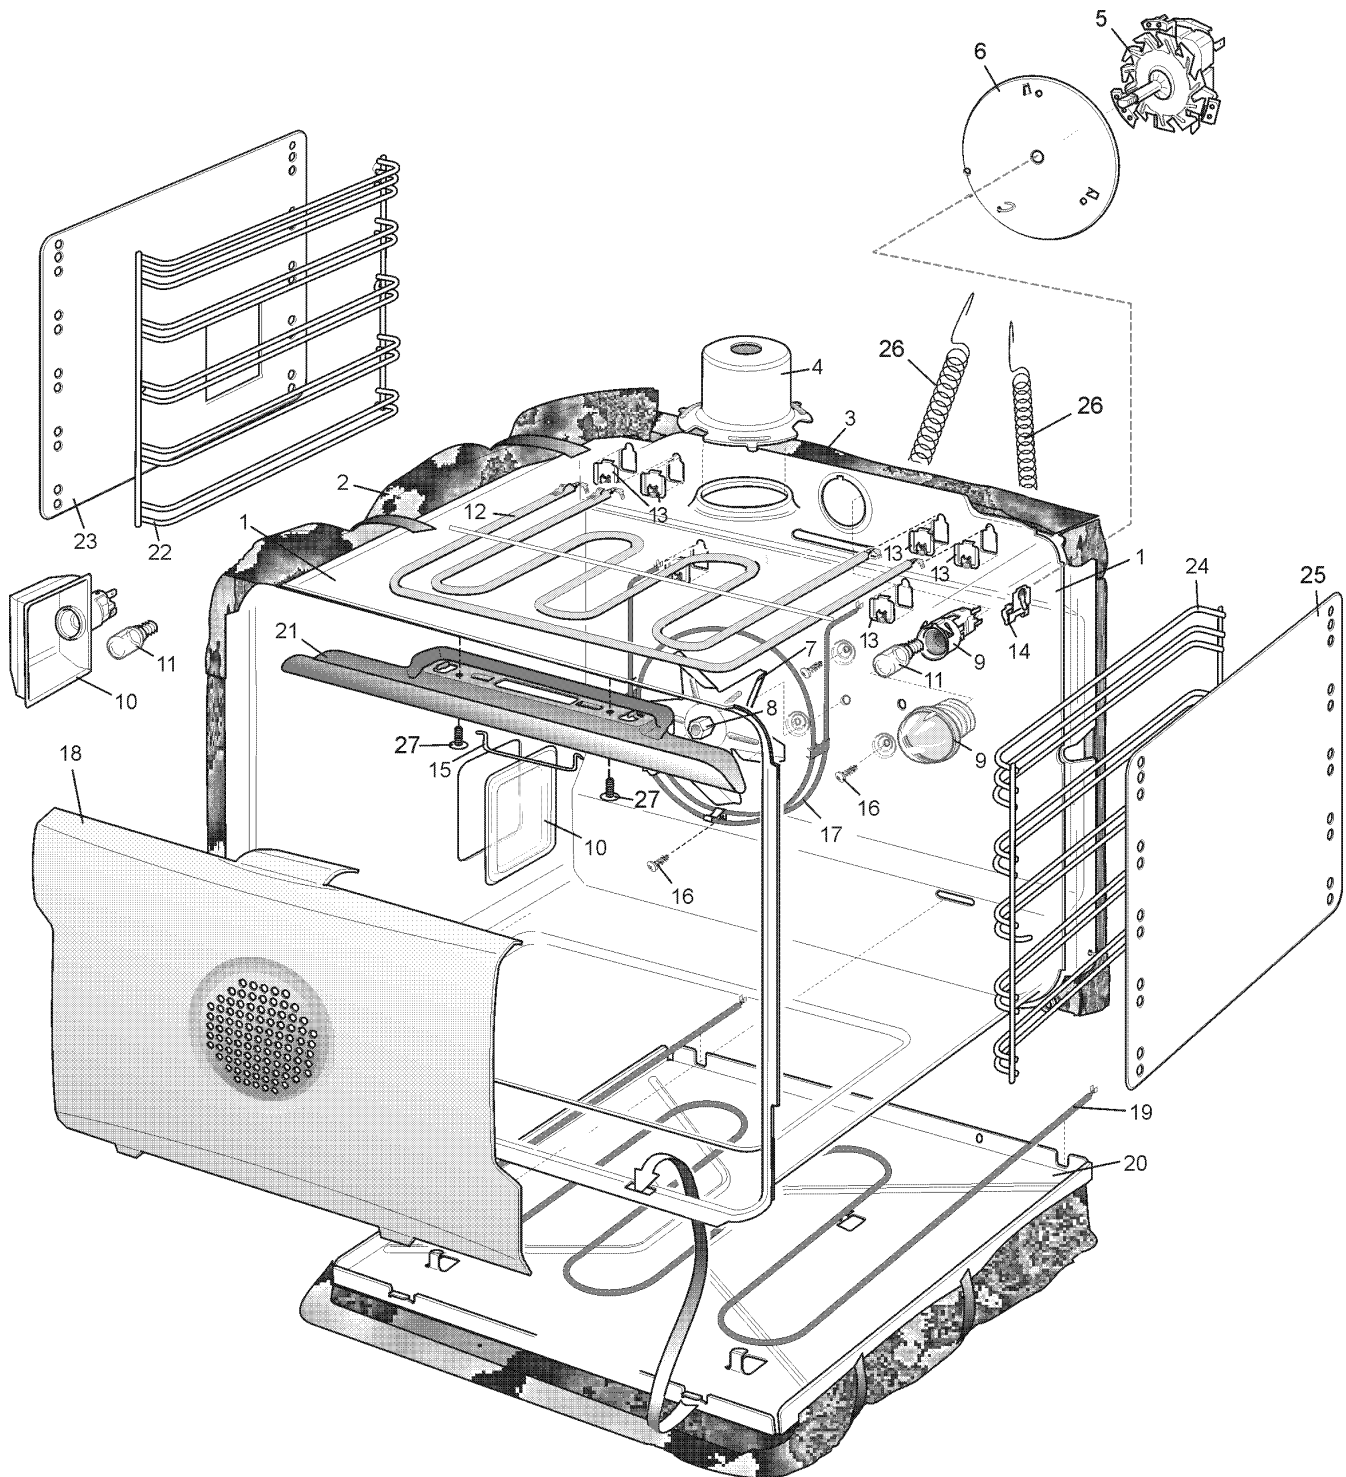
ITEM	PART N°	DESCRIPTION Ex. 4942	QTY
1	0038 003 253	Panel Deck Inter	1
2	0541 001 242	Thermal Cutout 120°C N/C	1
3	0349 001 340	Shield Vent Baffle	1
4	0214 002 075	Motor Fan Cooling Class H 1500	1
5	0257 001 013	Canopy Fan	1
6	0701 009 022	Screw N° 8 x 12mm PD	x
7	0012 018 692	Support Side Panel Blk Slot In U/R	2
8	0030 024 069	Bracket Mount Term Block Bent	1
9	0038 006 737	Panel Side 600 U/R S/S LH	1
10	0038 006 736	Panel Side 600 U/R S/S RH	1
11	0700 027 013	Screw 3/16" x 1" Pan #2 Phil NI	1
12	0706 009 002	Washer 3/16" Int S/P ZC	1
13	0712 002 017	Washer Cup Terminal 3/16 H198	1
14	0712 002 026	Washer 7/32 x 3/8 BR H150W	1
15	0705 002 053	Nut 3/16" BSW Hex NI	3
16	0701 015 006	Screw #8 x 1/2 Hex NI	x
17	0030 024 068	Bracket Mount Hob Carcase	2
18	0701 002 113	Screw #6 x 9.5mm Pan Phil ZC	8
19	0541 001 241	Thermal Cutout 70°C N/O	1
23	0179 002 080	Terminal Block (3 Term W/Link)	1
31	0038 008 012	Panel Back Wiring 600 Common	2
32	0038 016 682	Panel Bottom Wiring Cover 600	1
33	0030 024 064	Bracket Anti Tilt 600 U/R	2
34	0489 001 139	Brace Lower 600 Welded	1
35	0003 012 591	Bar Weight 600 U/R	1
36	0400 005 081	Tape 3M #4008 3.2 x 10 x 80	2
37	0523 001 037	Foot Levelling 600 U/R	4
38	0489 001 145	Brace Lower Front Assy 600 U/R	1
39	0038 002 603	Panel Kick 600 U/R S/S	1
40	0750 003 028	Screw M5 x 16 Zinc Mush Nibs	2
41	0024 010 063	Slide Runner 600 LH	1
42	0024 010 064	Slide Runner 600 RH	1
43	0251 001 088	Stop/Slide Plastic Drawer	2

MODEL: ESE6634S**EX. VIEW DRAWING 3822
FRONT FRAME
ASSEMBLY**

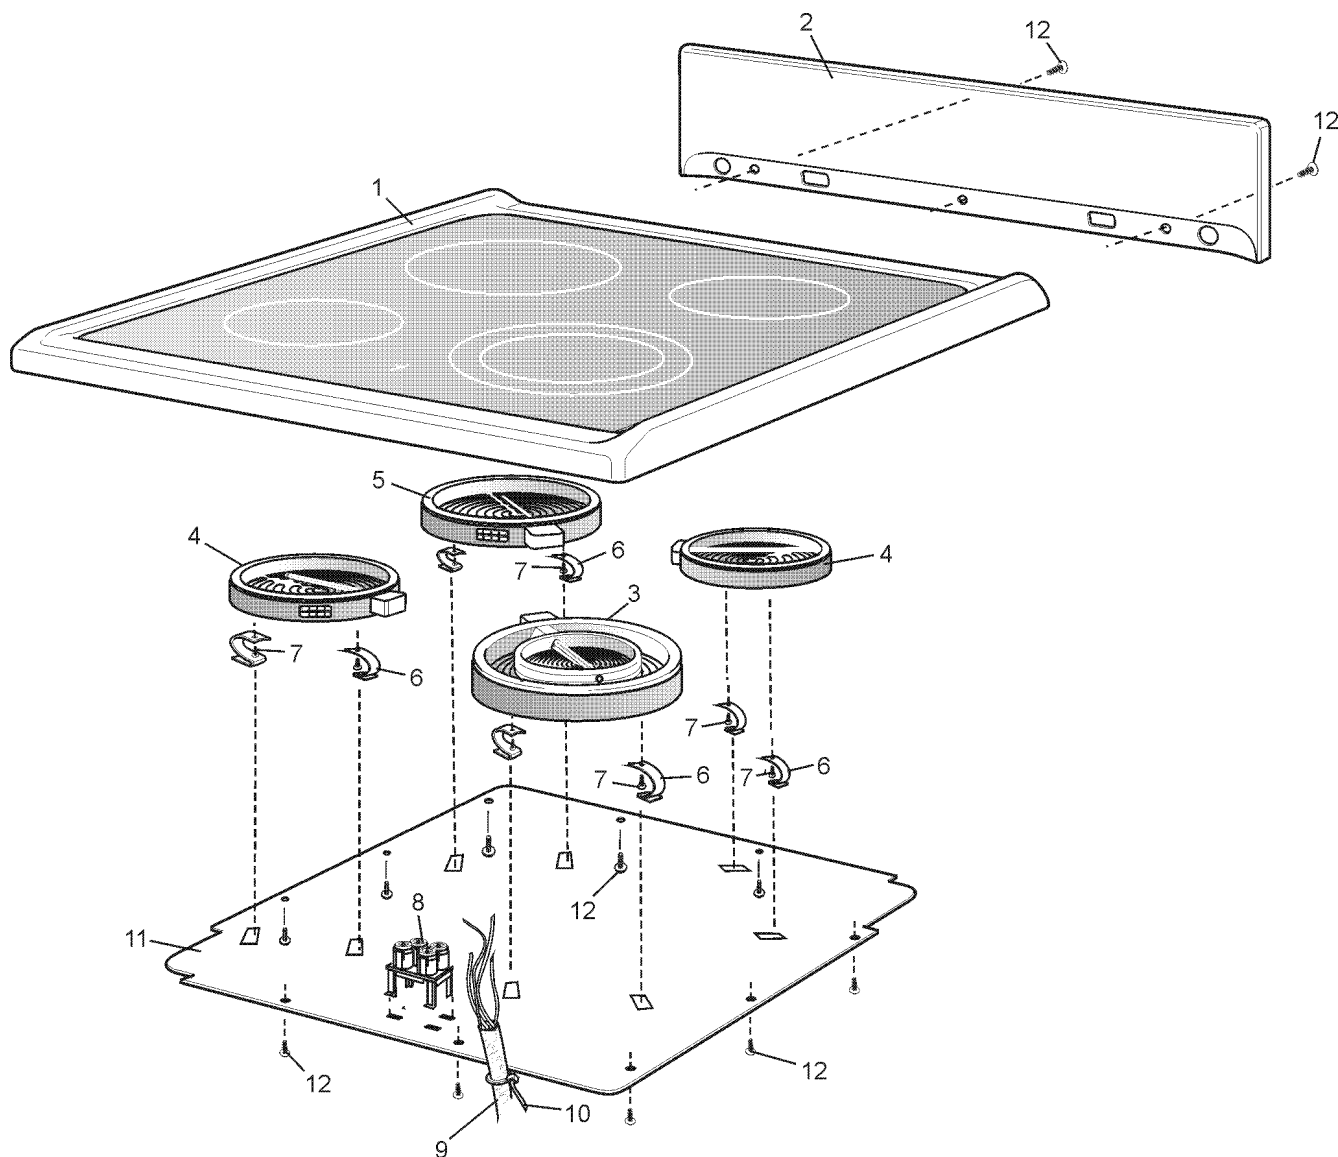
ITEM	PART N°	DESCRIPTION	Ex. 3822	QTY
1	0081 009 146	Frame Front Enamel 600 U/R		1
2	0133 002 211	Support Counter Hinge Door		2
3	0750 006 005	Screw M5 x 9 Csk Blk Zinc		4
4	0188 002 236	Seal Oven 1675mm OC98		1
5	0701 009 027	Screw N° 8 x 1/2 Mush PH#2 AB BK		3
6	0589 001 032	Bumper Stop Blk		2
7	0049 001 193	Plug Dome 600 U/R		2

MODEL: ESE6634S**EX. VIEW DRAWING 4949
CONTROL PANEL
ASSEMBLY**

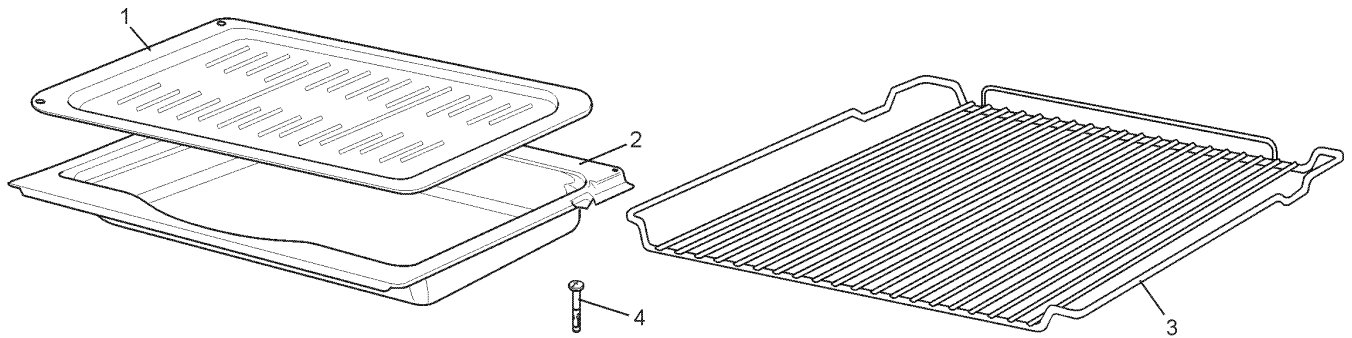
ITEM	PART N°	DESCRIPTION	Ex. 4949	QTY
1	# 0038 011 911	Panel Control S/S ESE6633S		1
2	0701 009 027	Screw #8 x 1/2" Mush #2PH AB BK		2
3	0019 007 974	Knob Chef S/S		6
4	29143982	Clip Spring Knob (Part of Items 3 & 4)		6
5	0574 001 237	Button Clock West S/S 600 U/R		5
6	0150 005 259	Screw M4 x 5 Pan # 2 PH Small HD		4
7	0065 009 209	Nut Metric M10 x 0.75		4
8	0609 100 269	Light Indicator Neon 240V		2
9	0534 001 654	Switch Inf/Heat MP 101 EA		2
10	0534 001 655	Switch Inf/Heat Isolated Pilot		1
11	0534 001 684	Switch Inf/Heat MDP 102 EA		1
12	0534 001 702	Switch M/Function 8 Qik Heat Maxi Grill		1
13	0541 001 931	Thermostat Oven EGO		1
14	# 0600 001 020	Lens West 600 U/R		1
15	# 0630 001 074	Clock Eaton 5 Button		1
16	# 0030 024 123	Bracket Lens		1
Note: #When replacing the Control Panel, Lens or Clock , the Bracket 0030 024 123 will also need to be replaced.				



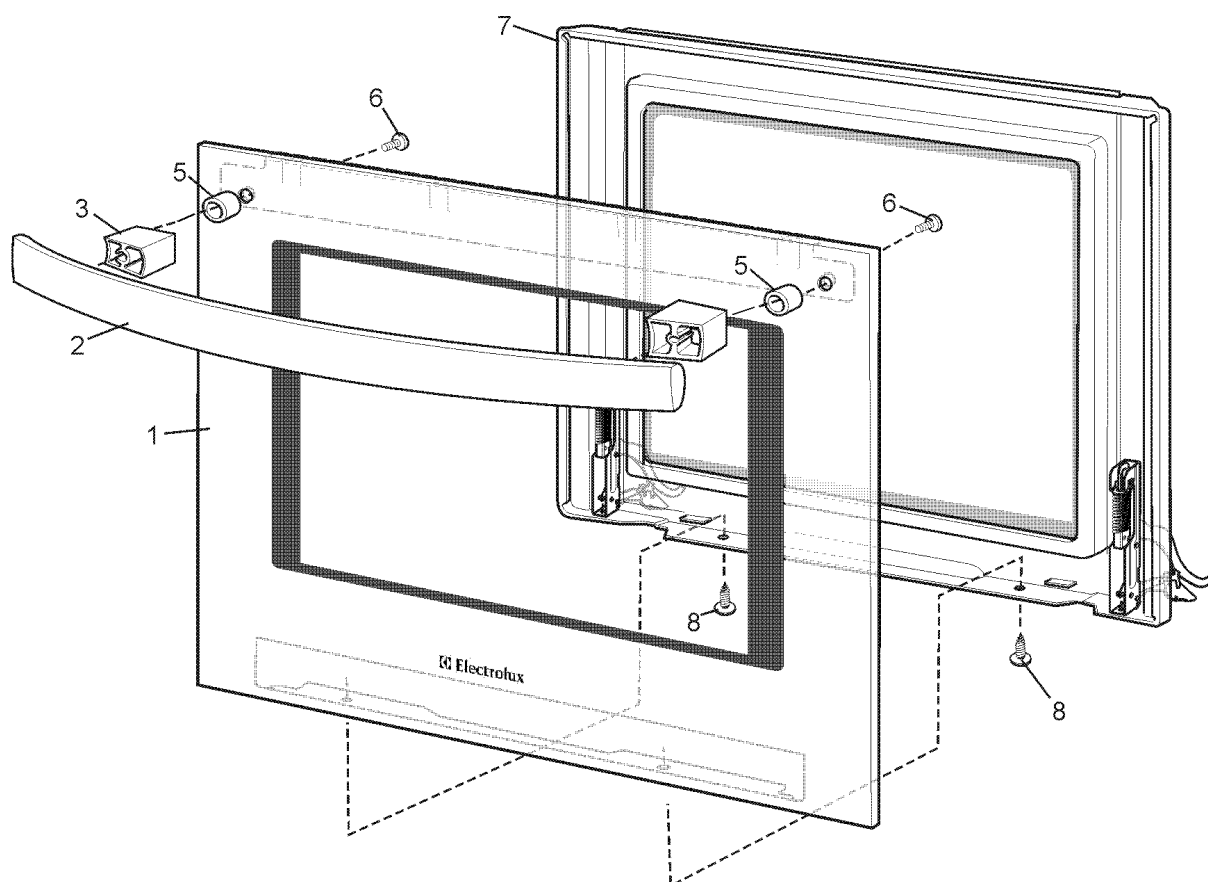
ITEM	PART N°	DESCRIPTION Ex. 4496	QTY
1	0395 002 058	Oven Enamel Black Prem Westinghouse	1
2	0374 005 171	Insulation Oven Wrap Elec OC98	1
3	0374 005 142	Insulation Oven Back Elec	1
4	0047 003 095	Vent Tube Electric	1
5	0214 777 123	Motor Fan Oven	1
6	0022 040 950	Plate Backing Motor Fan	1
7	0026 001 039	Fan Impellor 152mm	1
8	0065 009 240	Nut M6 L/H Fan Motor Sel	1
9	0212 002 074	Holder Lamp Assy (Inc. Item 11)	1
10	0212 002 082	Holder Side Lamp Assy (Inc. Item 11)	1
11	LM003	Lamp 25W SES 300°C	2
12	0122 004 501	Element Gr/Boost EGO	1
13	0125 008 345	Clip Mounting Element	6
14	0707 018 003	Clip Bulb Thermostat Electric	2
15	0012 018 672	Support Element Grill	1
16	0701 002 116	Screw N° 10 TC x ¾" Pan PH ZC AB	4
17	0122 004 506	Element Oven Fan 2200W	1
18	0038 016 508	Panel Fan Baffle Catalytic	1
19	0122 004 494	Element Clean Heat 1500W EGO	1
20	0028 025 290	Cover Clean Heat	1
21	0008 001 088	Deflector Oven Blk	1
22	0327 001 146	Rack Side Oven 5 Position LH	1
23	0625 001 263	Liner Oven Catalytic Side Lamp	1
24	0327 001 154	Rack Side Oven 5 Position RH	1
25	0625 001 259	Liner Oven Catalytic	1
26	0173 008 050	Wire Insulation Back Formed	2
27	0701 009 031	Screw #8 x 9/16 B/HD S/PT BKOX	2



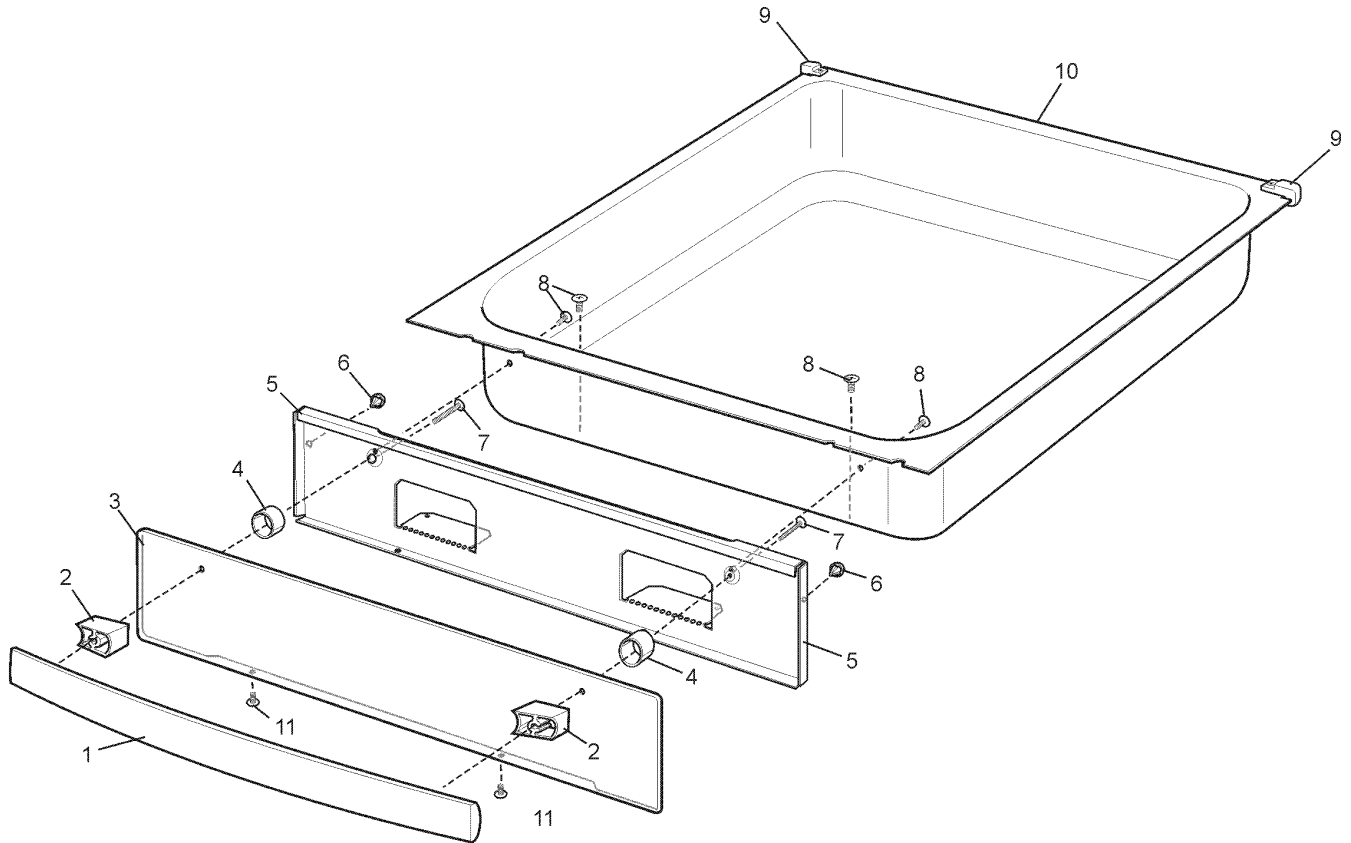
ITEM	PART N°	DESCRIPTION	Ex. 3548	QTY
1	0602 002 806	Hob & Glass S/S Cer Hybrid		1
2	N.P.N.	Panel Splash 600 U/R S/S		1
3	389 0827 02	Element Dual 2200/750W		1
4	389 0700 22	Element Ceramic 165Dia 1200W		2
5	389 0728 22	Element Ceramic 215Dia 2000W		1
6	0125 008 346	Clip Mounting Element Ceram		8
7	0701 002 113	Screw N° 6 x 9.5mm Pan Phil ZC		8
8	0060 002 079	Light Indicator Hot Zone		1
9	0126 010 056	Sleeve Insulation		1
10	0712 003 037	Tie Cable 4"		5
11	0038 016 698	Panel Bottom Ceramic 600 U/R		1
12	0701 009 027	Screw N° 8 x 1/2" Mush #2PH AB BK		13



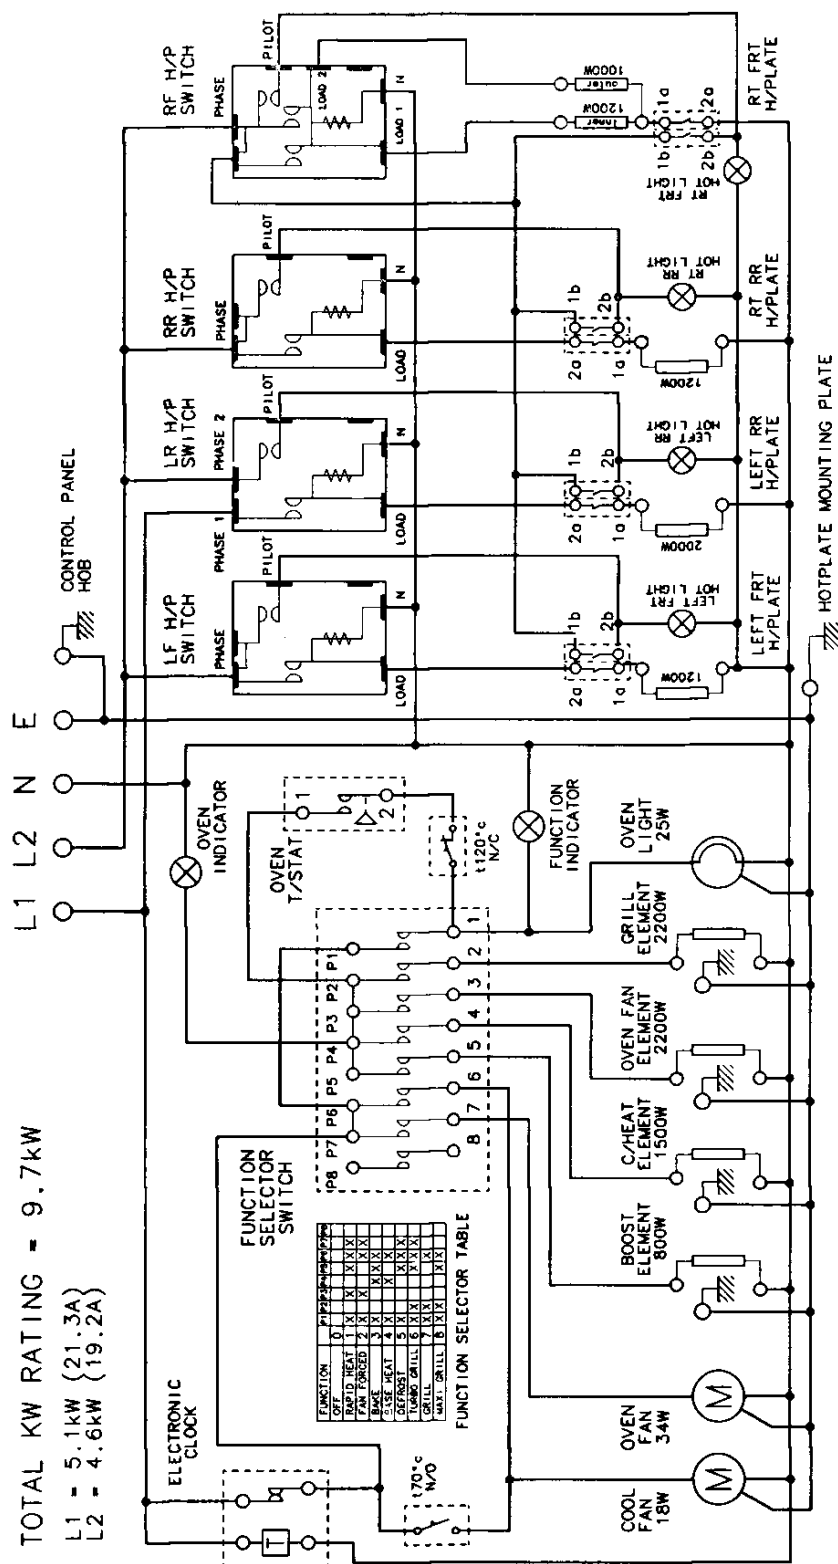
ITEM	PART N°	DESCRIPTION	Ex. 4956	QTY
1	0028 025 353	Cover Grill Dish Smokeless Large Premium		1
2	0036 001 082	Dish Grill Enam Black		1
3	0327 001 145	Shelf Oven Electric		2
4	0116 001 001	Bolt Masonry Anchor		4
N.I.	0701 003 070	Screw #6 x 25 CSK #2PH AB BK		4

MODEL: ESE6634S**EX. VIEW DRAWING 5160
OVEN DOOR
ASSEMBLY**

ITEM	PART N°	DESCRIPTION	Ex. 5160	QTY
1	0038 002 636	Panel Outer Ov/Door Premium S/S		1
2	0050 010 730	Handle Bar Premium S/S		1
3	0160 003 592	End Cap Premium S/S		2
5	0271 001 313	Spacer Handle S/S Kylie Doors		2
6	0702 004 012	Screw ZP 3/16 x 30 Pan PH Trilob GP		2
7	0038 001 806	Panel Inner Ov/Door Assy Premium		1
8	0701 009 031	Screw #8 x 9/16" B/HD S/PT BKOX		2

MODEL: ESE6634S**EX. VIEW DRAWING 4958
STORAGE DRAWER
ASSEMBLY**

ITEM	PART N°	DESCRIPTION	Ex. 4958	QTY
1	0050 010 730	Handle Bar Premium S/S		1
2	0160 003 592	Endcap Handle Premium S/S		2
3	0038 002 556	Panel Outer Storage Draw S/S		1
4	0271 001 299	Spacer Handle Warmer Drawer		2
5	0038 001 811	Panel Inner Storage/Drawer Black		1
6	0589 001 032	Bumper Stopper Black		2
7	0750 003 031	Screw BSW ZP 3/16 x 1.25"		2
8	0702 007 050	Screw #8 x 5/8 T25 #2PH NI		4
9	0251 001 088	Stop/Slide Plastic Drawer		2
10	0064 001 228	Drawer Storage Painted 600 U/R		1
11	0701 002 113	Screw #6 x 9.5 Pan Phil ZC		2

**WARNING**

IT IS ILLEGAL FOR PERSONS OTHER THAN LICENSED ELECTRICAL MECHANICS OR PERSONS AUTHORISED BY LEGISLATION TO WORK ON THE FIXED WIRING OF ANY ELECTRICAL INSTALLATION. PENALTIES FOR CONVICTION ARE SEVERE.

IMPORTANT SAFETY NOTICE

This diagram has been prepared for use by electrically qualified service technicians. The manufacturer cannot be held responsible for the interpretation of its service publications nor for any injury or damage that may occur in connection with their use.