



ELECTROLUX HOME PRODUCTS PTY LTD
ABN 51 004 762 341

Technical Publication N° CE551.docx

Issue: 1
Date: 9/11

AEG

***ELECTRIC
COMPACT OVENS***

MODEL:

**KE7415001M
PNC 947727203**

First Built Dates:	
KE7415001M	8/11


CONTENTS	PAGE N°
FIRST BUILT DATES	2
CONTENTS	3
ELECTRICAL COMPONENTS	4 - 5
OVEN ASSEMBLY	6 - 7
CONTROL PANEL	8
CHASSIS ASSEMBLY	9
OVEN DOOR ASSEMBLY	10
CIRCUIT DIAGRAM	11

NOTE: In Parts Listings

N.I. = Not Illustrated
N.P.A. = No Part Available
N.P.N. = Not Used on this Model

MODEL: KE7415001M
PNC: 947727203


EX. VIEW DRAWING P00003034965
ELECTRICAL COMPONENTS

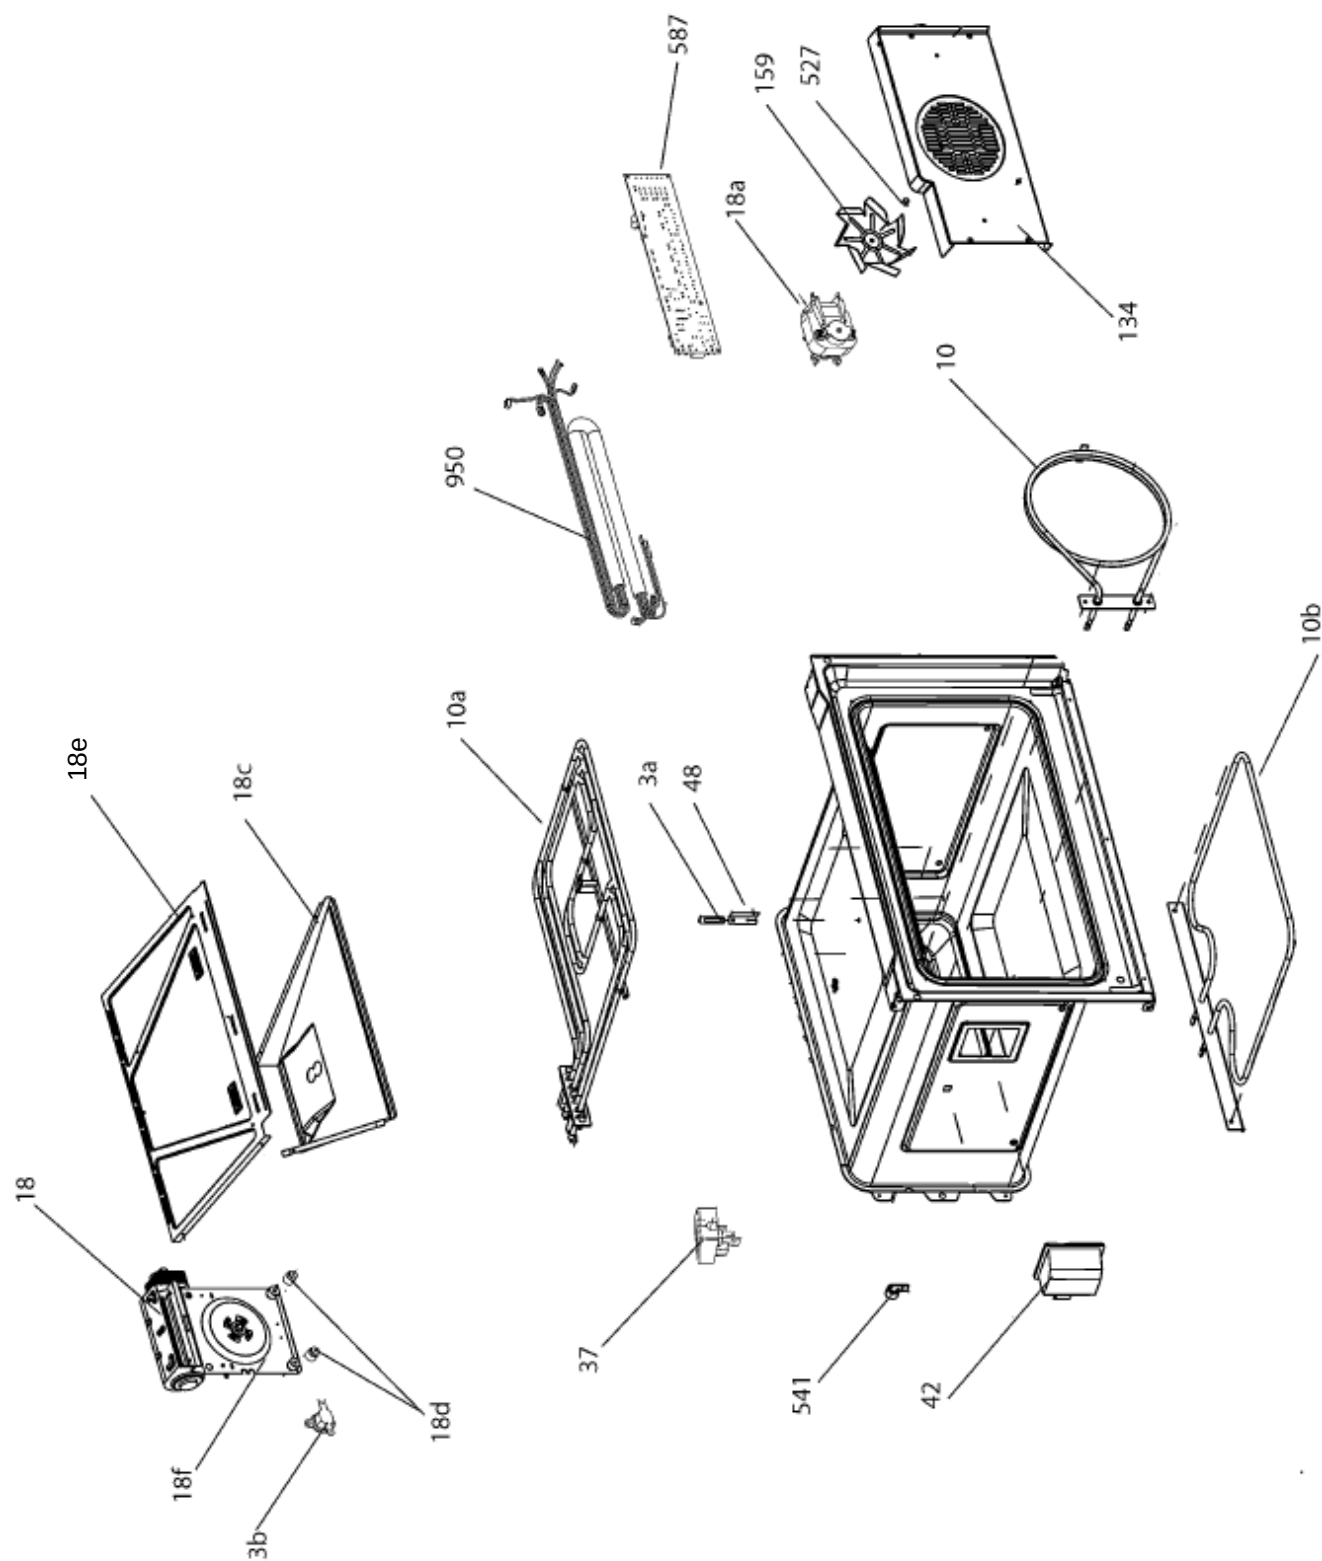

ITEM	PART N°	DESCRIPTION Ex P00003034965	QTY
3A	4055087656	TEMPERATURE PROBE	1
3B	2021764	ASS. SAFETY THERMOSTAT HP	1
10	4055087359	HEATING ELEMENT RING BACK 1800W 230V	1
10A	4055087342	HEATING ELEMENT TOP 1500+1100W	1
10B	4055087391	HEATING ELEMENT BOTTOM	1
18	4055087482	COOLING FAN	1
18A	4055087490	FAN MOTOR	1
18C	4055087748	BOTTOM COOLING FAN	1
18D	4055087466	DISTANCE BOLT MOTOR SUPPORT	2
18E	4055087755	COVER UPPER COOLING FAN	1
18F	4055087458	MOTOR SUPPORT	1
37	3140701	MAINS CONNECTION 3 POLES PA 244	1
42	4055087367	LAMP HOLDER SIDE LAMP 25W	1
48	4055087649	TEMPERATURE PROBE PT1000	1
134	4055087680	FAN COVER OVEN	1
159	4055087508	FAN	1
527	4055087516	NUT FAN	1
541	4055087383	CABLE CLAMP	1
587	4055087565	PCB	1
950	4055087938	HARNESS OVEN	1
N.I.	3140801	MAINS CORD 3G1,5	1

MODEL: KE7415001M
PNC: 947727203

EX. VIEW DRAWING P00003019664
OVEN ASSEMBLY

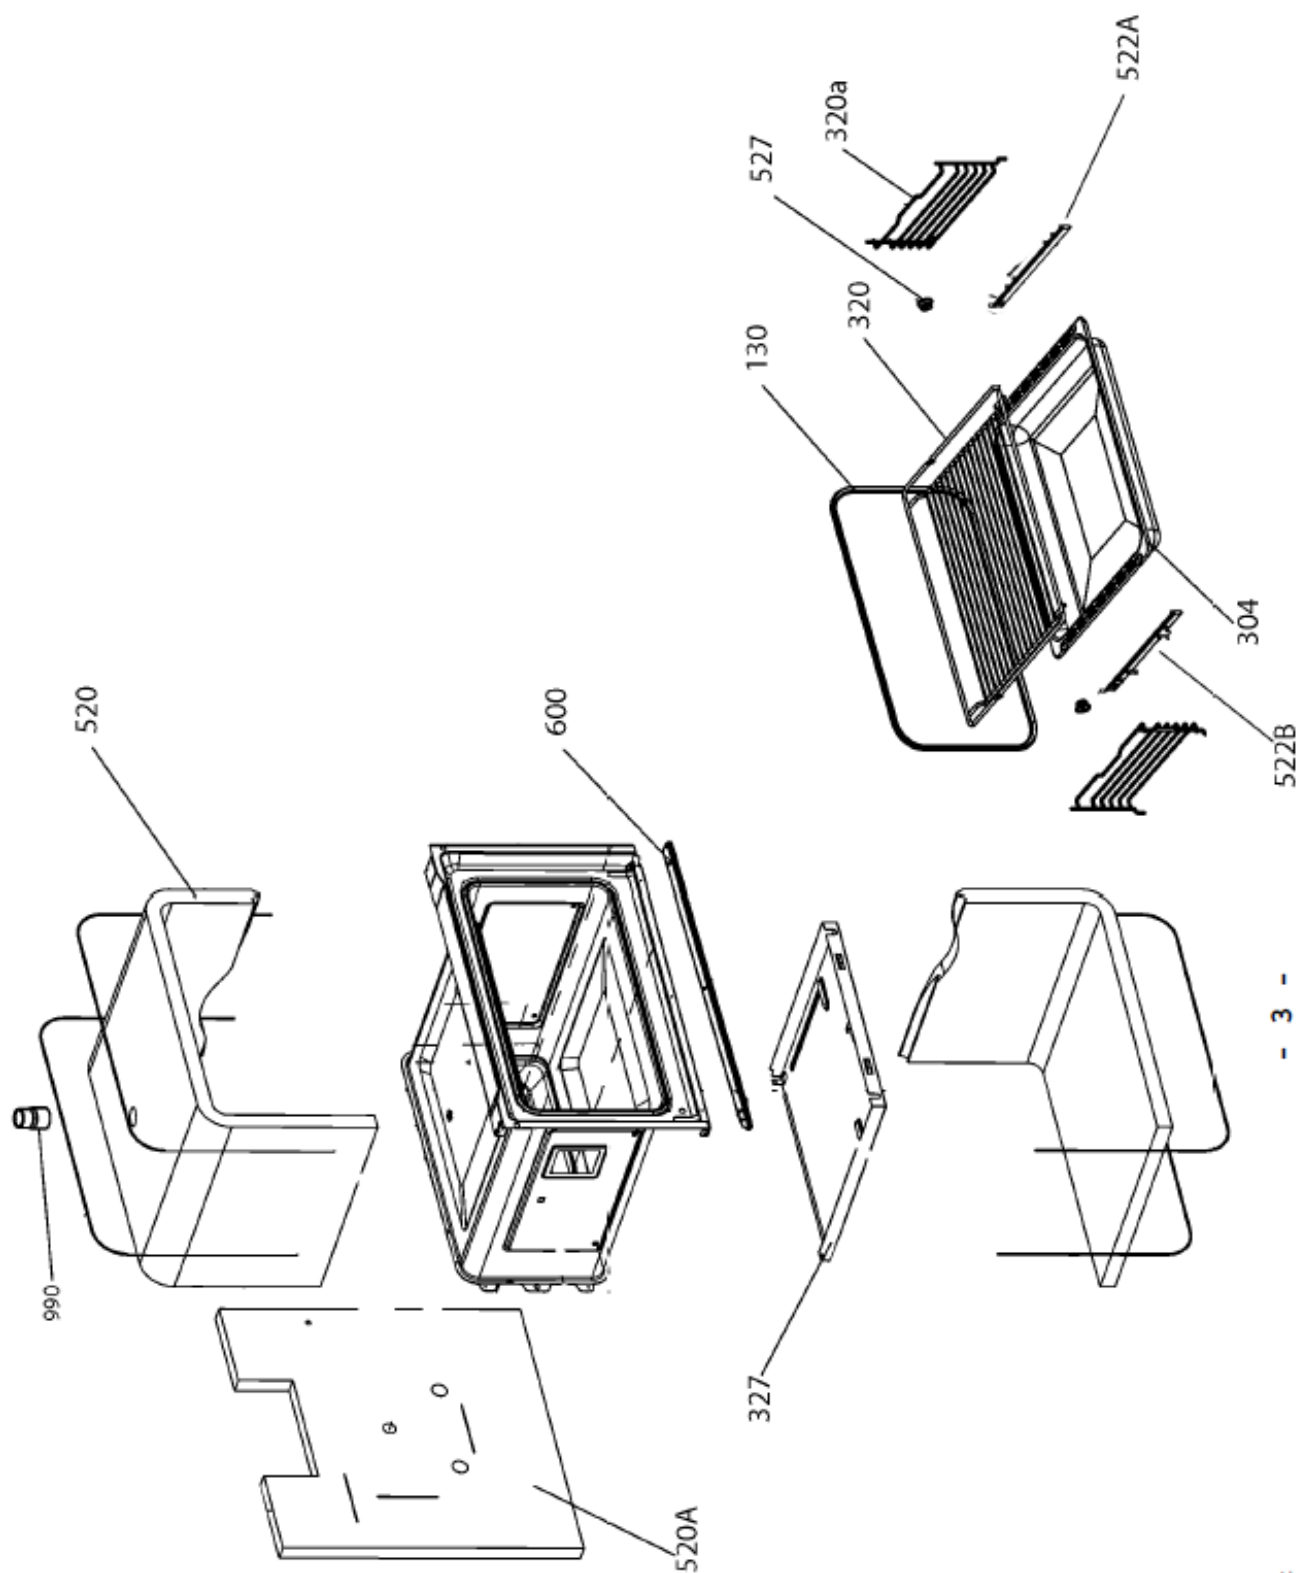


x

- 3 -

ITEM	PART N°	DESCRIPTION Ex P00003019664	QTY
130	4055087672	OVEN SEALING OVEN	1
304	4055087714	ROASTING TRAY	X
320	4055087722	OVEN GRILL	X
320a	4055087987	GRATING LEFT-RIGHT	2
327	4055087409	COVER BOTTOM OVEN	1
520	4055087425	INSULATION CAVITY	1
520A	4055087417	INSULATION BACK	1
522B	4055088001	SLIDE BAR OVEN LEFT	1
522A	4055087995	SLIDE BAR OVEN RIGHT	1
527	4055087706	SHAFT FIXING GRATING	2
600	4055087805	TRIM FRONT OVEN	1
990	4055087730	CHIMNEY OVEN	1
N.I.	4055070280	TERMINAL BOARD	1

MODEL: KE7415001M
PNC: 947727203

EX. VIEW DRAWING P00003035033
CONTROL PANEL ASSEMBLY

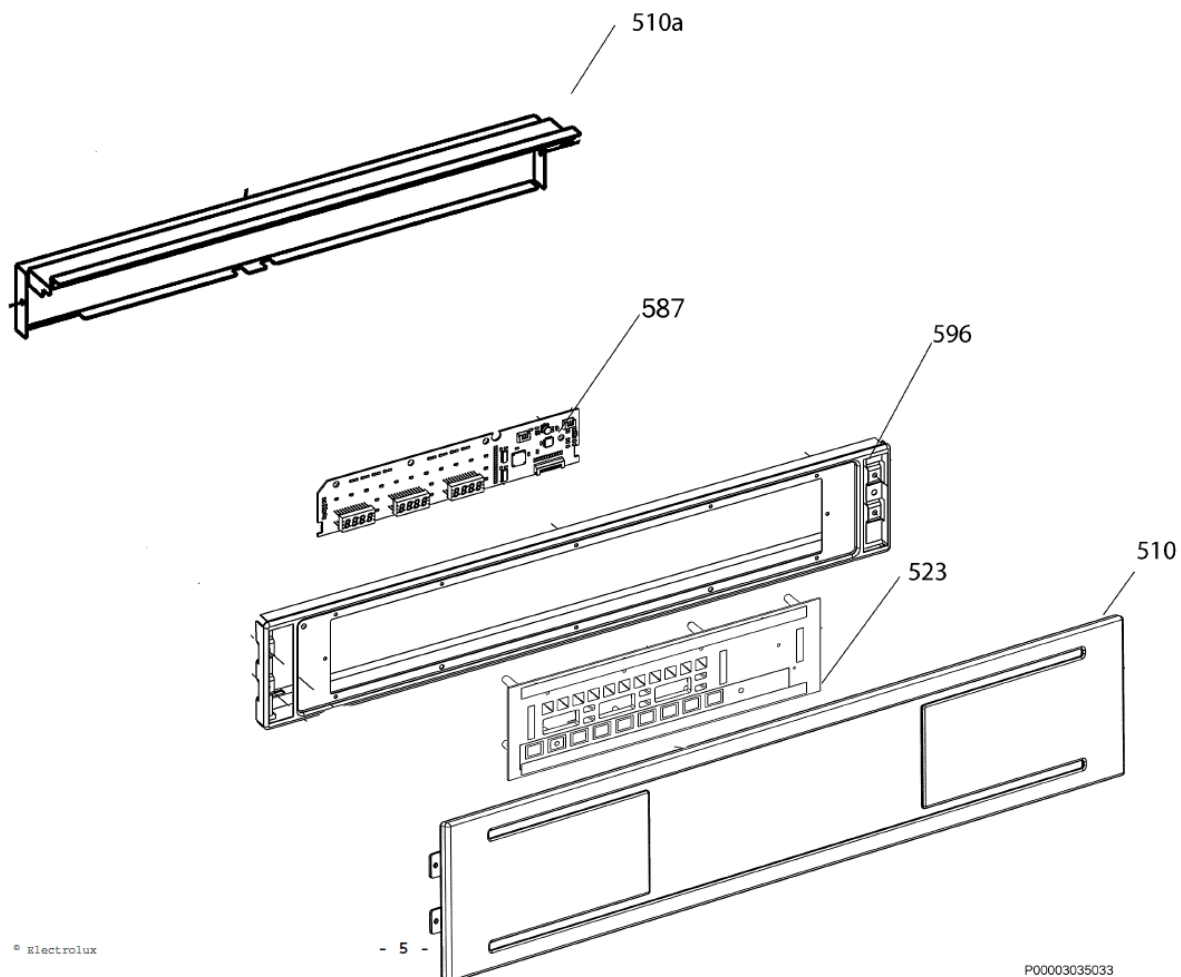

© Electrolux


- 5 -

P00003035033

ITEM	PART N°	DESCRIPTION Ex P00003035033	QTY
510	4055126157	FRONT GLASS ASSEMBLY GLUED P10	1
510A	4055087763	COVER CONTROL PANEL	1
523	4055087953	LIGHT BAR TOUCH CONTROL	1
587	4055087946	USER INTERFACE BOARD DISPLAY	1
596	4055087979	SUPPORT CONTROL PANEL	1

MODEL: KE7415001M
PNC: 947727203


EX. VIEW DRAWING P00003019643
CHASSIS ASSEMBLY

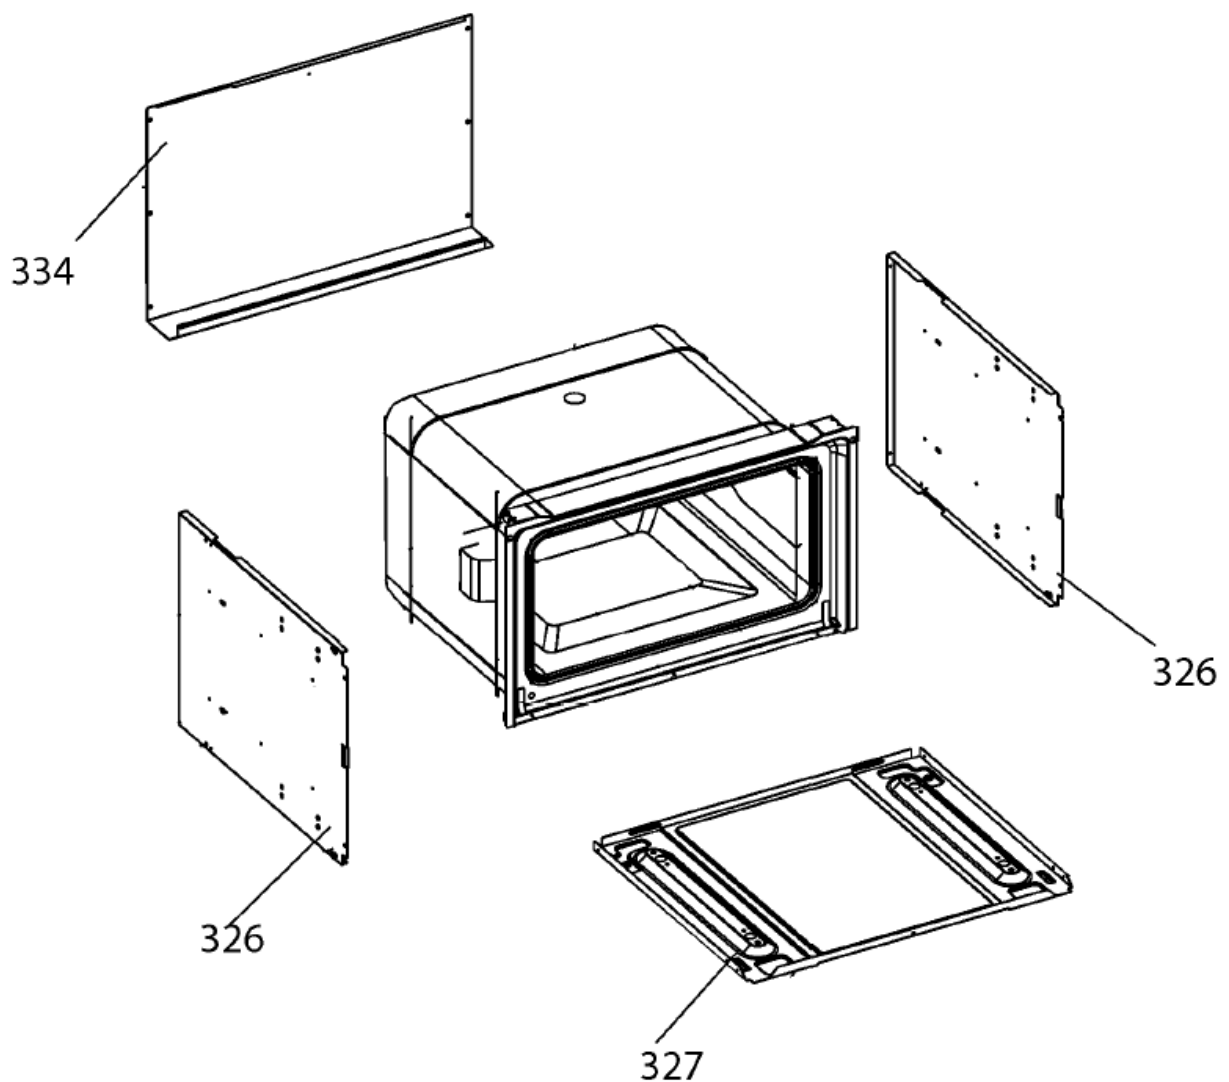

ITEM	PART N°	DESCRIPTION P00003019643	QTY
326	4055087664	CATALYST LEFT-RIGHT	2
327	4055087615	BOTTOM COVER	1
334	4055087771	PANEL BACK	1

MODEL: KE7415001M
PNC: 947727203

EX. VIEW DRAWING P00003035035
OVEN DOOR ASSEMBLY

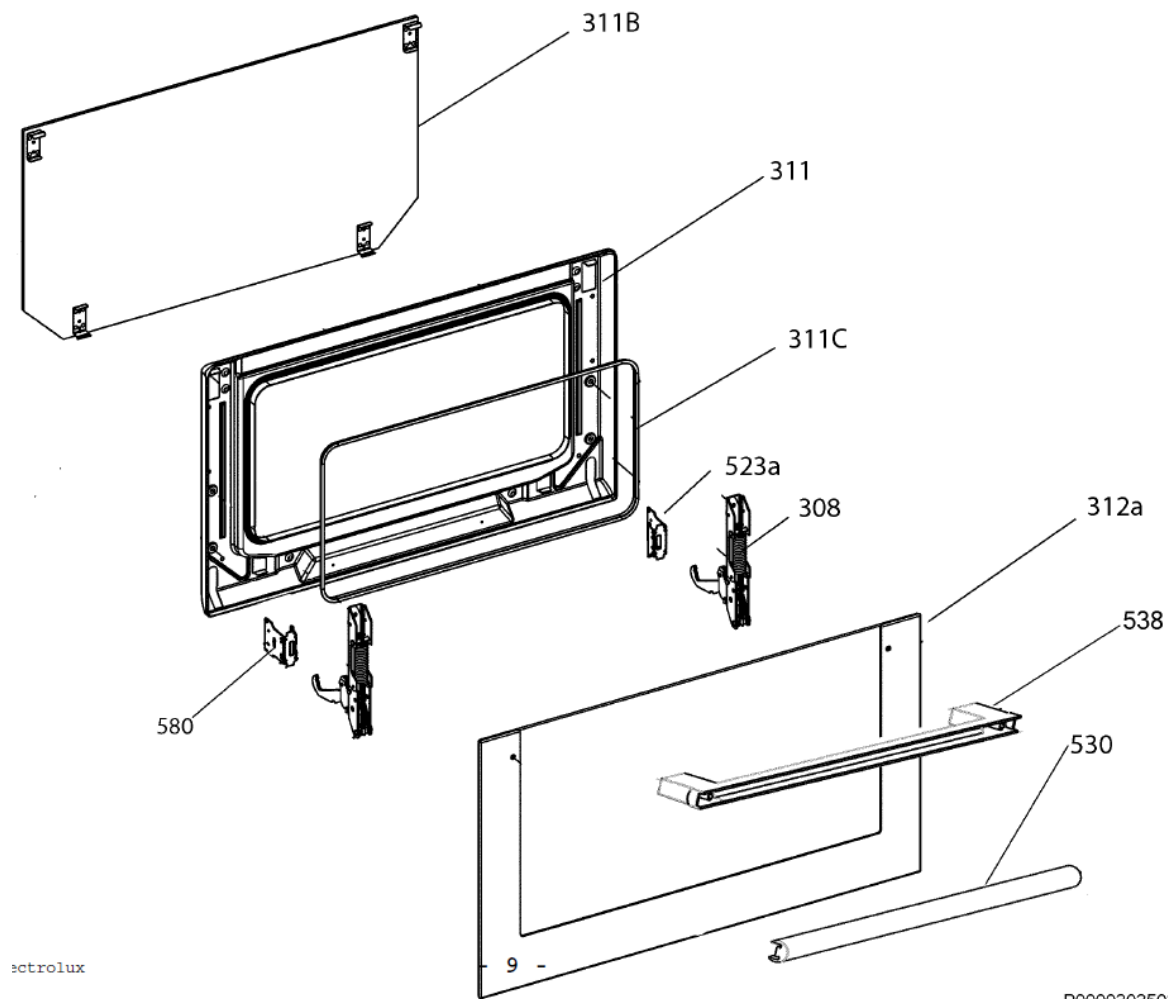


etrolux

P00003035035

ITEM	PART N°	DESCRIPTION	Ex P00003035035	QTY
308	4055087821	DOOR HINGE		2
311	4055087813	INNER DOOR		1
311B	4055087870	DOOR GLASS INNER		2
311C	4055087839	SEALING OVEN DOOR INTERNAL		1
312A	4055126165	GLASS PANEL OVEN DOOR ASSEMBLY P10		1
523	4055087631	HINGE SUPPORT		2
530	4055126173	HANDLE ROUND P10		1
538	4055126181	ADAPTOR HANDLE OVEN P10		1
580	4055087623	DOOR SWITCH COMPLETE		1
NOTE: REFER CE560 FOR DISASSEMBLY INSTRUCTIONS				

MODEL: KE7415001M
PNC: 947727203

CIRCUIT DIAGRAM
EE00388-001

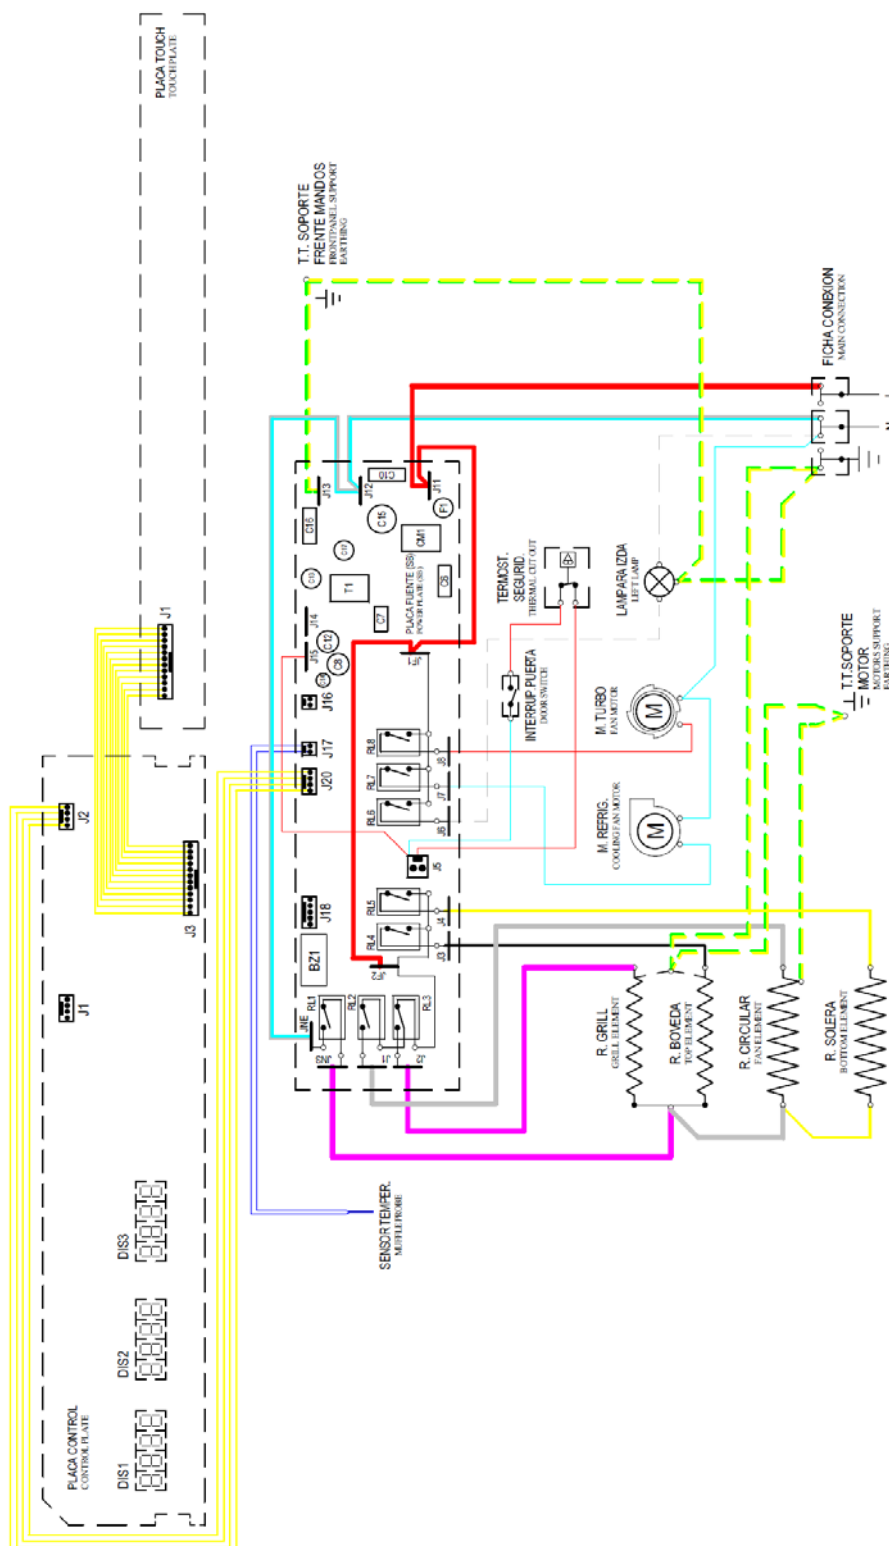

WARNING

IT IS ILLEGAL FOR PERSONS OTHER THAN LICENSED ELECTRICAL MECHANICS OR PERSONS AUTHORISED BY LEGISLATION TO WORK ON THE FIXED WIRING OF ANY ELECTRICAL INSTALLATION. PENALTIES FOR CONVICTION ARE SEVERE.

IMPORTANT SAFETY NOTICE

This diagram has been prepared for use by electrically qualified service technicians. Electrolux cannot be held responsible for the interpretation of its service publications nor for any injury or damage that may occur in connection with their use.