



SERVICE MANUAL

UPRIGHT COOKER

TFGM629XE

DISCLAIMER // THE INFORMATION CONTAINED IN THIS SERVICE MANUAL IS INTENDED FOR LICENSED PERSONNEL ONLY. PLEASE CONTACT ARISIT FOR FURTHER INFORMATION.
[AUSTRALIA] 1300 762 219 [NEW ZEALAND] 09 306 1020




Version 1.1





www.tisira.com

Exploded View

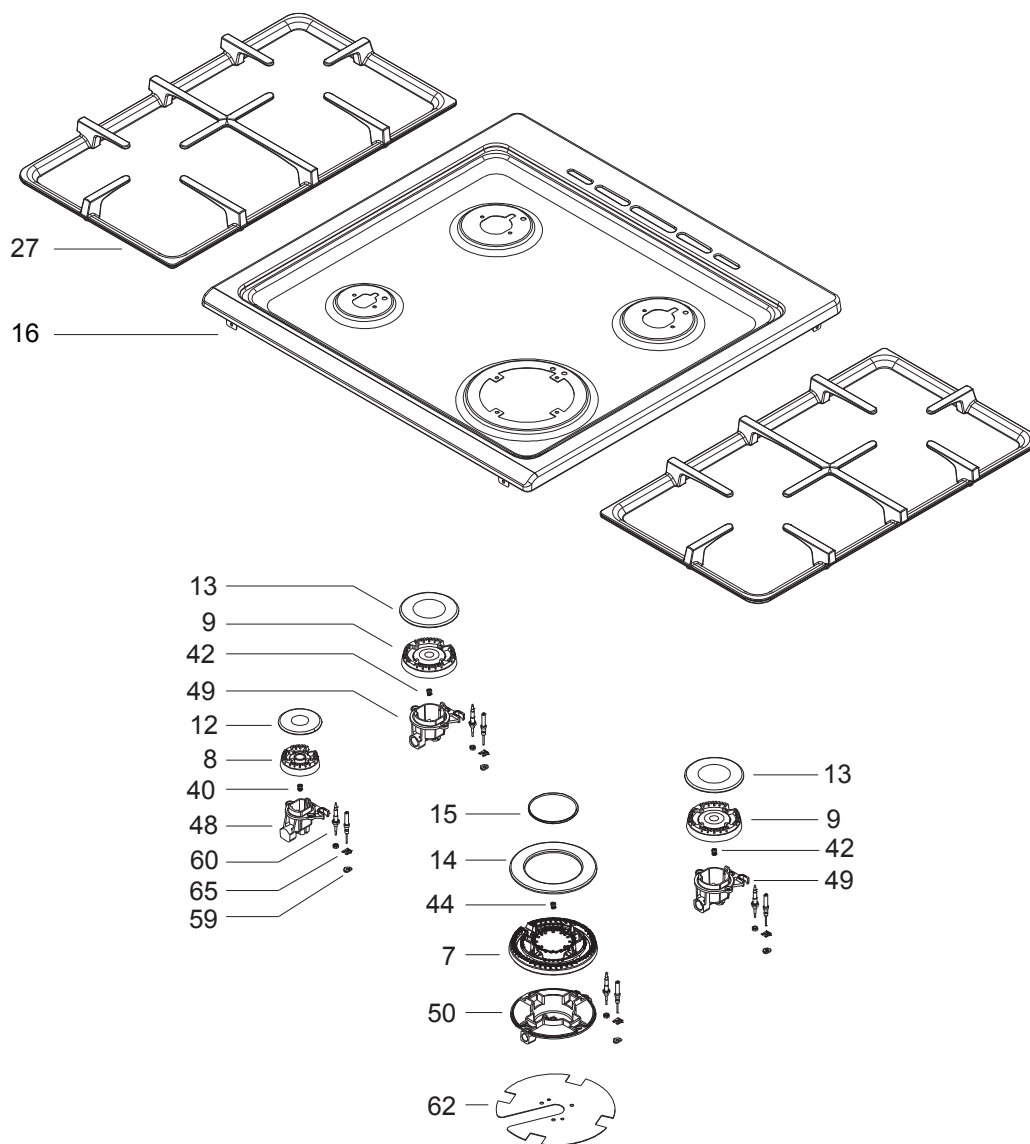


Exploded View

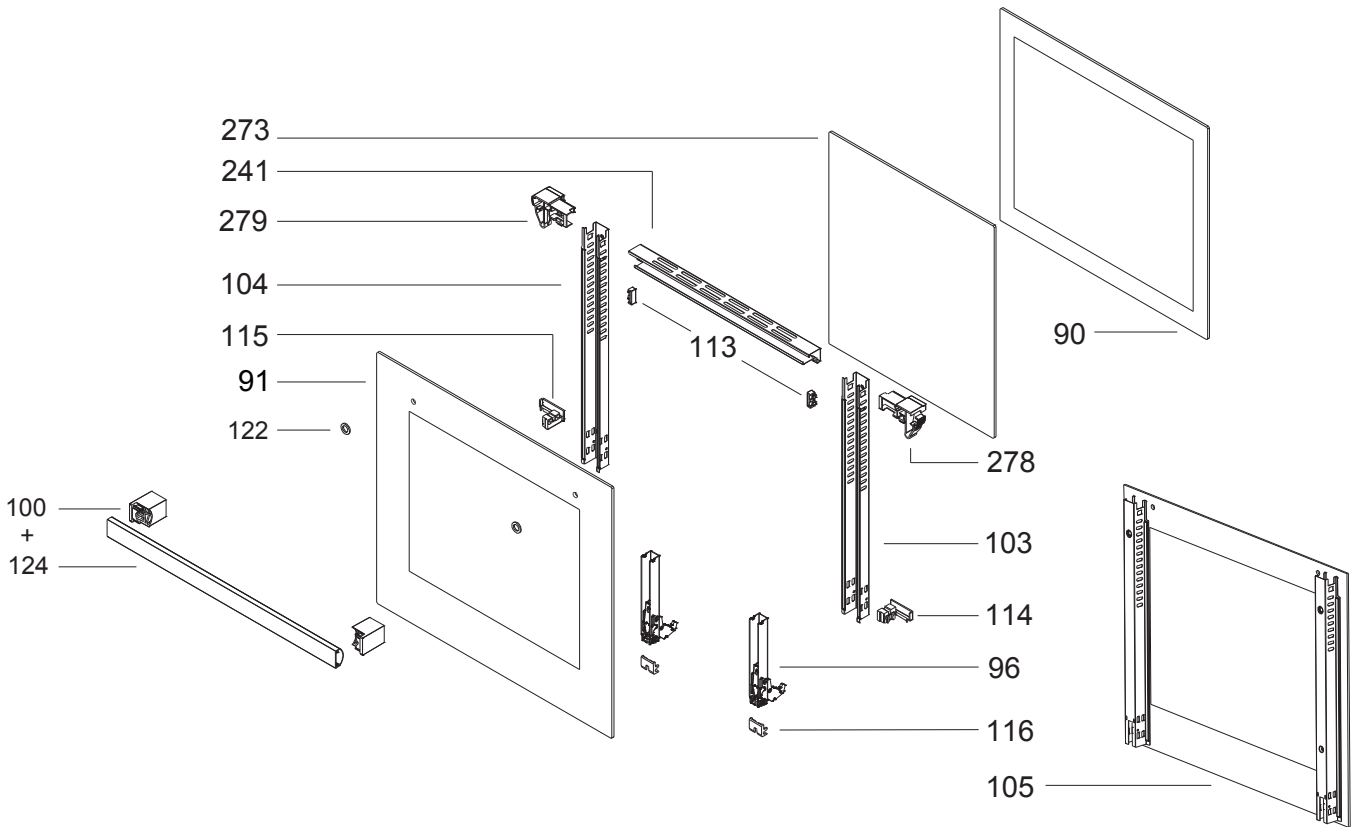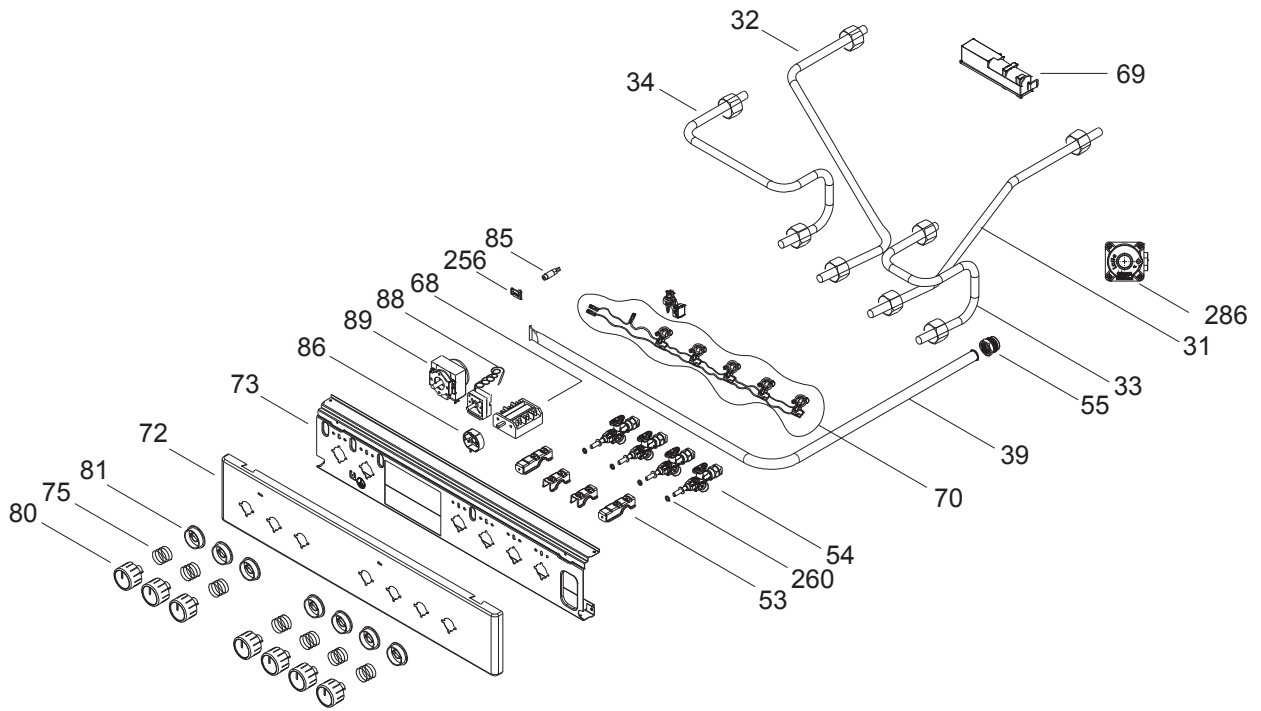


* Complete Door Assembly (5791106)



Exploded View

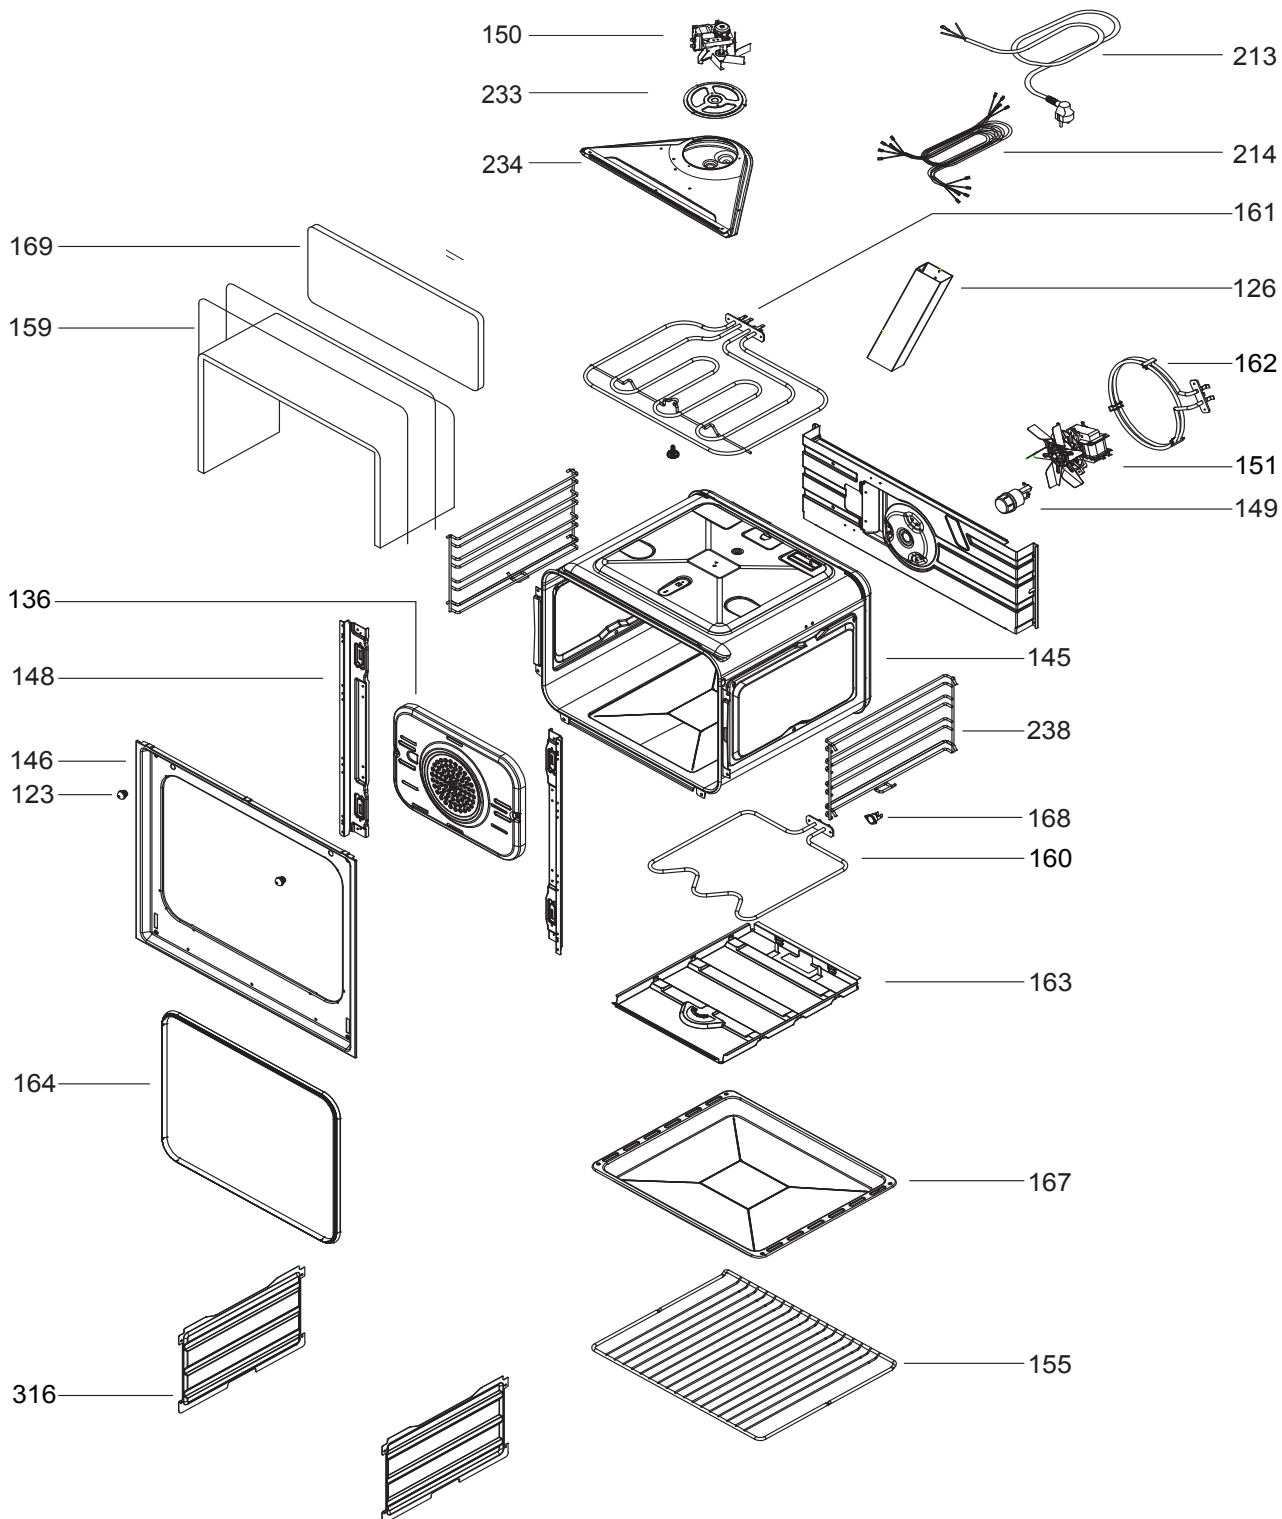

Exploded View

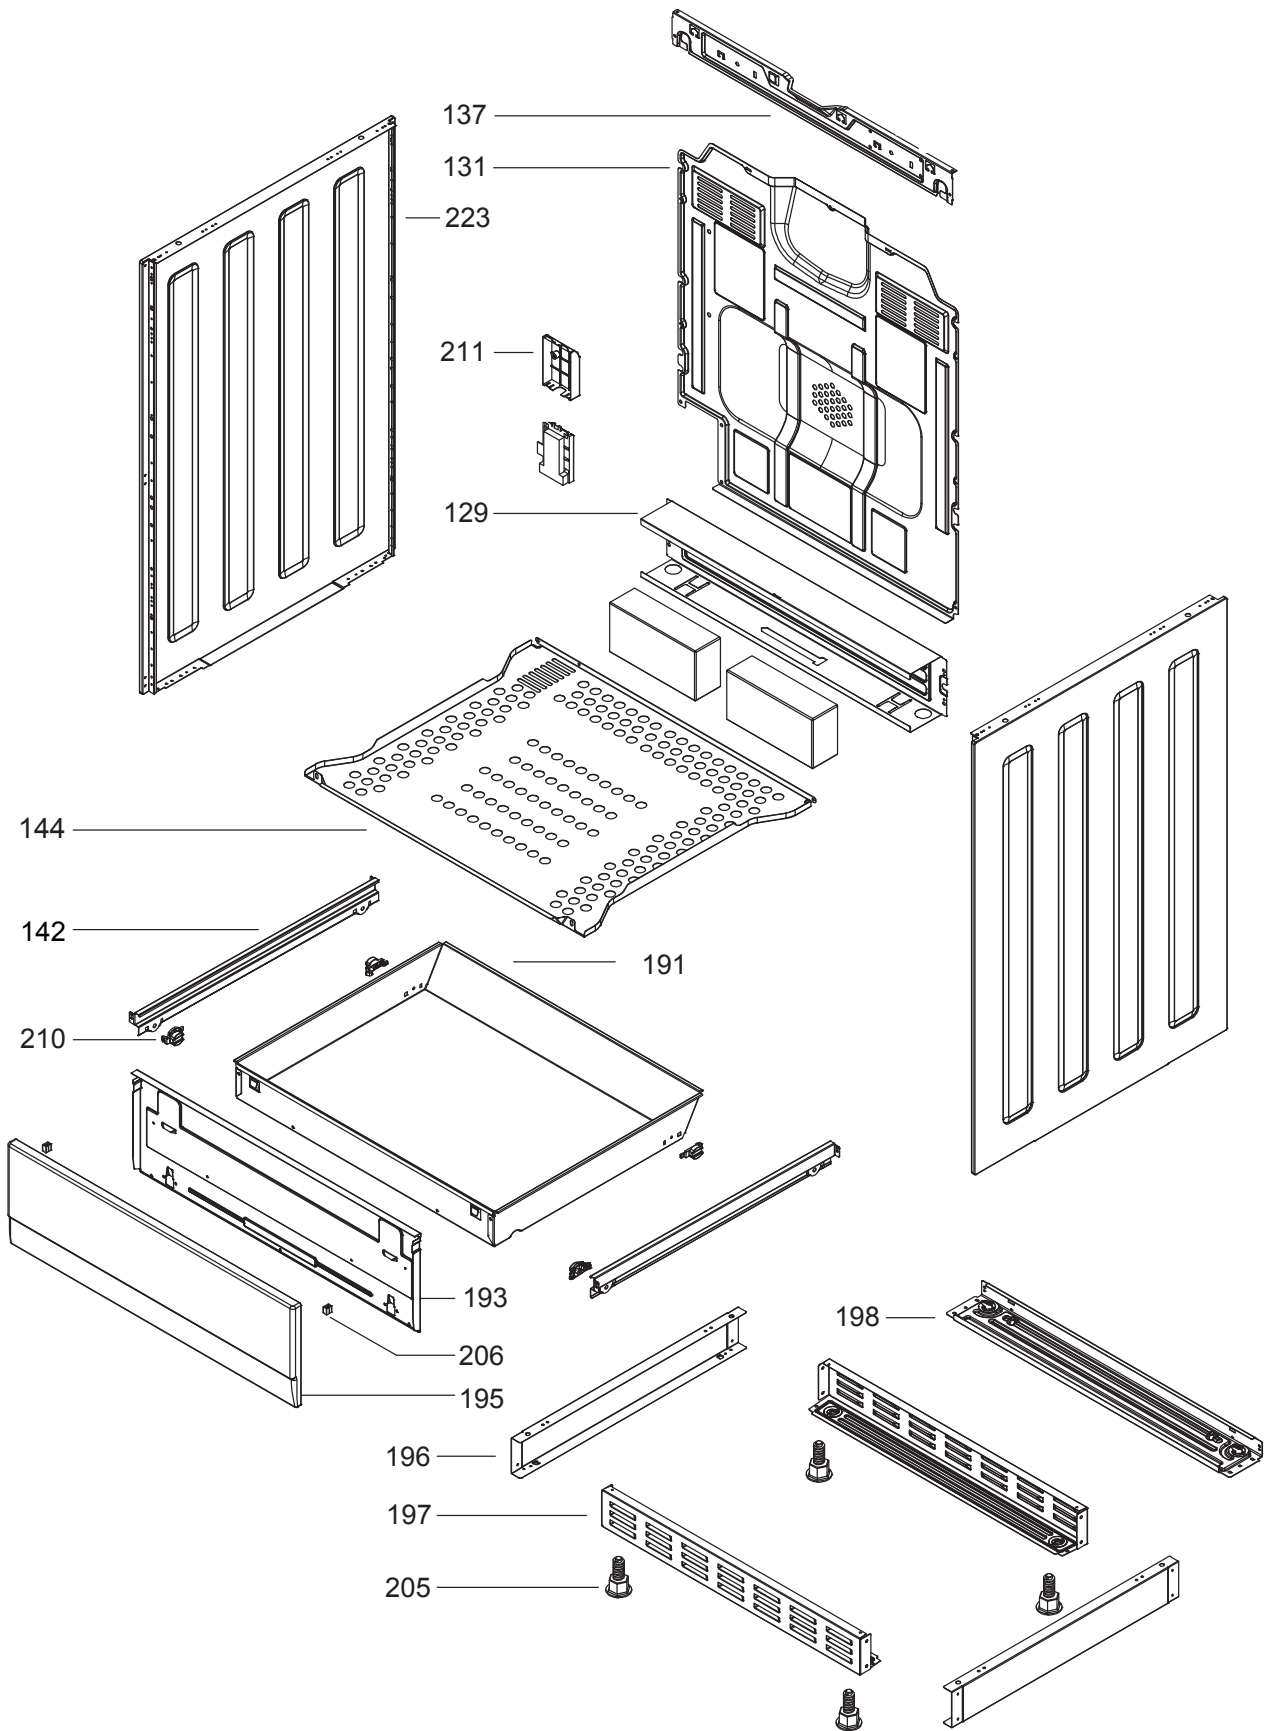

Parts List

ID	Part N#	Factory ID	Description
7	5291309	H40-40-100-004	Wok burner diffuser
8	5291302	H40-40-100-003	Aux burner diffuser
9	5291301	H40-40-100-002	Semi-rapid burner diffuser
12	5291311	H40-40-140-014	Aux burner cap (cast iron)
13	5291312	H40-40-140-013	Semi-rapid burner cap (cast iron)
14	5291313	H40-40-140-017	Wok outer burner cap (cast iron)
15	5291314	H40-40-140-018	Wok inner burner cap (cast iron)
27	5791303	H25-20-120-004	Cast Iron Trivet (L or R)
40	5291923	H40-25-140-002	LPG injector Ø 0.50 - Auxillary (small burner)
42	5291934	H40-25-140-007	LPG injector Ø 0.70 - Semi-rapid (burner)
44	5291935	h40-25-140-031	LPG injector Ø 0.92 - wok burner
48	5291305	H40-40-120-060	Aux burner cup (base)
49	5291304	H40-40-120-059	Semi-rapid burner cup (base)
50	5291319	H40-40-120-061	Wok burner cup (base)
53	5791903	YORTK-4000-010-040	Fixing profile for gas valve (Long)
53	5791904	YORTK-4000-010-041	Fixing profile for gas valve (Short)
54	5791600	H40-10-120-016	Gas Valve, FFD - 45 - aux burner
54	5791601	H40-10-120-017	Gas Valve, FFD - 60 - semi-rapid burner
54	5791603	H40-10-120-020	Gas Valve, FFD - 90 - wok-burner
55	5791604	H40-30-140-001	Niple 1/2" Main Gas Connection
59	5291900	H70-15-110-005	Ignition Candle Gasket
60	5291511	H40-15-100-011	Thermocouple - front semi rapid, aux burners
60	5291512	H40-15-100-012	Thermocouple - rear semi rapid, rapid burners
60	5291513	H40-15-100-013	Thermocouple - wok burner
65	5291509	H35-20-140-002	Ignition Candle - 350mm
65	5791516	H35-20-140-003	Ignition Candle - 500mm
65	5291514	H35-20-140-005	Ignition Candle (wok)
68	5791501	H35-30-200-040	Rotary (Selector) Switch -9F Oven
69	5291507	H35-20-100-001	Ignition Generator - 4 Points
70	5791517	H35-20-120-076	Ignition Microswitch - set of 4
72 + 73	5706108	"YFT60-16IM-010-050 + YFT60-4000-010-029"	Tisira Front Control Panel (stainless steel) + bracket
75	5791402	H25-55-100-004	Knob Spring
80	5791410	H20-10-120-024	Knob - black
81	5791411	H20-15-100-013	Knob bracket - black
85	5191503	H35-30-100-001	LED Light cover
88	5191508	H35-30-360-001	Thermostat
89	5191513	H35-30-380-006	Manual (Mechanical Timer)
90	5791800	H15-20-140-011	Inner Glass



Parts List

ID	Part N#	Factory ID	Description
96	5791200	H25-30-120-005	Door hinge (L and R)
114	5791408	H20-25-320-126	Inner Glass Bottom Plastic Bracket - Right
115	5791409	H20-25-320-125	Inner Glass Bottom Plastic Bracket - Left
136	5791301	YFT60-4200-020-010	Back Plate - Emamel
142	5791203	YFT60-4000-010-027	Runners for Drawer (L or R)
149	5191505	H35-30-280-020	Globe and Holder
150	5791518	H35-30-340-018	Cooling Fan
151	5191506	H35-30-340-003	Oven Fan
155	5191215	H25-10-160-014	Wire Rack
160	5191501	H35-25-160-002	Bottom Element
161	5791504	H35-25-160-001	Grill Element
162	5791505	H35-25-160-004	Circular Element
164	5791900	H70-10-130-003	Door Seal
167	5791300	YORTK-0700-020-001	Drip Tray - 30mm
168	5191510	H35-30-360-018	Safety Device (Thermostat 120 degC)
195	5791108	YFT60-36IM-010-012	Assembled Front Panel - Warming Drawer (Stainless Steel)
197	5791210	YFT60-41SP-030-012	Front Base Grill - Black
205	5791405	H20-25-180-011	Plastic Adjustable Foot
210	5791404	H20-25-320-089	Plastic Wheel
211	5291510	H35-30-180-005	Terminal Box
213	5791511	H35-10-160-010	Flexible Power Cord + Plug (AUS 15A)
223	5791109	YFT90-21GS-030-001	Side Panel - Stainless Steel (Left & Right) - Reversible
238	5791202	H25-45-100-023	Side Rack (L or R)
241	5191410	YFA60-41SP-030-038	Door Plastic Profile
256	5791804	H20-25-320-023	Functions Light
273	5791801	H15-20-140-012	Inner Glass one of these is middle glass
278	5191405	H20-25-320-080	Inner Glass Top Plastic Bracket - Right
279	5191406	H20-25-320-081	Inner Glass Top Plastic Bracket - Left
286	2299637	H25-70-140-137	Natural Gas Regulator - Laite
316	5791902	YORTK-4000-020-046	Catalytic Liners L & R
100+124	5791107	YFT60-66SP-030-011 H20-25-280-019	Assembled Handle - Black
*	5791106	Various	Complete Assembled Oven Door with Handle and Hinges - SS




Wiring Diagram

0+9 ego 2015

	P1	P2	P3	P4	P5	P6	P7	P8	
0									
1	X						X	X	☀
2	X		X	X			X	X	☰
3	X			X			X	X	☰
4	X		X				X	X	☰
5	X				X		X	X	☰
6	X				X	X	X	X	☰
7	X		X	X		X	X	X	☰
8	X	X				X	X	X	☰
9	X					X	X	X	☰

SHALTER DIAGRAM

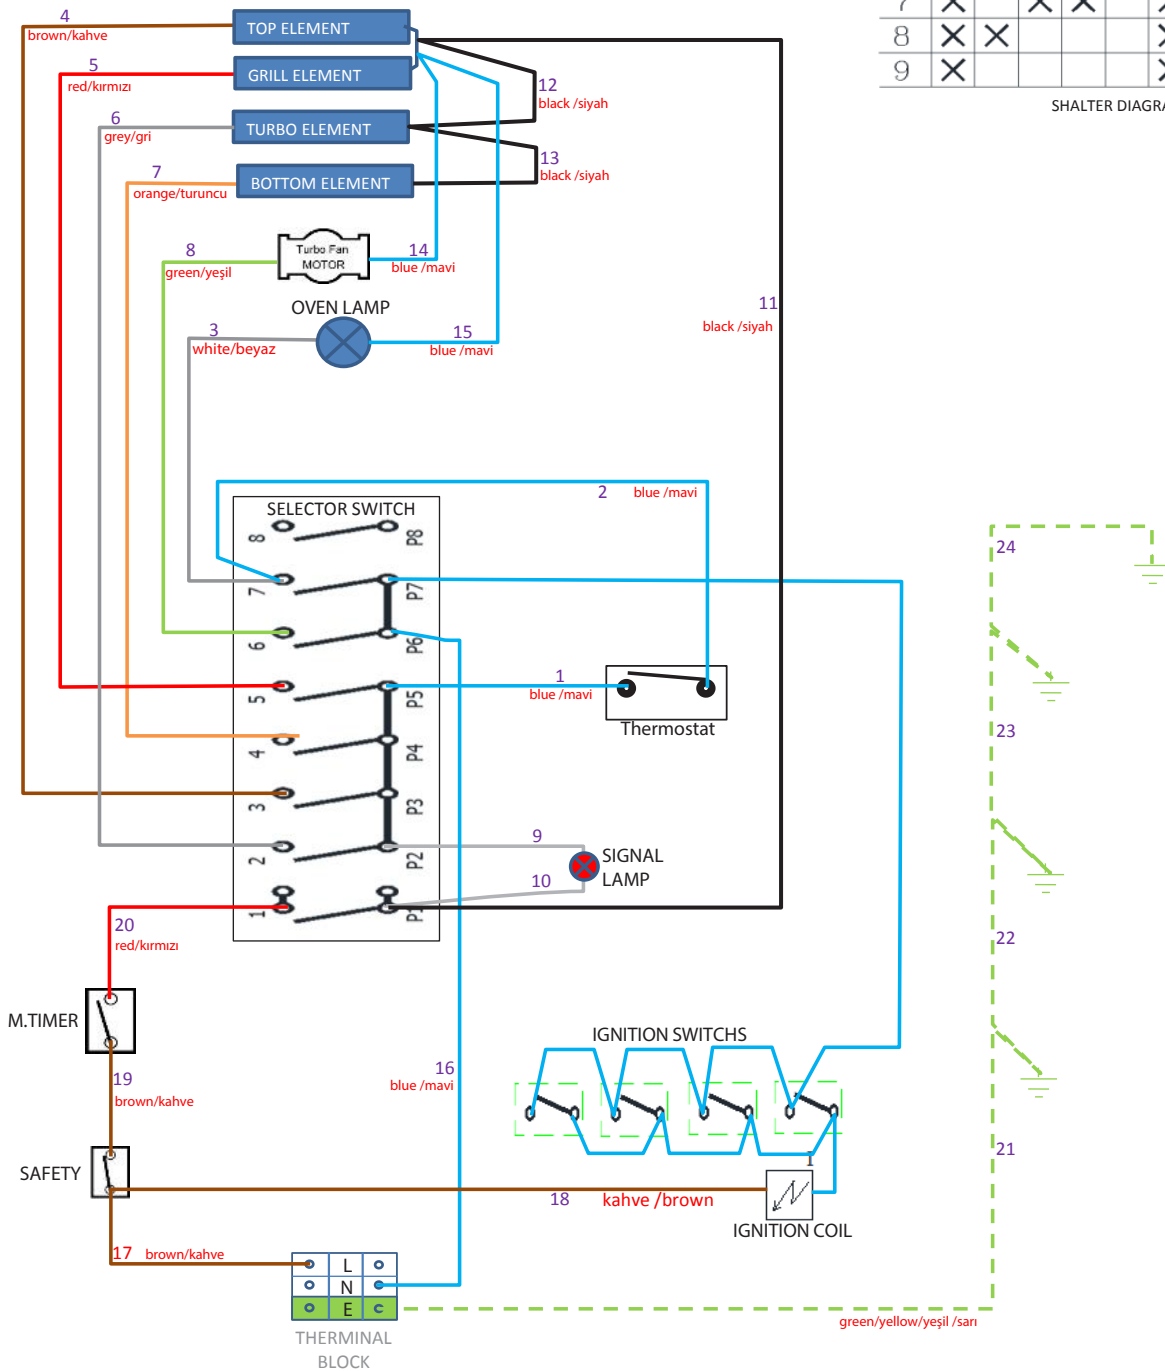

CONTACT DETAILS

AUSTRALIA

ARISIT PTY LIMITED

40-44 Mark Anthony Drive,
Dandenong South, VIC 3175,
Australia

P // 1300 762 219

F // 03 9768 0838

consumer.care@arisit.com

NEW ZEALAND

ARISIT PTY LIMITED

PO Box 68-140
Newton, Auckland 1145,
New Zealand

P // 09 306 1020

F // 09 302 0077

sales@aristonappliances.co.nz

Tisira is committed to ongoing research and development. Every effort has been made to ensure all information in this service manual is correct at time of going to print. Dimensions should be used as a reference only and actual dimensions should be taken from the physical product only.

Manufacturer reserves the right to change specifications without notice.



www.tisira.com