



Electrolux

ELECTROLUX HOME PRODUCTS PTY LTD

ABN 51 004 762 341

Technical Publication N° WM293

Issue: 3

Date: 05/19

Electrolux

WASHER & DRYER (HEC)

SECTION	PAGE N°
CONTROL PANEL	2 & 3
HOUSING ASSEMBLY	4 & 5
ELECTRICAL EQUIPMENT	6 & 7
FUNCTIONAL ASSEMBLY	8 & 9
HYDRAULIC ASSEMBLY	10 & 11
DRYER ASSEMBLY	12 & 13
WIRING DIAGRAM	14 & 15
ELECTRICAL DIAGRAM	16 & 17

Release Date: **September 2013**


MODEL:

EWV12832

PNC: 914900334 **01**

MODEL: EWW12832
PNC: 914900334

EX. VIEW DRAWING
CONTROL PANEL ASSEMBLY

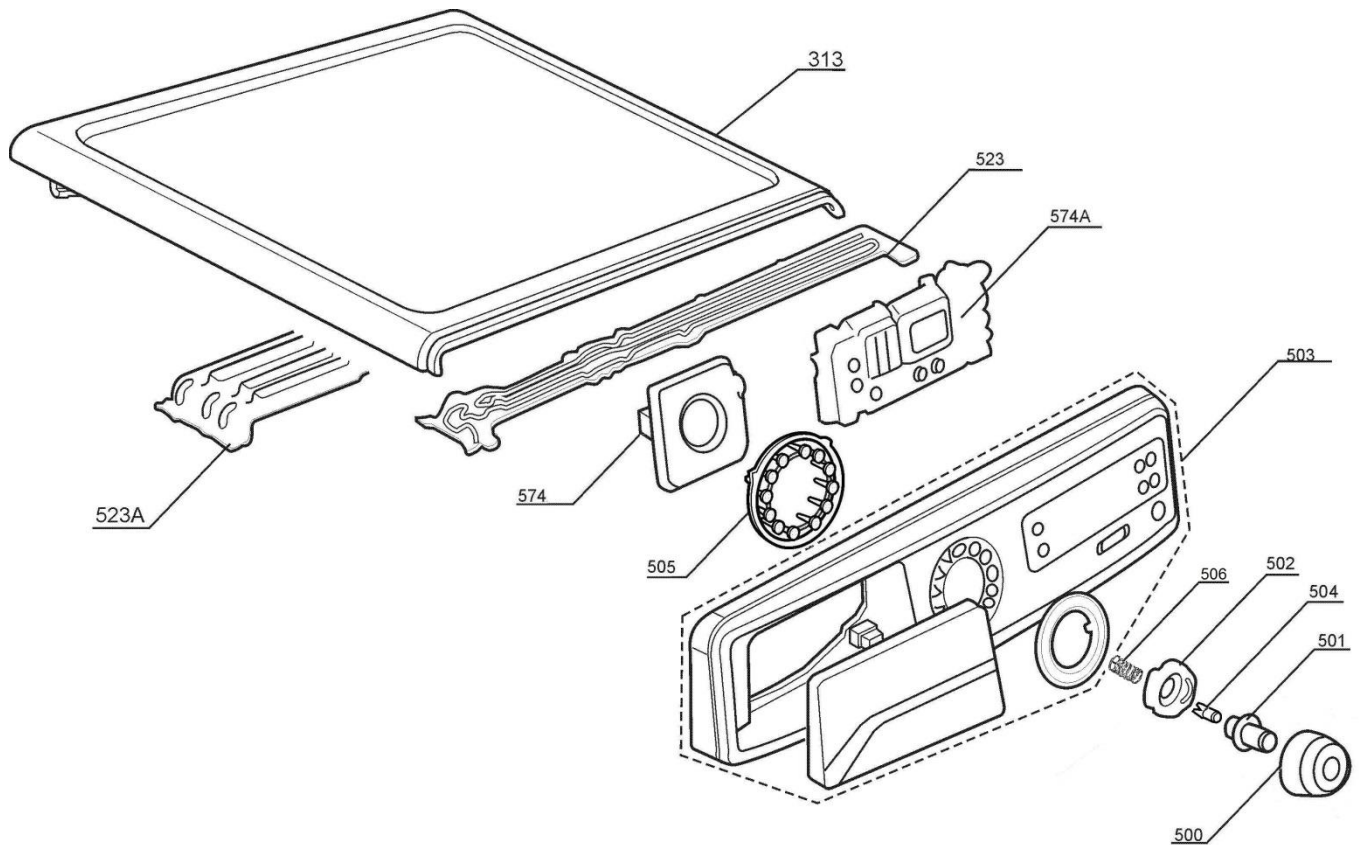


8017

ITEM	PART #	DESCRIPTION	QTY
313	147761640	Work top white	1
500	147917000	Knob Program TC2 TC3	1
501	147916500	On/Off Knob Push Button	1
502	147914200	Knob Base Support TC2 TC3	1
503	147769700	Control panel assembly EWW12832 (Includes Handle)	1
504	147914500	On/Off Spring Guide TC2 TC3	1
505	147913900	Knob Diffuser	1
506	147915800	Spring On/Off TC2 TC3	1
523	132552803	Control Panel support	1
523A	132550204	Tub suspension bracket	1
574	147914000	Selector Box	1
574A	147913410	Led Diffuser Support TC3	1

MODEL: EWW12832
PNC: 914900334


EX. VIEW DRAWING
HOUSING ASSEMBLY

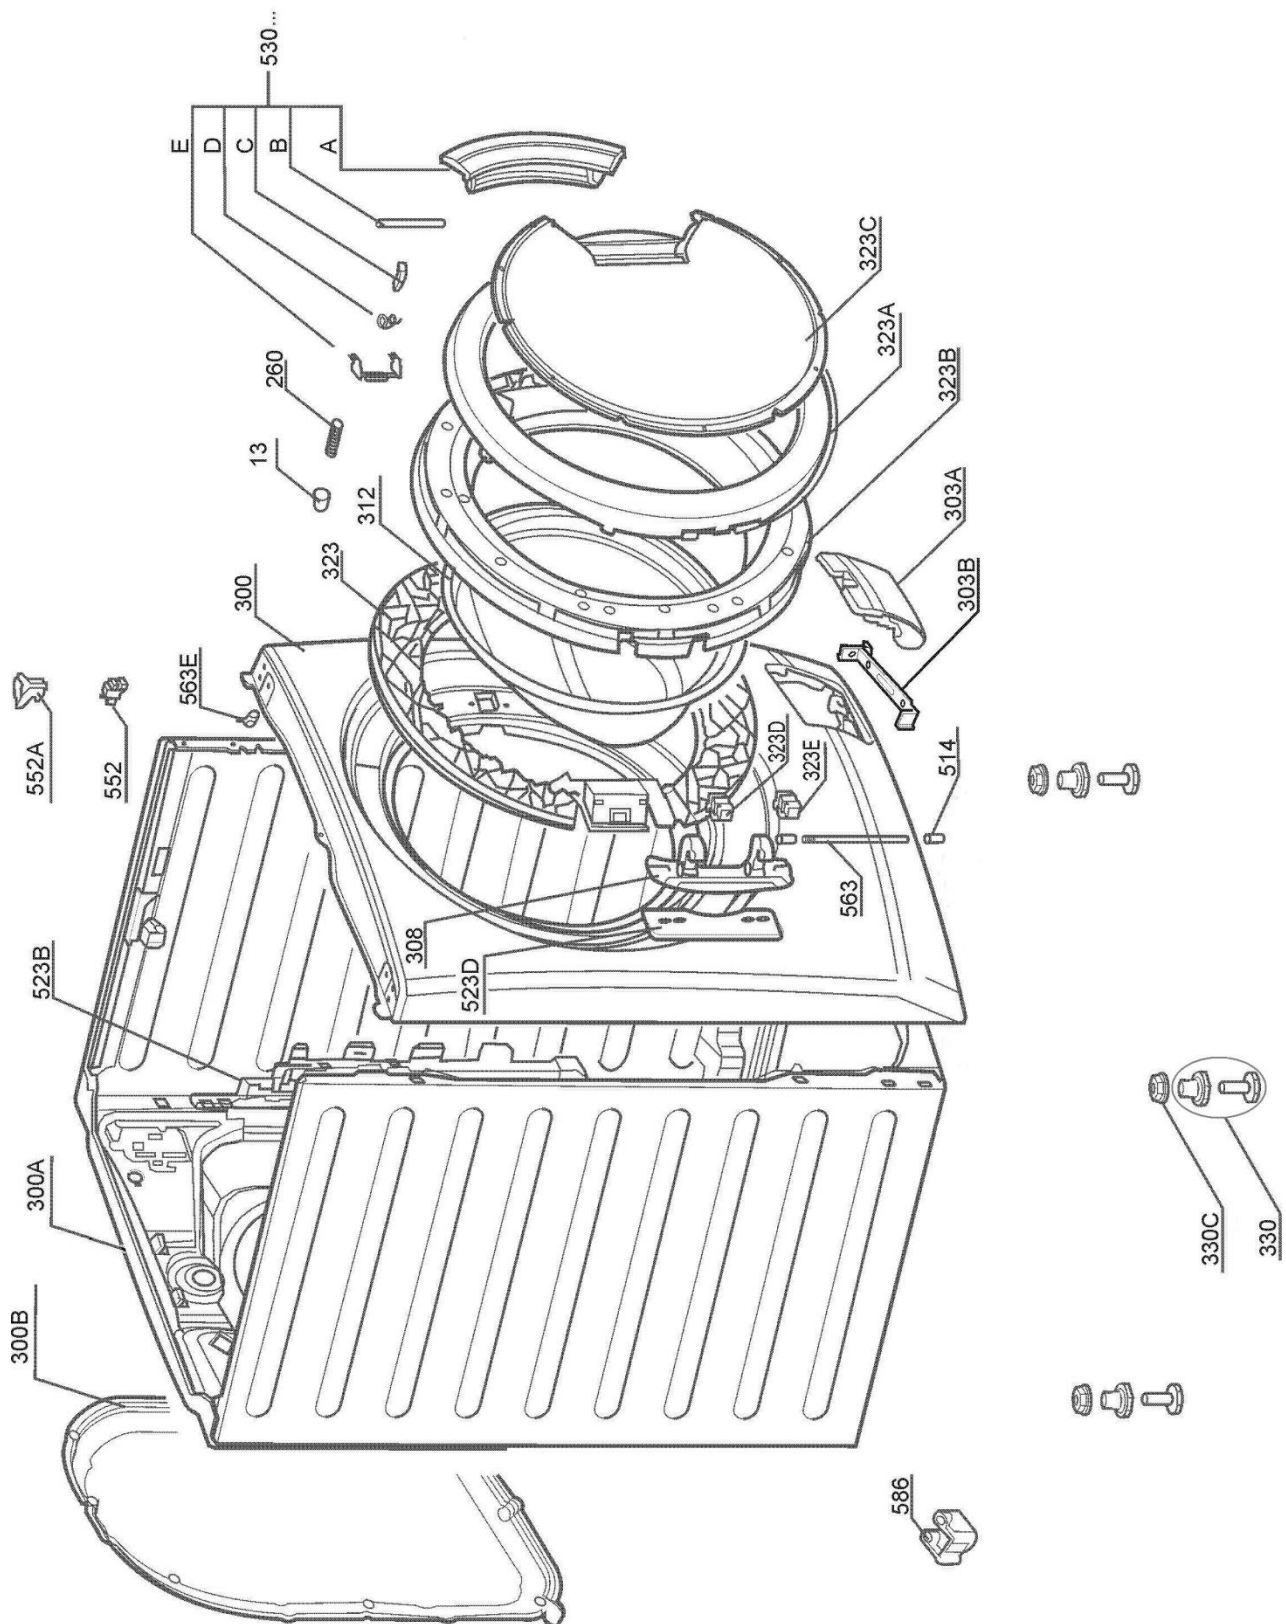

ITEM	PART #	DESCRIPTION	QTY
13	110825803	Door Safety Button	1
260	124067303	Spring, door stopper	1
300	147912100	Panel, Front	1
300B	132763805	Panel, back, high	1
303A	147904400	Filter door, white	1
303B	147909900	Metal pivot bracket	1
308	147910700	Hinge, Porthole	1
312	132764000	Glass, Porthole	1
323	147909200	Frame, Rear, Porthole	1
323A	147909310	Door Outer Ring, silver	1
323B	147909125	Door Frame, Front	1
323C	147909501	Door Lens	1
323D	147910810	Upper_Hinge_Cover silver	1
323E	147910910	Lower_Hinge_Cover silver	1
330	132500760	Foot Assembly & Bush	4
330C	110877100	Nut,plastic	4
514	132002600	Bush, Hinge	2
523B	132768502	Support,Harness	1
523D	132766300	Reinforcement, hinge	1
530A	147909410	Door Handle Chrome	1
530B	132554110	Catcher Pin	1
530C	124013721	Door Latch	1
530D	132829001	Door Latch Spring	1
530E	132829100	Port Hole handle Spring	1
552	132756700	Tube holder,recirc hose,vertical	1
552A	132756600	Tube holder,recirc hose,horizontal	1
563	132554120	Pin, door hinge	1
563E	132476800	Clip Assembly, Clip With Lock	1
586	132764701	Absorber,Support	1
N.I.	132503902	Cap,holes,rear panel,HEC	1
N.I.	132510850K	Transit Bolts (optional accessory)	1

MODEL: EWW12832
PNC: 914900334


EX. VIEW DRAWING
ELECTRICAL EQUIPMENT

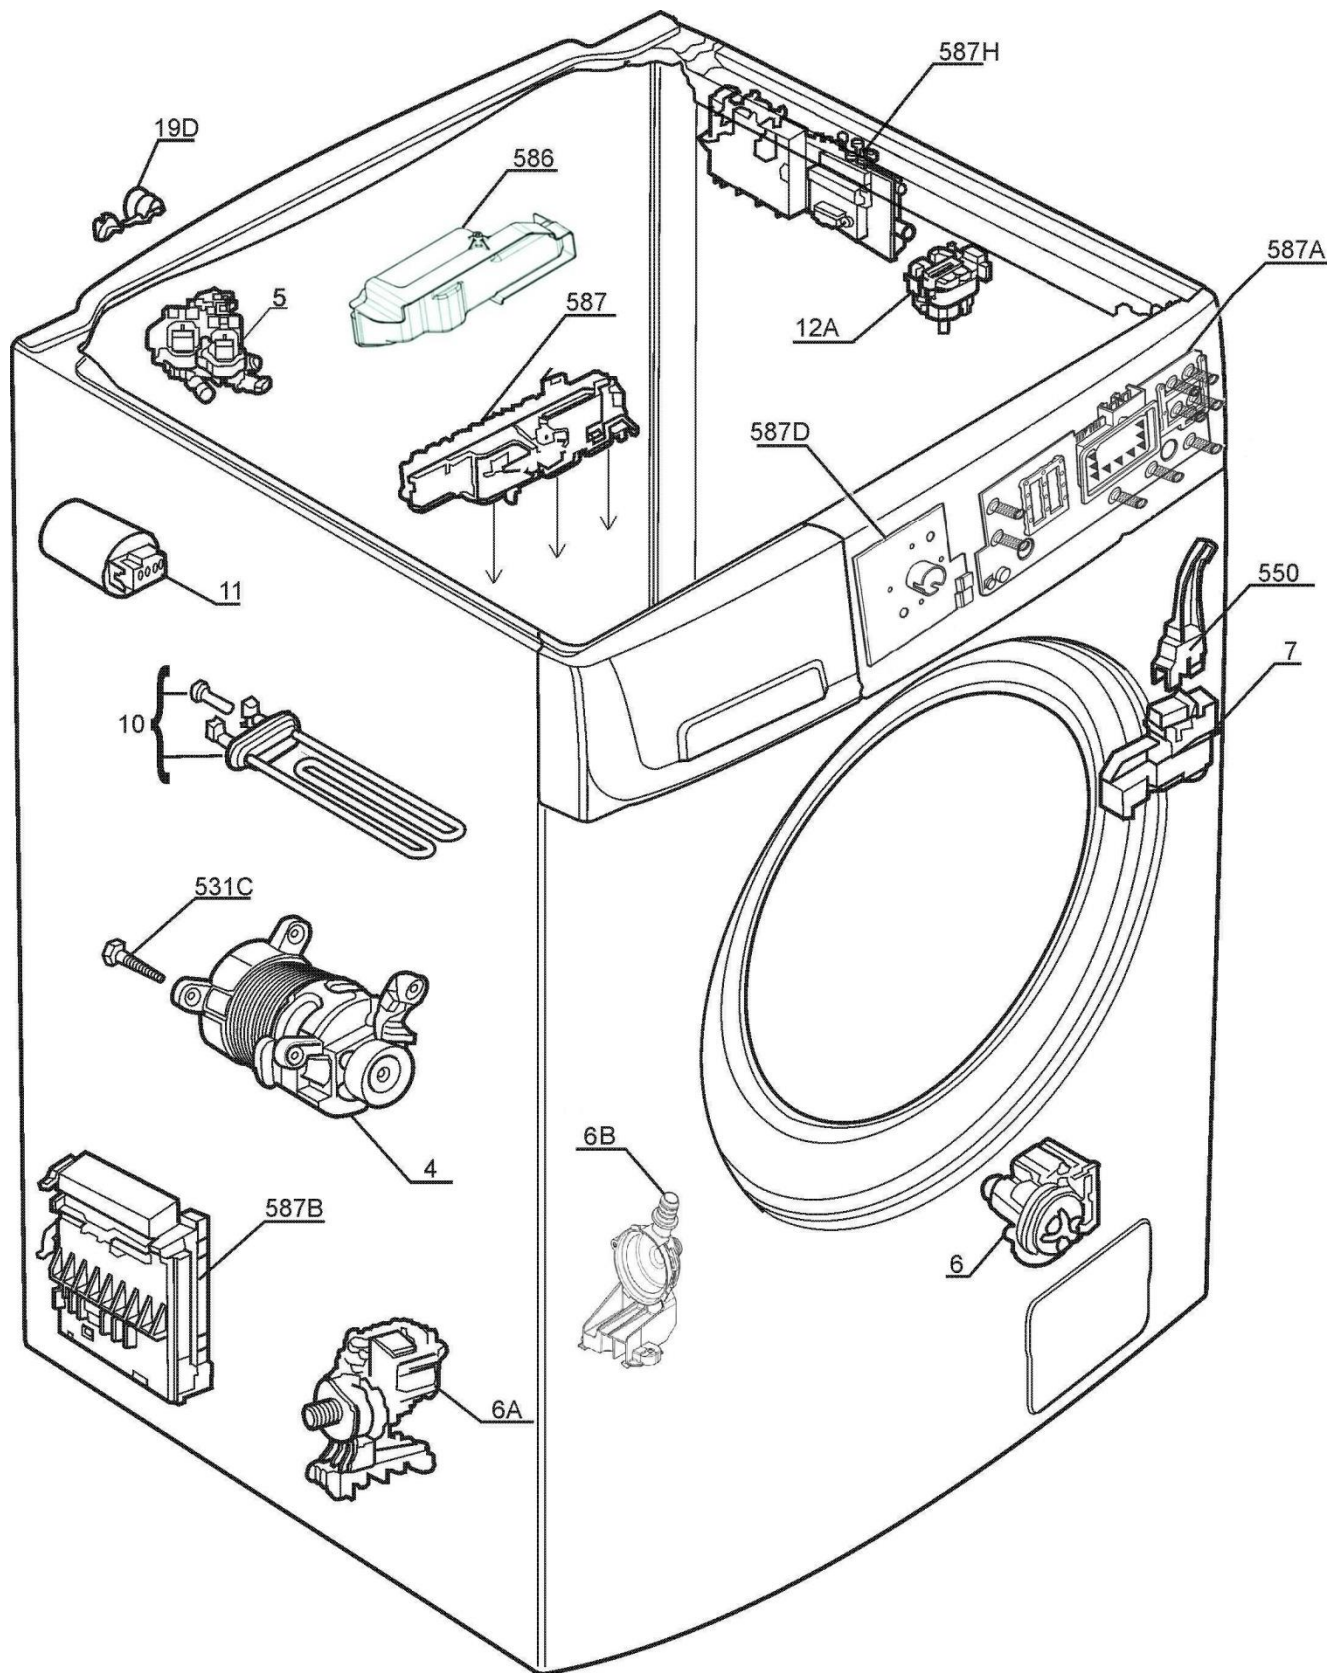

ITEM	PART#	DESCRIPTION	QTY
4	132386801	Controlled induction motor	1
5	132518830	Inlet valve 3 way, with flow meter	1
6	132663000	Drain pump, Leily 50Hz	1
6A	132794710	Recirculation pump HANYU50Hz	1
6B	132768200	Recirculation Scroll	1
7	132620701	Lock, Door	1
10	132673010	Element, Heating, 240V, 1950W	1
11	132667300	Anti Noise Filter	1
12A	132414302	Switch, Pressure - Analogic	1
19D	129719603	Cable, duct, power cable	1
531C	124022201	Screw, Fixing Motor	4
550	132144420	Protection,Door Safety Interlock	1
550A	132117602	Cover, Drain Pump, "OV"	1
586	132787900	Protection, EWD10 Conn.	1
587	132787110B	Main Board Assy,EWD10	1
587A	192651534	User interface board TC3 WD	1
587B	132760220	PCB Assembly, Motor Control	1
587D	147862001	Selector PCB Borad Eax1270	1
587H	132787310	Main Board Assy,WD(Drying)	1
NI	132523920	Wiring harness, motor control	1
NI	147138120	Cable, Power (Service Cord)	1

MODEL: EWW12832
PNC: 914900334


EX. VIEW DRAWING
FUNCTIONAL ASSEMBLY

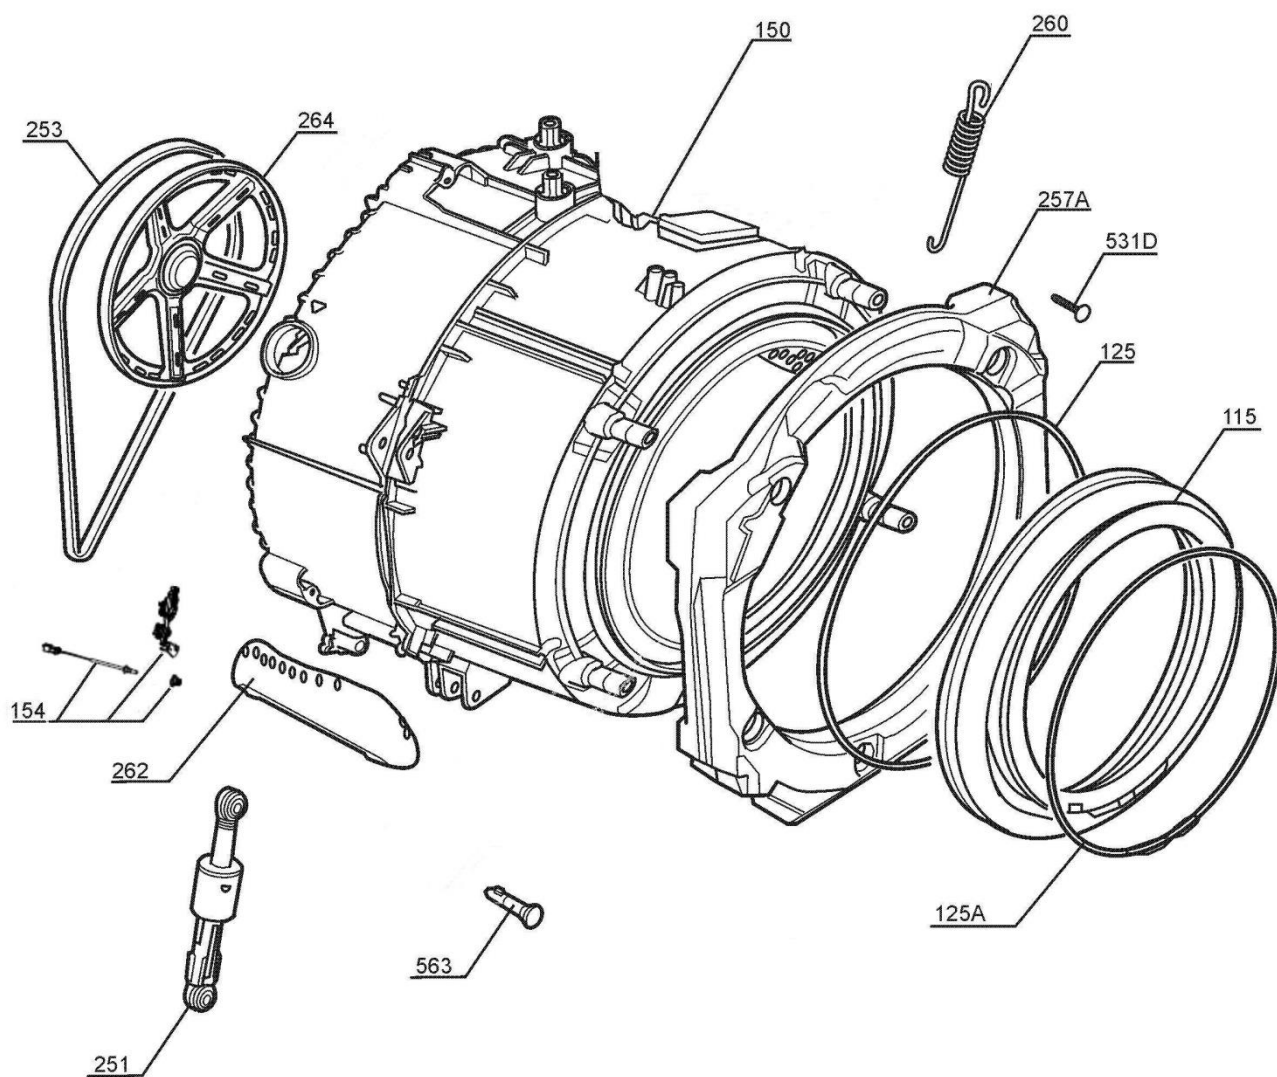

ITEM	PART #	DESCRIPTION	QTY
115	132724641	Rubber, Bellow, WD G60 jet	1
125	132562100	Spring, Bellow - Tub, G33	1
125A	132556200	Ring,Rubber Bellow - Cabinet	1
150	955830303	Wash Group Assy G60 WD	1
154	132830101	NTC Probe WD G60/G50	1
251	132744210	Shock absorber	3
253	132353120	Drive belt,rubber,1000/1500 HUTC	1
257A	132768830	Counterweight,front,G60W35L	1
260	132768400	Spring, Suspension - Tub	2
262	132553004	Drum lifter	3
264	4055186441	Pulley, plastic, kit (washer & screw)	1
531D	132658901	Screw,Counter Weight – front	5
563	132780400	Bolt, shock absorber	6

MODEL: EWW12832
PNC: 914900334

EX. VIEW DRAWING
HYDRAULIC ASSEMBLY

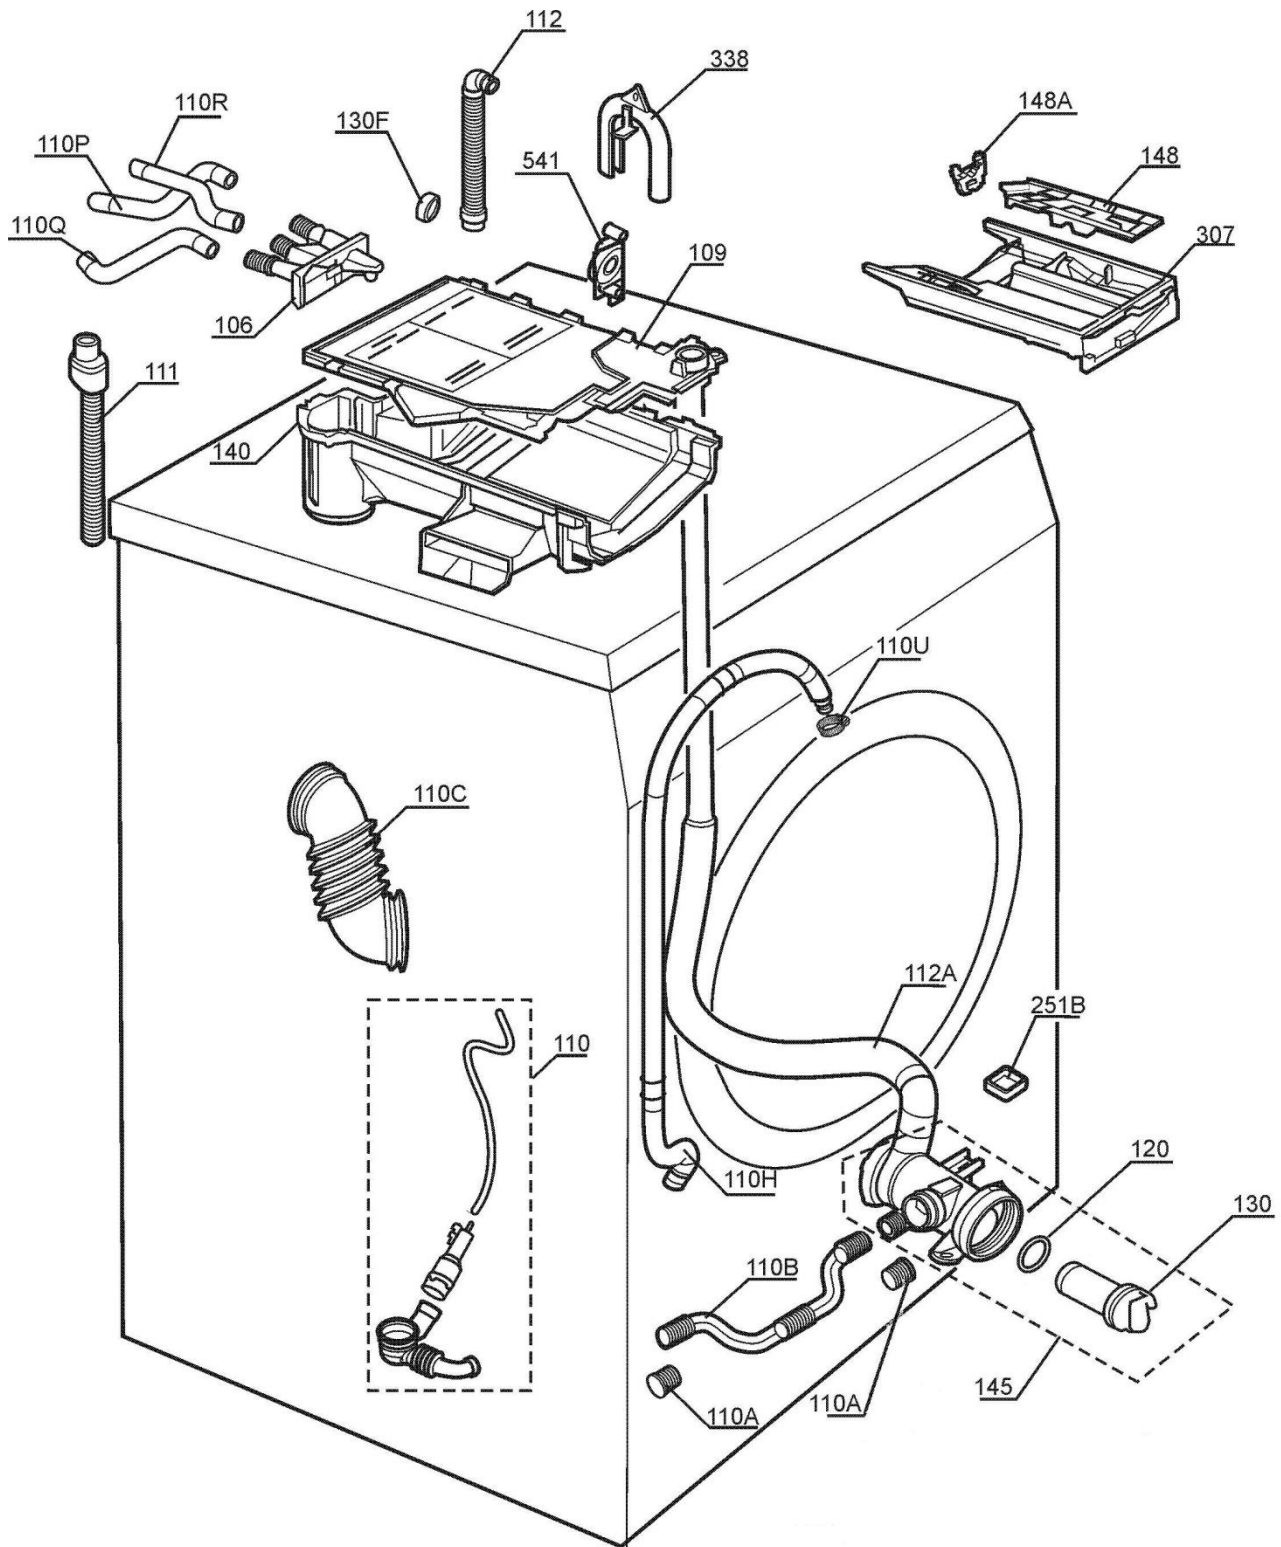


8018

ITEM	PART #	DESCRIPTION	QTY
106	124947005	Valve 3 way Connection	1
109	124014629	Conveyor Assembly, Water	1
110	147765420	Drain Tub	1
110A	132511300	Seal, recirc, not needed if replacing item 110B	1
110B	808155101	Recirculation hose, intake, Rubber	1
110C	132810800	Inlet Detergent Hose	1
110H	132756500	Recirculation hose	1
110P	132118660	Solenoid Valve Hose	1
110Q	147154924	Solenoid Valve Hose	1
110R	132608320	Solenoid Valve Hose	1
111	132624120	Hose, Water Inlet	1
112	132510921	Drain hose	1
112A	147918500	Internal.Drain Hose WD-G60	1
120	132071201	Seal Filter	1
130	132765801	Filter Assembly	1
140	132640830	Dispenser, Detergent	1
145	132766650	Pump Body Assy(includes items 120 & 130)	1
148	147170600	Siphon, 3 way Additives	1
148A	132726701	Drawer Partition Rib	1
251B	132501401	Buffer,upper,pump body	1
307	147171302	Drawer, Detergent	1
338	1242916-00/3	End Piece- Drainage Hose	1
541	132783500	Bracket Back Panel	1
NI	W014	Hose clamp, Recirculation pump	1

MODEL: EWW12832
PNC: 914900334


EX. VIEW DRAWING
DRYER

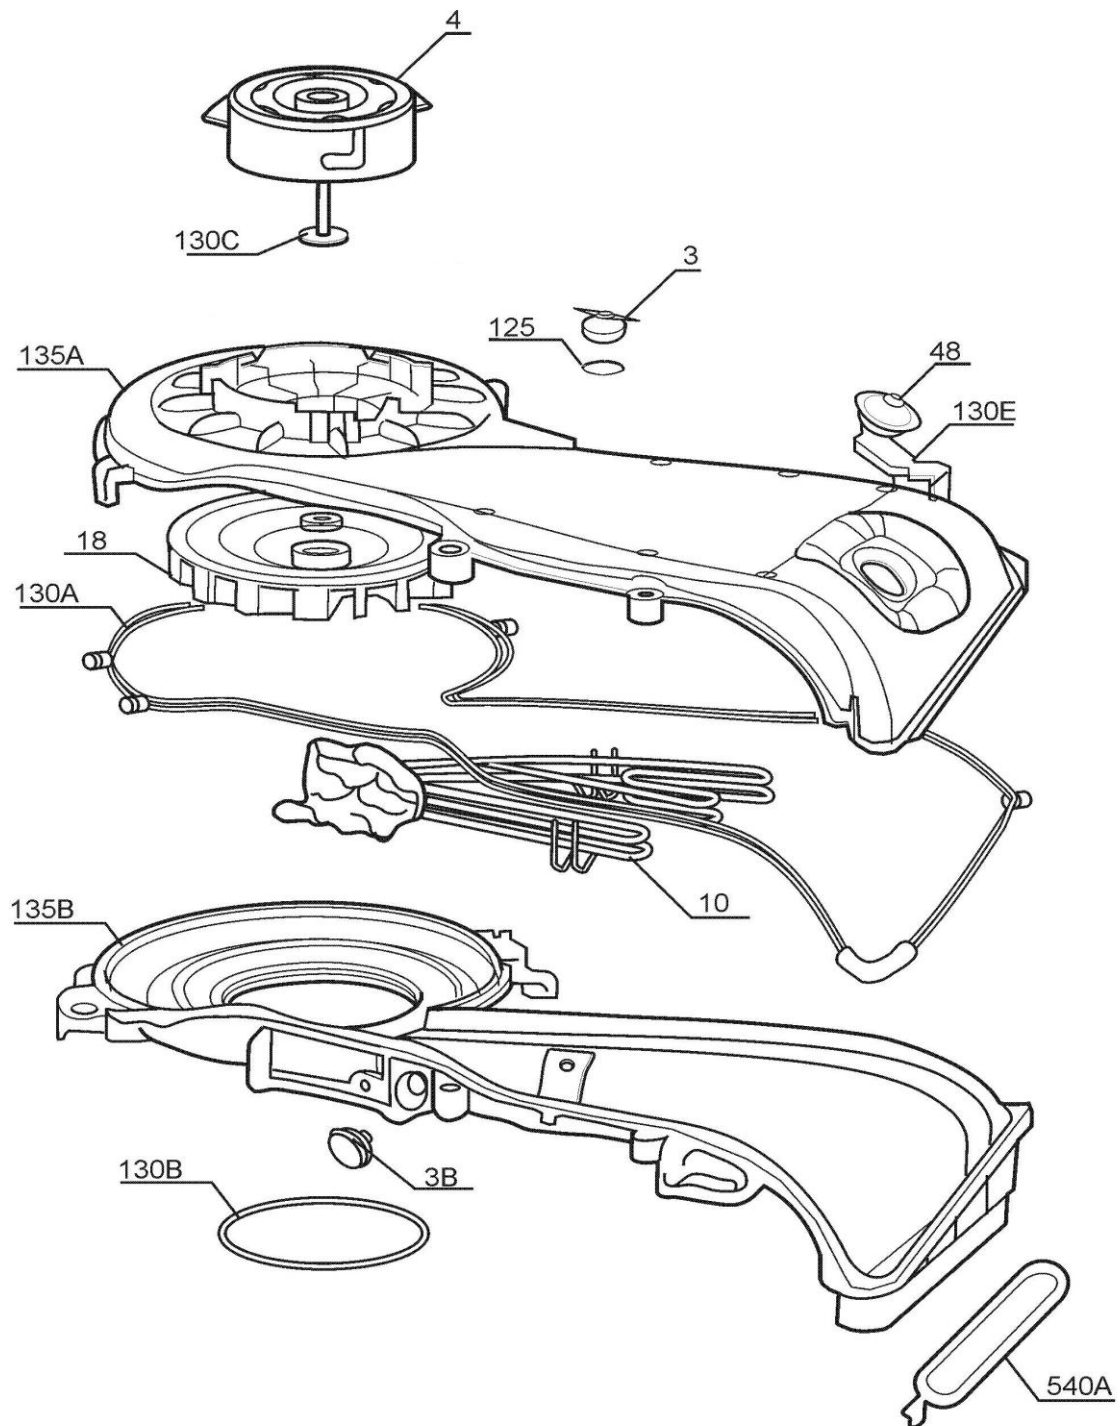

8021

ITEM	PART #	DESCRIPTION	QTY
3	124270230	Manual Reset Thermostat	1
3B	132830200	Thermostat	1
4	132791203	Fan Motor P10 WD	1
10	132821301	Heating Element	1
18	132819100	Fan WDG60	1
48	124664103	Metallic Temperature Probe	1
125	549012009	Thermostat O-Ring 14x1.78	1
130A	132827302	Air Duct Gasket G60 WD	1
130B	132816901	Duct-Back Tub Gasket	1
130C	132816800	Duct/Motor Fan Gasket	1
130E	124088402	Gasket Thermostat	1
135A	132819301	Upper Air Duct	1
135B	132819402	Lower Air Duct	1
540A	132824900	Pipe Door Gask,Clip WD P10	1


WIRING HARNESS

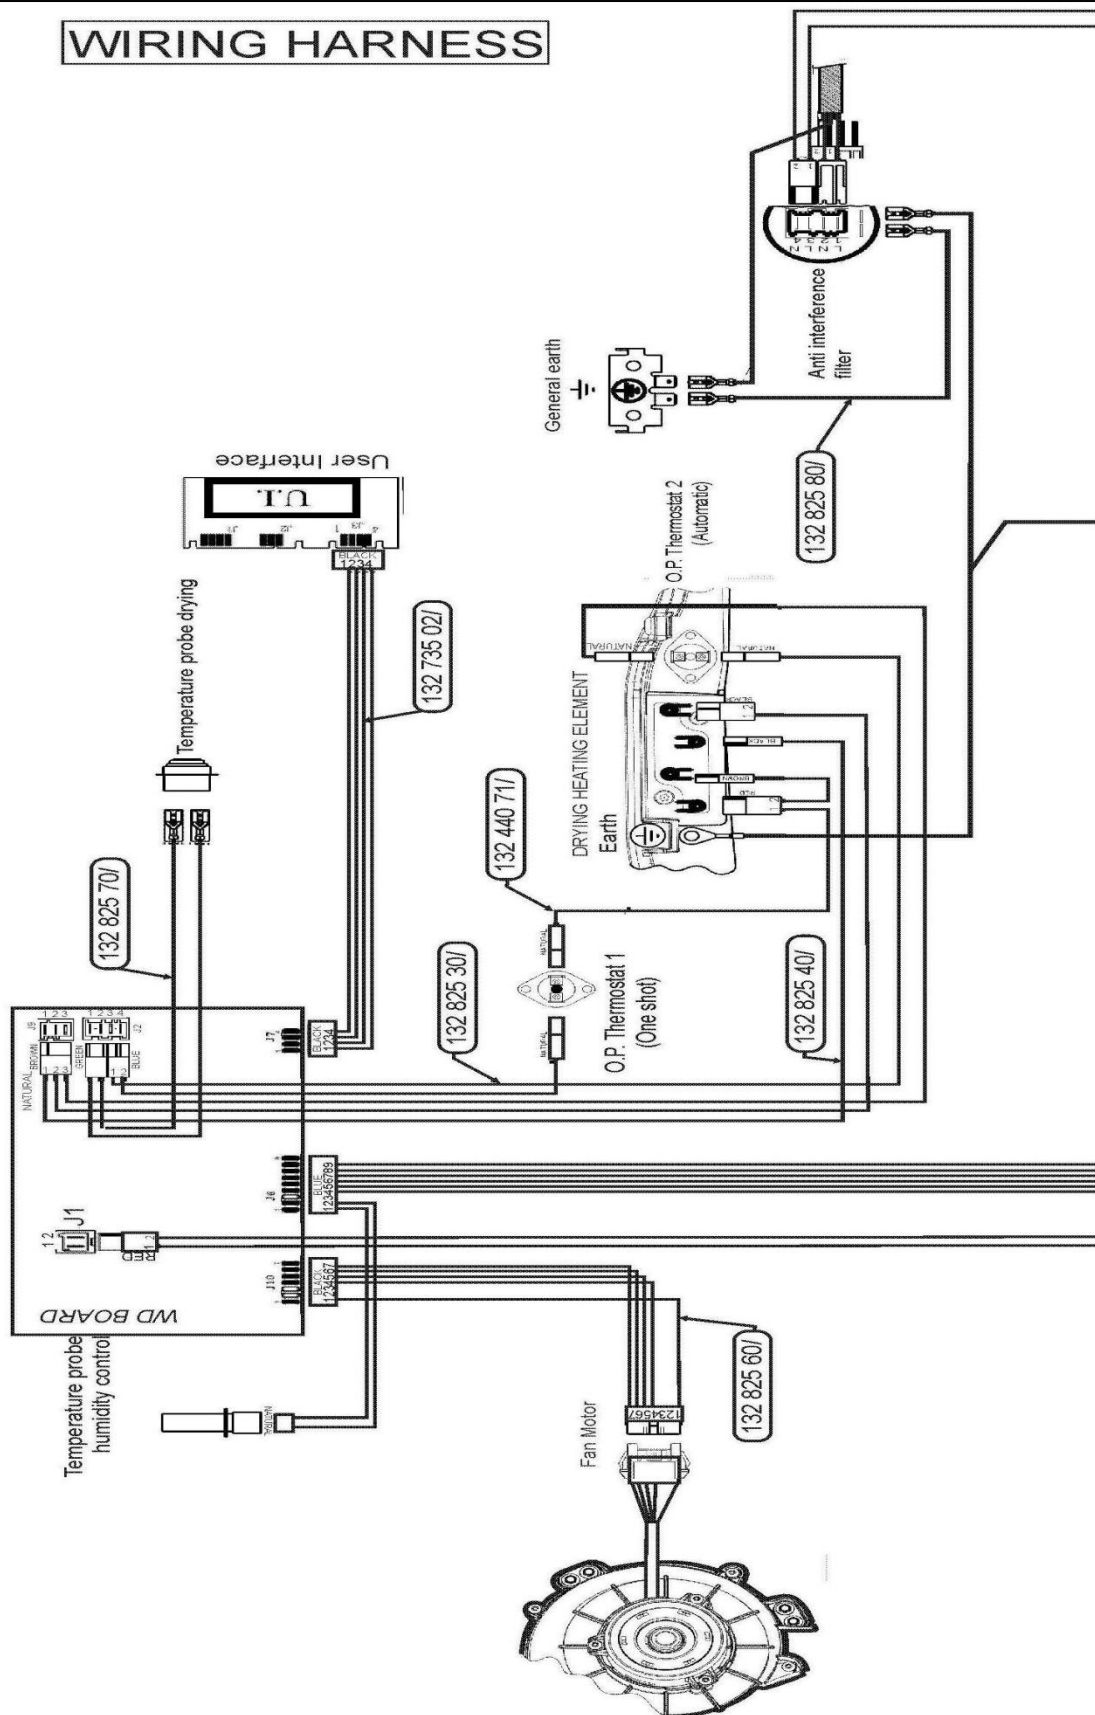

NEXT PAGE



IMPORTANT SAFETY NOTICE


This diagram has been prepared for use by electrically qualified service technicians. Electrolux cannot be held responsible for the interpretation of its service publications nor for any injury or damage that may occur in connection with their use.

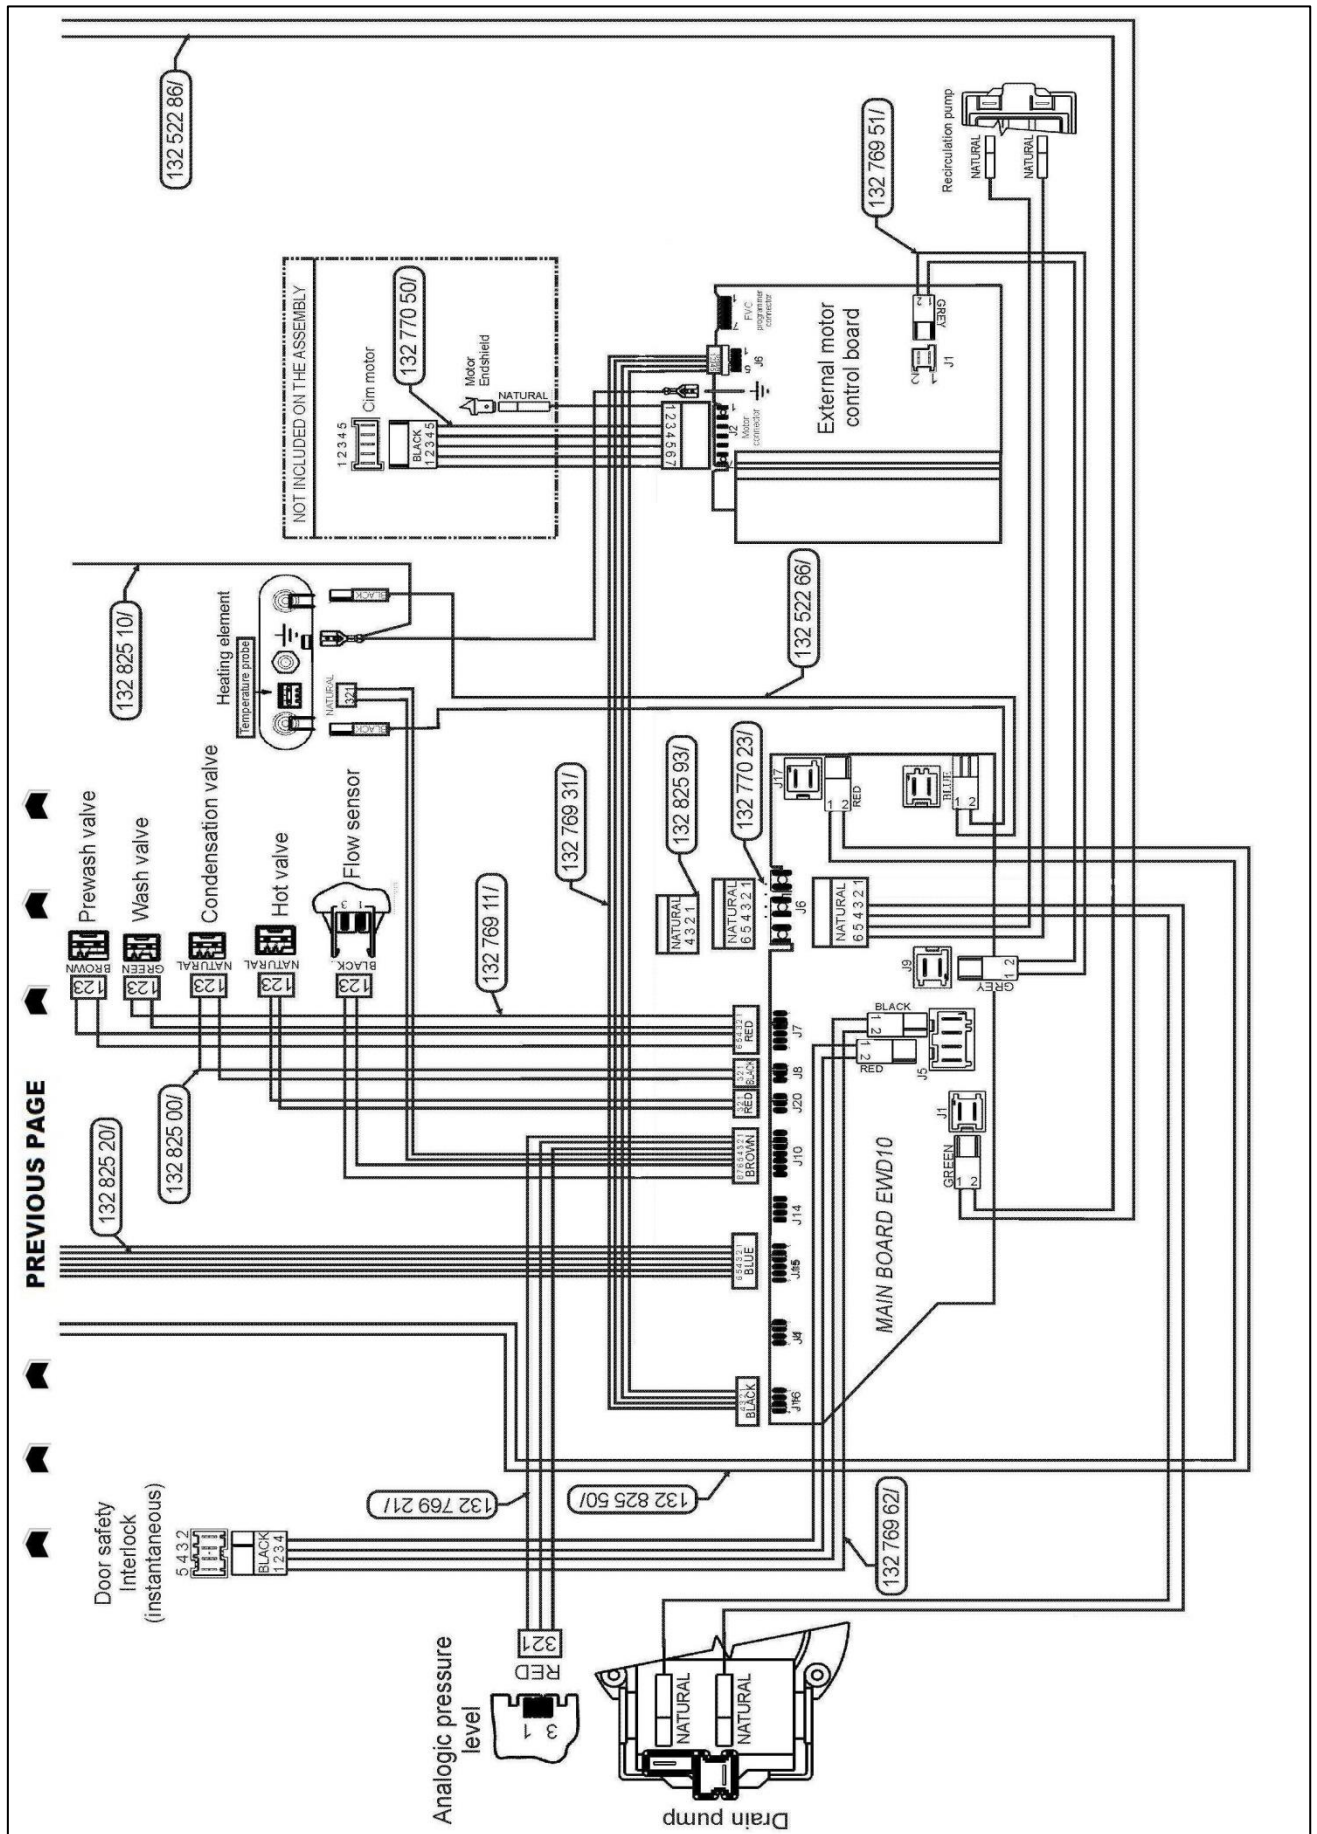

IMPORTANT SAFETY NOTICE

This diagram has been prepared for use by electrically qualified service technicians. Electrolux cannot be held responsible for the interpretation of its service publications nor for any injury or damage that may occur in connection with their use.

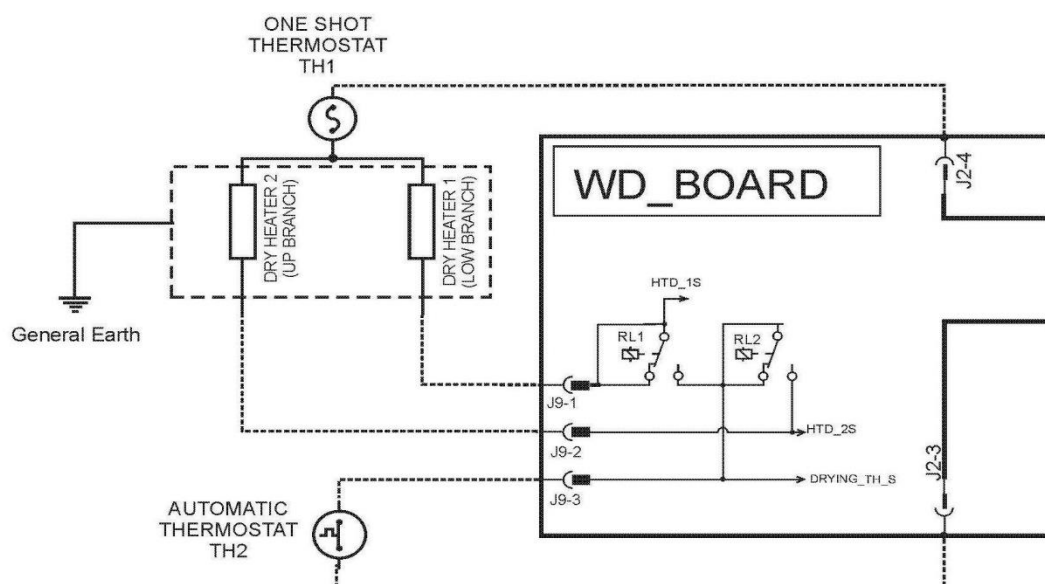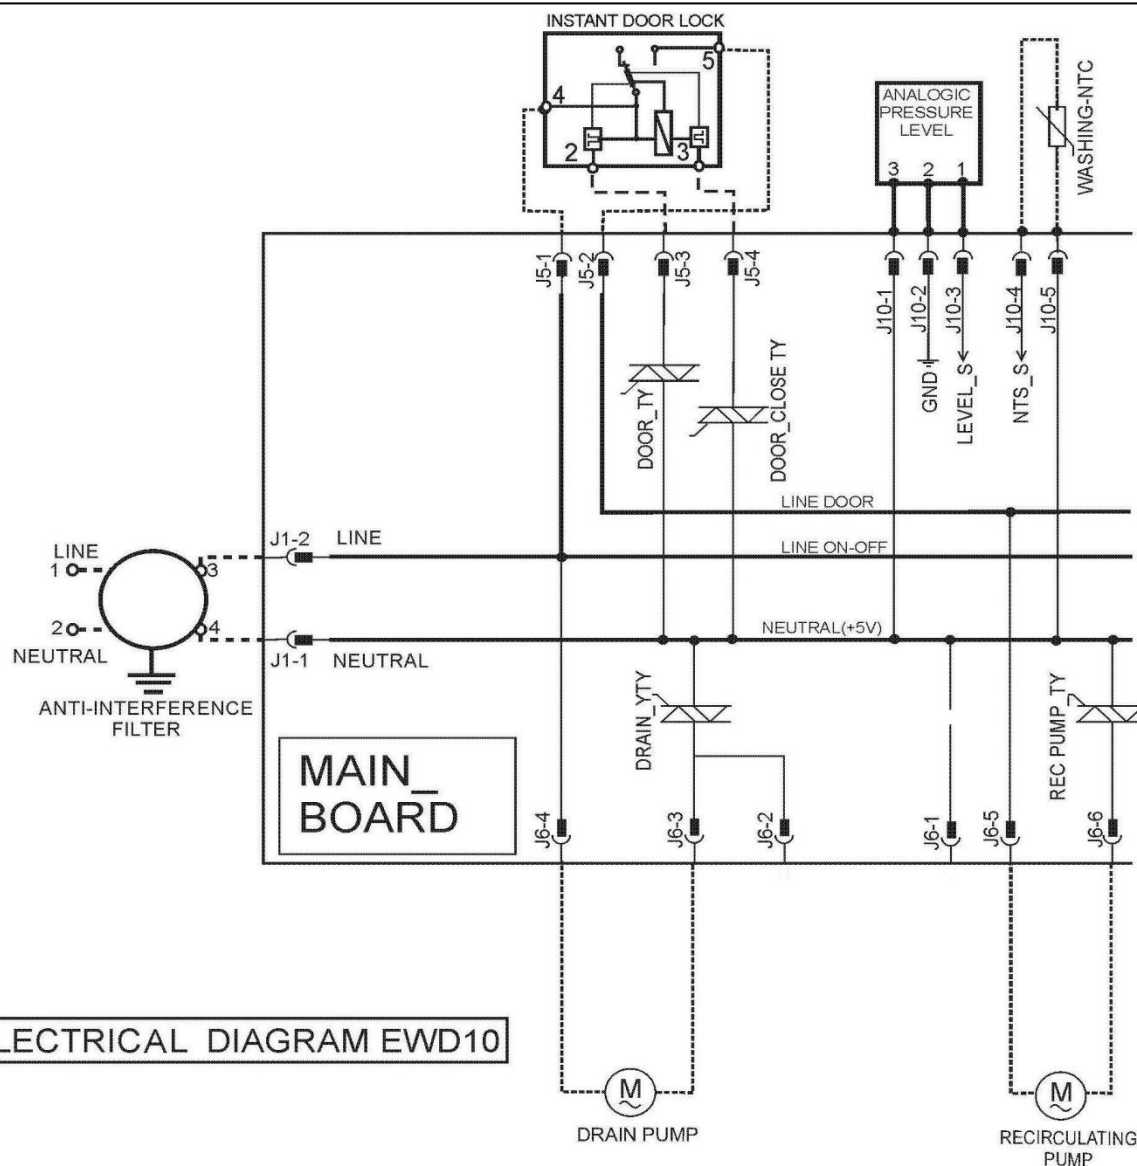

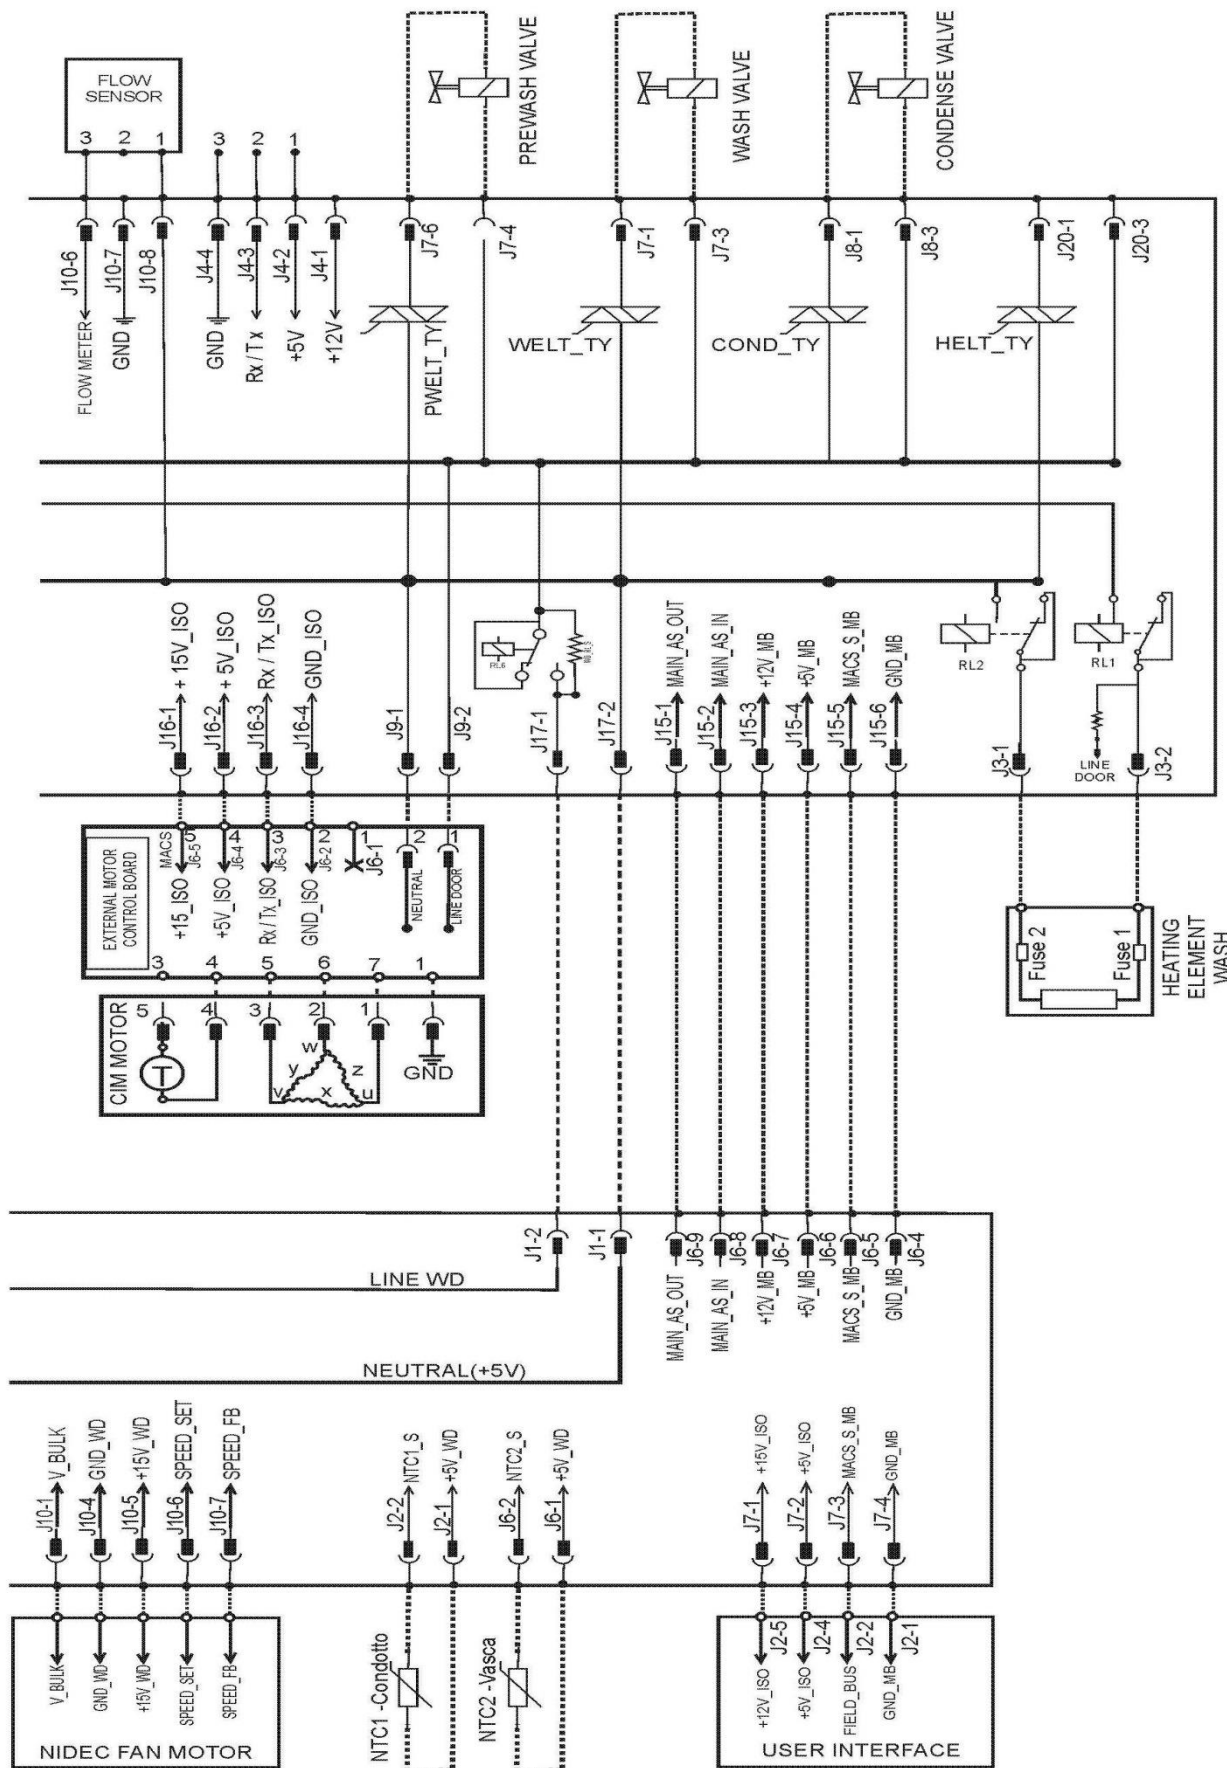

IMPORTANT SAFETY NOTICE

This diagram has been prepared for use by electrically qualified service technicians. Electrolux cannot be held responsible for the interpretation of its service publications nor for any injury or damage that may occur in connection with their use.