

INSTRUCTION MANUAL

WARNINGS	PG	4
AWESOME FEATURES	PG	8
GROW-WITH-MI SYSTEM	PG	11
AGES & STAGES	PG	12
PUTTING ON HARNESS	PG	14
PRE-LOADED BABY, FRONT CARRY	PG	16
EMPTY CLAMSHELL, FRONT CARRY	PG	18
OUTWARD-FACING, FRONT CARRY	PG	20
BACK CARRY	PG	22
REMOVING BABY FROM CARRIER	PG	26
CARE INSTRUCTIONS AND WARRANTY	PG	27

IMPORTANT: READ ALL INSTRUCTIONS CAREFULLY PRIOR TO ASSEMBLY AND USE. ALWAYS FOLLOW INSTRUCTIONS FOR PROPER AND SAFE USE. KEEP FOR FUTURE USE.

AWARNING

- Failure to follow all warnings and instructions can result in serious injury or death.
- Do not use the carrier if any parts are damaged, broken or missing. Do not attach any parts not supplied or expressly approved by BAEBI to the carrier. If the instruction manual is missing or you need replacement parts or assistance, see the contact information included with this manual.

FALL AND SUFFOCATION HAZARD

FALL HAZARD: Infants can fall through a leg opening or out of carrier

- Make sure baby's bottom is properly positioned in seat of clamshell with legs positioned below the lower straps. For infants 12 lbs (5.4 kg) or less, leg straps must be secured after seating the child in the infant carrier.
- Front carrier use: always fit the adult harness onto your shoulders and secure waist belt before attaching clamshell. Pull all straps tightly around your body.
- Back carrier use: always make sure child is secured in clamshell and clamshell is securely attached to adult harness before rotating to place on back.

- Hold your baby closely at all times until clamshell is correctly attached and secured.
- Check to ensure all buckles, snaps, straps, and adjustments are secure before each use. Listen for an audible "click" when fastening each buckle or snap on your carrier.
- Take special care when leaning or walking.
- Never bend at waist; bend at knees.
- Only use with child from 5 lbs (2.3 kg) to 33 lbs (15 kg) and at least 18 inches tall.
- Use Grow-with-MI System newborn mode from 5 lbs (2.3 kg) to 9 lbs (4.1 kg).
- Never unbuckle the waist belt while the baby is in the carrier.

SUFFOCATION HAZARD: Infants under 4 months can suffocate in this product if their face is pressed tight against your body.

- Always keep child's nose and mouth free from obstructions to allow for proper breathing.
- Do not strap infant too tight against your body.
- Allow room for head movement.
- Constantly monitor baby to ensure that baby's airway is clear and that baby is breathing normally at all times.
- Always ensure that baby has at least two fingers width clearance below baby's chin. If baby's chin rests on baby's chest, this partially closes baby's airway.
- Premature infants, infants with respiratory problems, and infants under 4 months are at greatest risk of suffocation.
- Consult doctor before use with premature infants.

STRANGULATION HAZARD

- Never secure the swaddle strap near the child's neck.
- Always position child's arms over the swaddle strap.


GENERAL WARNING

- Prevent injury from adult falling with infant:
 - This baby carrier is designed for use by adults only while standing or walking.
 - While using carrier be aware that your balance may be adversely affected by your movement or the movement of your child.
 - Never use carrier when balance or mobility is impaired because of exercise, drowsiness, or medical conditions.
 - Use caution when walking, especially on loose gravel, irregular surfaces, wet or slippery surfaces, stairs or escalators.
 - Do not use during sporting activities or while engaging in activities such as cooking and cleaning which involve a heat source or exposure to chemicals.
- Do not leave your baby unattended inside or with the carrier.
- Check for ripped seams, torn straps or fabric and damaged fasteners before each use.
- Do not let baby sleep in the outward-facing front carry position.
- Never wear the carrier while driving or being a passenger in a motor vehicle.
- Never place small or sharp objects in carrier pockets.


IMPORTANT TIPS AND CARRIER USE INFORMATION

- Frequently check baby's position to ensure that baby is properly seated in carrier, evenly balanced with legs extended and head upright and not slumping downward or to the side.
- Infant must face towards you until he or she can hold head upright.
- Only use the back carry position when baby has demonstrated strong and consistent head and neck control.
- As a rule of thumb, user should always be able to kiss baby's forehead. Wear waist belt higher or lower on user's torso to ensure proper height of baby.

HARNESS

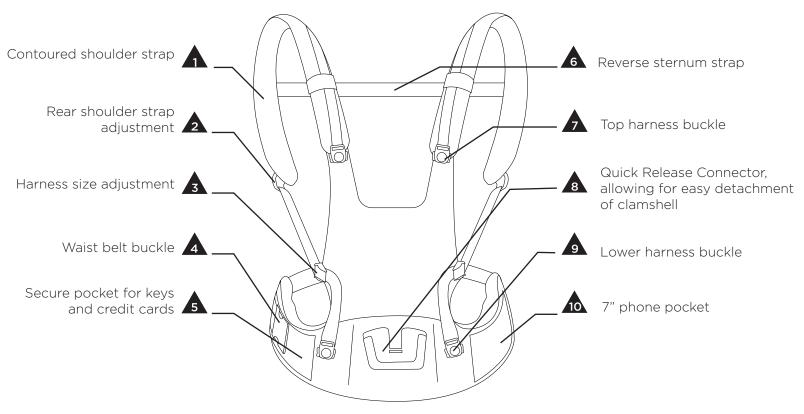


*We use fancy fabric. All fabric on our carrier is Oeko-Tex™ certified fabric (fancy way to say that the fabric has been tested for harmful substances)

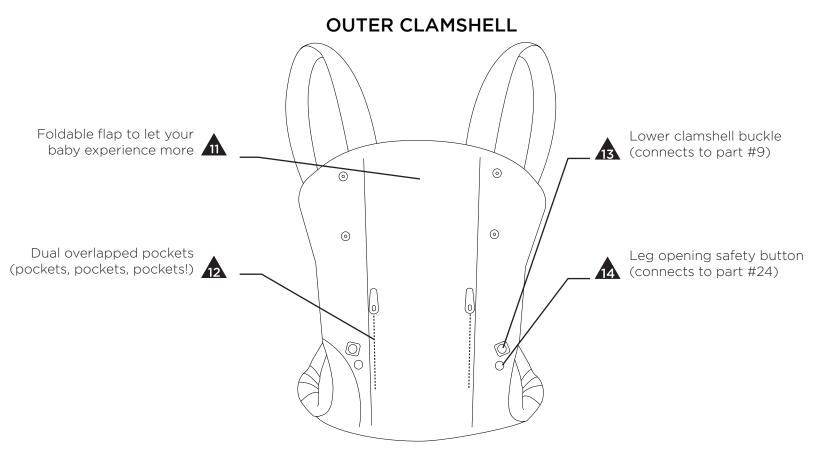


*We use fancy fabric. All fabric on our carrier is Oeko-Tex™ certified fabric (fancy way to say that the fabric has been tested for harmful substances)

INNER CLAMSHELL

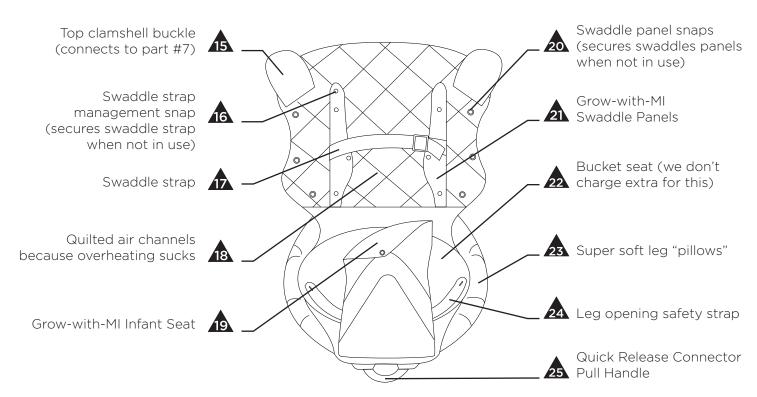

*We use fancy fabric. All fabric on our carrier is Oeko-Tex™ certified fabric (fancy way to say that the fabric has been tested for harmful substances)

GROW-WITH-MI SYSTEM

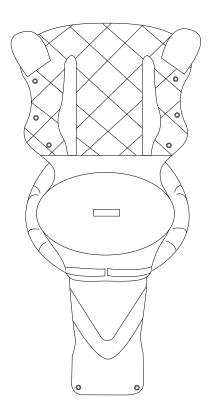

Infant Seat - elevates baby to proper seating height.

- Newborn mode: less than 21 inches or 9 lbs (4.1 kg), use height adjustment seat with the foldable flap in the upward position.
 - Discontinue newborn mode when infant is either 21 inches or 9lbs (4.1 kg), whichever comes first. Directly fasten the seat down using velcro tab.


TIP: User should always be able to kiss baby's forehead. Wear waist belt higher or lower on user's torso to ensure proper height of baby.

TIP: For small enough babies, place baby's feet into bucket seat.


Swaddle Panels – because who doesn't love hugs. Use swaddle panels until baby has head and neck control or until baby reaches 12 lbs (5.4 kg), whichever is later.

Foldable Flap



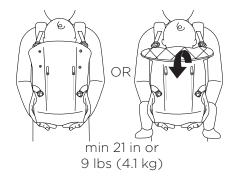


Inward-facing, front carry using Grow-with-MI System

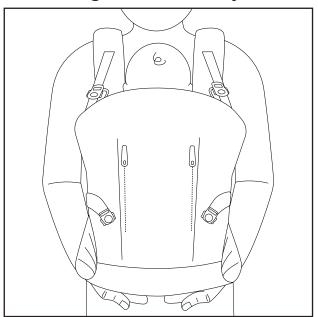


See page 11 for swaddle panel and infant seat fitting guidance

Inward-facing, front carry

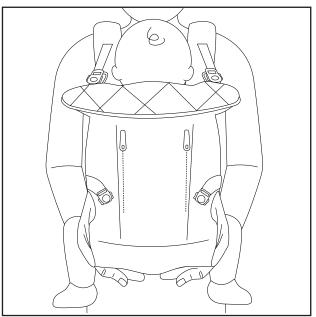


See page 11 for infant seat fitting guidance

Outward-facing, front carry

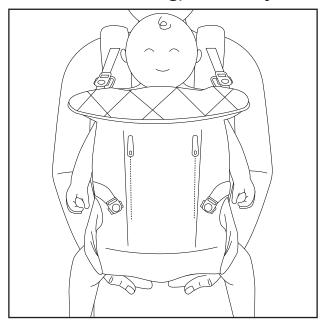


5+ months (14 lbs / 6.4 kg)

Back carry

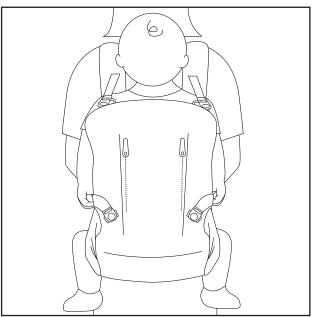


6+ months (17.2 lbs / 7.8 kg)


Attaching Harness to Body

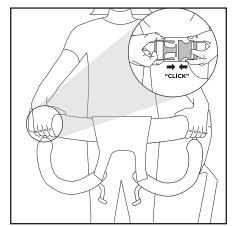


Wrap waist belt around waist and feed buckle through elastic safety strap into receiving buckle.

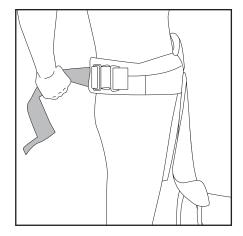

Pull strap so waist belt is snug.

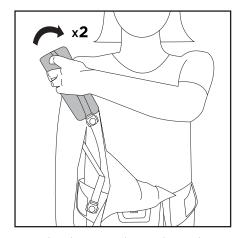


Pass both arms through each shoulder strap **A** opening.

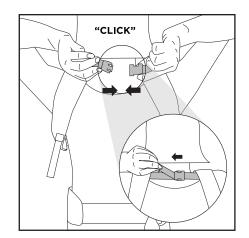

Secure shoulder straps by connecting reverse sternum strap **a** and pulling snugly.


Tip: Not flexible enough to reach behind your head? Try securing the reverse sternum strap prior to putting on the shoulder straps.

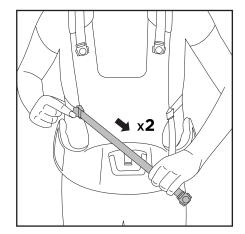

Tighten harness by lifting harness size adjustment buckle and pulling strap away from body.




Attaching Clamshell with Pre-loaded Baby using Grow-with-MI System (recommended for small babies)

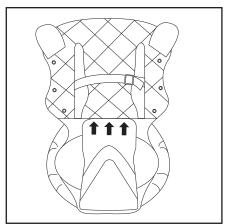

Adjust Grow-with-MI Infant seat to suggested level based on your baby's height and weight.


See page 11 for swaddle panel and infant seat fitting guidance.

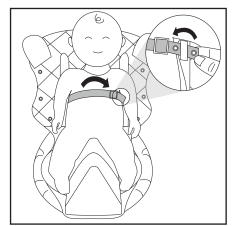

Secure baby by feeding swaddle strap **A** under baby's armpits.


Tip: For small enough babies, place baby's feet into bucket seat.

▲ WARNING: Always position child's arms over the swaddle strap.

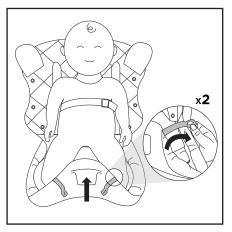


Secure leg opening safety straps A, located under infant seat, to leg opening safety button .


Not required for babies over 12 lbs (5.4 kg).

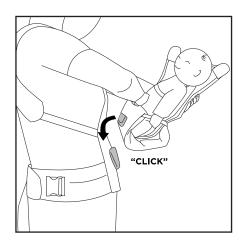

See page 14-15 for instructions to put on harness.

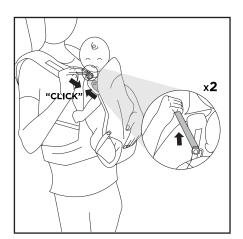


While securely holding baby, fasten top harness buckles to clamshell and pull snug, allowing enough room for baby to move their head.

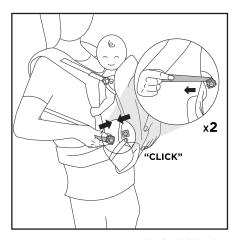

Continuing to securely hold baby, fasten remaining lower harness buckles to clamshell and pull snug.



Attaching Empty Clamshell for Inward-Facing, Front Carry (recommended for babies no longer using swaddle panels)

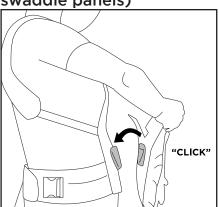


See page 14-15 for instructions to put on harness and page 11 for infant seat fitting guidance.

Secure clamshell to harness by engaging Quick Release Connector pull handle


A. Check to see if Quick Release Connector is properly engaged by pulling up on clamshell.



Pick baby up inward-facing and position baby's bottom into the bucket seat **a**.

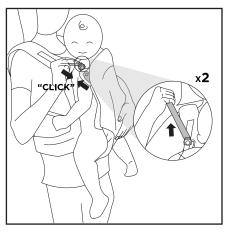

While securely holding baby, fasten top harness buckles to clamshell and pull snug, allowing enough room for baby to move their head.

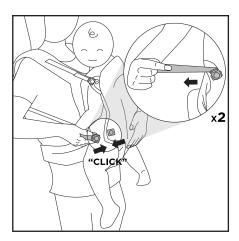

Continuing to securely hold baby, fasten remaining lower harness buckles to clamshell and pull snug.

Tip: Ensure baby is properly seated by lifting baby's legs in an upward motion.




Outward-Facing, Front Carry

Min of 5+ months of age (14 lbs / 6.4 kg)

Babies should only be worn outward facing if:

- Baby has strong and consistent head and neck control.
- Chin is above the top fold of the carrier when the top of carrier is folded and snapped down.

▲ WARNING: Never let baby sleep facing outward.

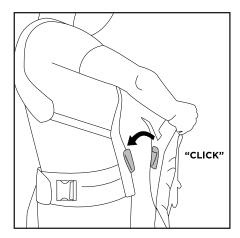


See page 14-15 for instructions to put on harness and page 11 for infant seat fitting guidance.


Secure clamshell to harness by engaging Quick Release Connector . Check to see if Quick Release Connector is properly engaged by pulling up on clamshell.



Pick baby up outward facing and position baby's bottom into the bucket seat ...

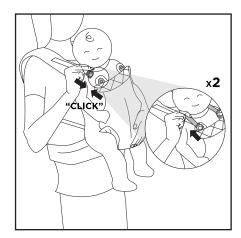

While securely holding baby, fasten top harness buckles to clamshell and pull snug, allowing enough room for baby to move their head.

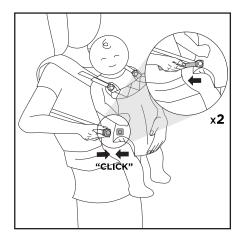

Continuing to securely hold baby, fasten remaining lower harness buckles to clamshell and pull snug.


Tip: Ensure baby is properly seated by lifting baby's legs in an upward motion.



Back Carry

Min of 6+ months of age (17.2 lbs / 7.8 kg)

Only use the back carry position when baby has strong and consistent head and neck control.

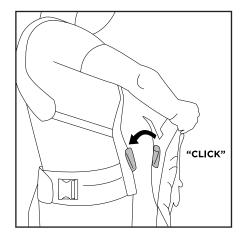


See page 14-15 for instructions to put on harness and page 11 for infant seat fitting guidance.


Secure clamshell to harness by engaging Quick Release Connector . Check to see if Quick Release Connector is properly engaged by pulling up on clamshell.



Pick baby up inward-facing and position baby's bottom into the bucket seat **a**.

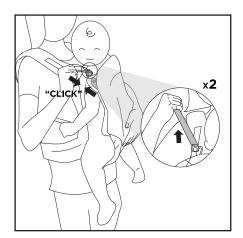


While securely holding baby, fasten top harness buckles to clamshell and pull snug, allowing enough room for baby to move their head.

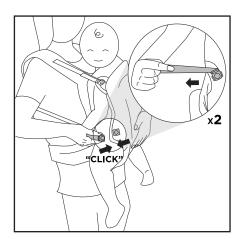


Continuing to securely hold baby, fasten remaining lower harness buckles to clamshell and pull snug.


Tip: Ensure baby is properly seated by lifting baby's legs in an upward motion.

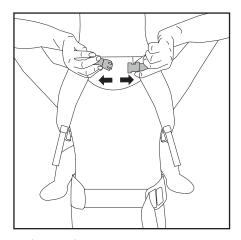


Release the reverse sternum strap **a**.

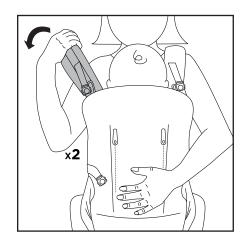

Remove shoulder straps **A** one-by-one while continuing to support baby.

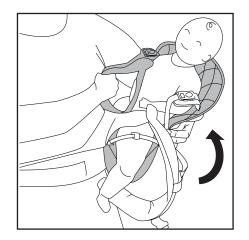


Rotate the waist belt and carrier to position the baby on your hips. Push the shoulder strap of the arm that is holding the baby under your arm towards your back.

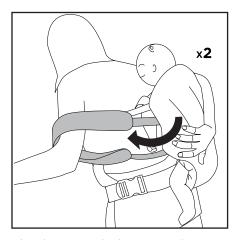


Slowly rotate baby toward the back carry position while locating the shoulder strap **a** with your free hand.

TIP: When rotating baby toward the back carry position, lean forward in a 45 degree angle to allow your baby to rest on your back.

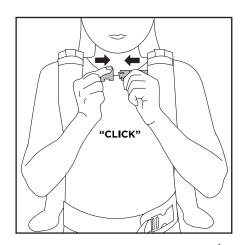

Secure reverse sternum strap **a**.

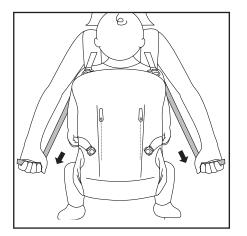


Ensure all other straps, fasteners, and adjustments are secure.

Tip: Adjust fit by pulling down on rear shoulder strap adjustment **\(\Delta \)**.




Removing Baby from Carrier

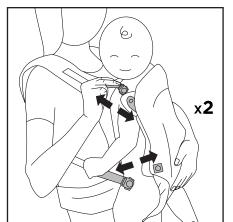


While securely supporting baby, unbuckle all straps **A** connected to clamshell.

Baby can be removed directly from clamshell after unbuckling all straps. The following illustrations are showing removing infant in clamshell.

▲ Warning: Never unbuckle waist belt while baby is in carrier.

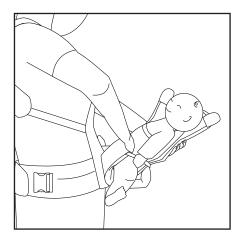

Continuing to support baby, create enough separation between you and baby so that you can see the Quick Release Connector pull handle .

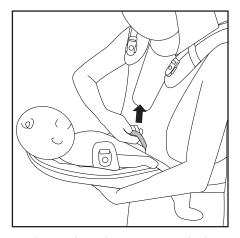

With one hand supporting baby, locate Quick Release Connector pull handle and pull up, releasing the clamshell from the harness.



CARE INSTRUCTIONS



Machine wash cold. Do not bleach. Do not tumble dry. Do not iron. Do not dry clean.

Before washing, fasten all buckles and hook and loop fasteners. Use mild detergent when washing. For mild and moderate stains, spot clean with mild detergent and water. Do not machine wash frequently, but if needed, machine wash cold and hang dry. Do not use detergents with bleach, perfumes, dyes, chlorine, or optical brightener.

WARRANTY:

Please visit www.baebi.com for information about our warranty policy. BAEBI offers a lifetime warranty to the original registered user against defects in materials and craftsmanship. Proof of purchase is necessary and product must be returned for warranty service. Should you have a warranty claim, please contact BAEBI Customer Love at: thescoop@baebi.com or (833) 256-8364. Warranty Coverage does not extend to damage caused by misuse or any use of the carrier that is not in accordance with the instructions stated in this manual. Warranty coverage does not extend to any carrier that has been modified or altered from its original construction in any way.



BAEBI 811 Wilshire Blvd. Suite 1700 Los Angeles, California 90017 (833) 256-8364 thescoop@baebi.com www.baebi.com

#BAEBI