




IMMOBILISER EMULATOR NISSAN NATS5

www.mbkeyprog.com

+48 517 443 433, +48 22 724 99 96
info@mbkeyprog.com

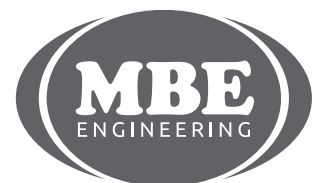

NISSAN NATS5

SUPPORTED MODELS

2.2 2.7 diesel 5-socket - 24C04 memory

1.5 gasoline Hitachi MEC - 93C46 and 93C56 memory

1.8 2.0 Hitachi MEC - 93C56 memory

1.4 gasoline Bosch - 24LC02 memory

Almera, Almera Tino, Micra, Primera, Terrano

NISSAN NATS5

2.2 2.7 diesel 5-socket - 24C04 memory

Find **24C04** memory

Write values:

A5 value from **071** to **073**

A5 value from **093** to **095**

A5 value from **096** to **09B**

Connection of emulator to ECU

+12V Acc PIN 5.7

GND PIN 5.4

CODE PIN 4.10

NISSAN NATS5

2.7 diesel 5-socket - 24C04 memory

In addresses

From 0AC to AE write A5 values

In 0CF write A5 value

**From 0D0 to 0D7 write A5 A5 A5 A5 A5 A5
A5 A5 values**

Connection of emulator to ECU

+12V Acc PIN 5.7

GND PIN 5.4

CODE PIN 4.10

NISSAN NATS5

1.5 gasoline Hitachi MEC - 93C46 and 93C56 memory

Find 93C46 memory
From 00E to 00F write A5 A5 or A5 A5
values

Connection of emulator to ECU
+12V Acc PIN 43
GND PIN 108
CODE PIN 116 (cut off from
ECU)

NISSAN NATS5

1.5 1.8 2.0 Hitachi MEC - 93C56 memory

Find 93C56 eeprom memory

In address

**From 00E to 00F write A5 A5 or A5 A5
values**

Connecting emulator to ECU

+12Vacc 43 PIN

GND 108 PIN

CODE 116 PIN (Cut off in ECU)

NISSAN NATS5

1.4 gasoline Bosch - 24LC02 memory

Find B58253 eeprom memory – read as 24C02

In address


From 06 to 07 write A5 A5 values

Connection to the ECU

+12V Acc 54 PIN

GND 6 PIN

CODE 88 PIN (Cut off in ECU)

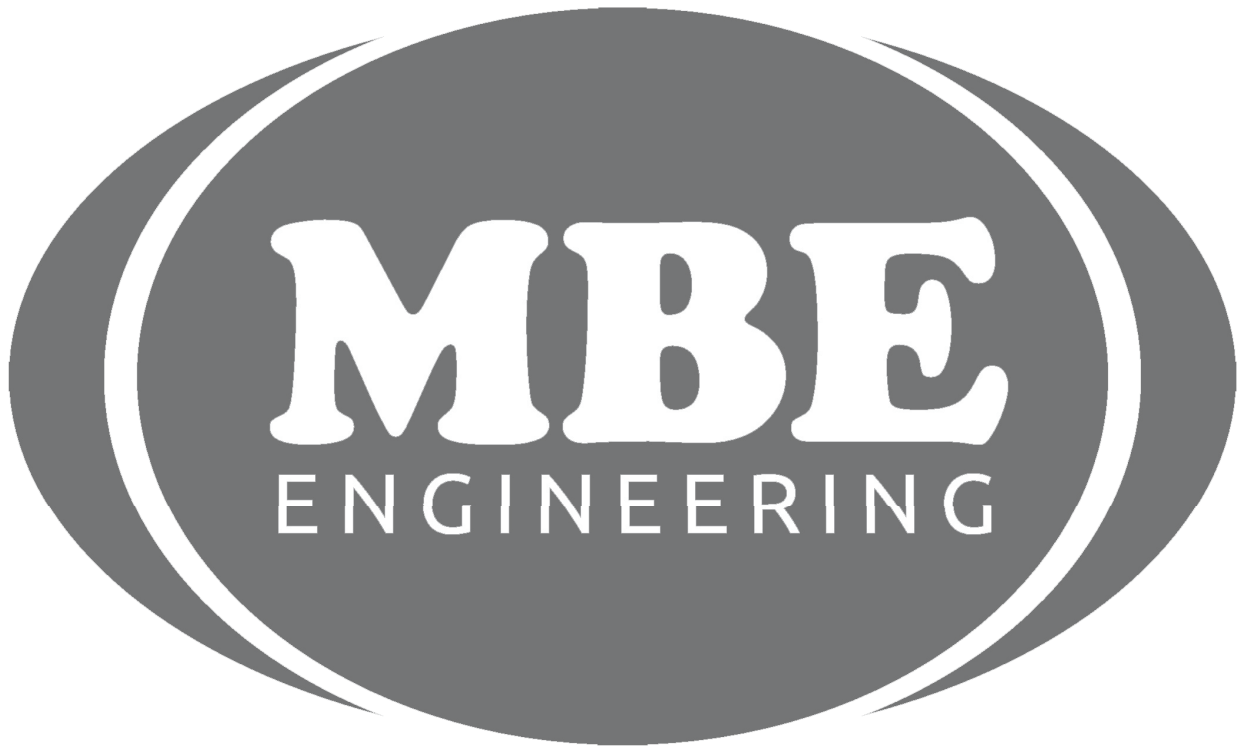

www.mbkeyprog.com

+48 517 443 433, +48 22 724 99 96
info@mbkeyprog.com

