

INSTRUCTION MANUAL

READ BEFORE USE



POLAR SEAL



COMFORT IN ADVENTURE

POLAR SEAL



HL01M | HL01F

HS01M | HS01F

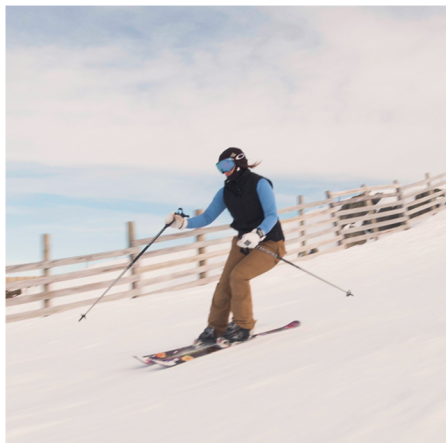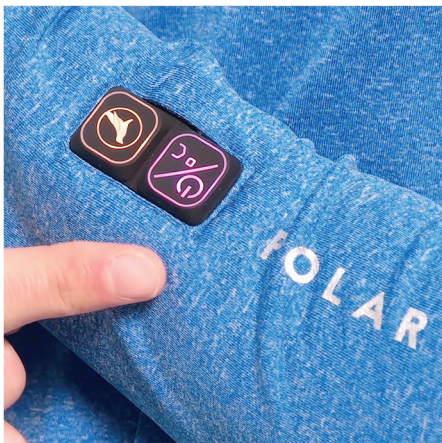

**Thank you for choosing POLAR SEAL®
Heated T-Shirts and Heated Tops.**

Please read the following instructions and warnings carefully before the first use, and keep this booklet for further reference

Important instructions. Retain for future use.

When not in use, store your POLAR SEAL® as follows:

- Unplug and remove your power bank from the garment.
- When storing your POLAR SEAL®, allow it to cool down before folding it.
- Do not crease the appliance by placing items on top of it during storage
- Examine the POLAR SEAL® frequently for signs of wear or damage. If there are signs of wear or damage and/or if the POLAR SEAL has been misused or does not work, return it to the supplier before switching it on again.
- Children under the age of three are not to use this appliance due to their inability to react to overheating.
- The appliance is not to be used by young children over the age of three unless the controls have been pre-set by a parent or guardian, and unless the child has been adequately instructed on how to operate the controls safely.



- If the POLAR SEAL® is likely to be used for an extended period, the control should be adjusted to the settings recommended for continuous use (see page 5).
- This device is intended for use in environments where temperatures may be below 25°C / 77°F.

WARNING: In order to avoid the possibility of heatstroke, disconnect the clothing when moving to an environment having significantly higher temperature.

WARNINGS

This product is not suitable for:

- Anyone with moderate to severe cardiovascular disease, or anyone fitted with a pacemaker
 - People with open wounds
 - Anyone suffering from malignant tumors
 - People suffering from any physical or mental illness, please consult with your doctor(s)/physician(s) before use.
 - People under medical or hospital care, or emergency care
 - Pregnant women, infants, and children
 - Anyone with sensitive skin, skin abnormality or skin allergy
 - Anyone sensitive to heat
 - Anyone with a fever
 - Medical use
 - Persons insensitive to heat and/or other vulnerable persons who are unable to react to overheating
 - People who are allergic to PVC (Polyvinyl chloride)
- If you have any concerns please consult with your doctor before use.

Do not insert pins, or any sharp objects, into or onto your POLAR SEAL®. Do not sleep while wearing your POLAR SEAL®.

Only use the POLAR SEAL® with a Powerbank with the required specifications 5V/2A (With at least 5000 mAh output).

Before you connect the Powerbank to the USB connector, please ensure that the USB connector is perfectly dry. Please ensure that the Powerbank is not damaged or compromised in any way.

Before you wash your POLAR SEAL®, please make sure that you remove the Powerbank first, and cover the USB connector with the cap attached to the USB cord.

If the USB cap is lost or damaged, do not replace with another available cap, please contact us to get a proper replacement cap.

Do not bathe, shower, or swim while wearing your POLAR SEAL® with or connected to a Powerbank.

Please inspect your POLAR SEAL® before each use and ensure that it is not damaged before you connect it to a Powerbank. If you notice any form of damage, in particular to the electrical elements, please stop using it. The manufacturer, our company, Fillony Ltd, its agents, distributors, and employees, sellers, or resellers are not liable for any damages to person(s), objects(s), animal(s), or property(s) resulting from improper use and/or misuse of the POLAR SEAL®, and/or use of the POLAR SEAL® in conjunction with a power bank that is faulty, not matching the specifications as shown in our Specification section, or not certified CE or UL. The manufacturer, our company, Fillony Ltd, its agents, distributors, and employees, sellers, or resellers, are not liable for any damages to person(s), objects(s), animal(s), or property(s) resulting from the power bank.

Keep your POLAR SEAL® away from any fire and excessive source of heat.

If you experience or display any of the signs of heat fatigue or of heat stroke as listed below, please remove and stop using your POLAR SEAL® and consult with your doctor. Symptoms may include, but are not limited to, confusion, dizziness, fainting, fatigue, headache, muscle or abdominal cramps, nausea, vomiting, dark colored urine (sign of dehydration), diarrhea, pale skin, profuse sweating, and rapid heartbeat.

WASHING INSTRUCTIONS AND WARNINGS

- Before washing, please ensure that you cover the USB connector with its cap. Please also ensure that the Powerbank is removed from the pocket, and that all other items are removed from the pockets.
- Hand wash or Machine wash with water at or below 40°C (equivalent to 104°F or below).
- **Please place garment in a mesh laundry bag prior to placing it in the washing machine.**
- Use a mild detergent.
- Do not dry clean.
- Do not dry in an electric dryer.
- Do not wring.
- Do not use pins or sharp objects.
- Do not iron.



Read the instructions



Do not iron



Do not insert pins



Do not dry clean



Do not bleach



Use water at or below 40°C
(at or below 104°F)



Keep away from children
under three years of age

HOW TO OPERATE YOUR POLAR SEAL®

There is a control button your POLAR SEAL®.



Controls ON/OFF, as well as the temperature level.

STEP 1 :

Open the power bank pocket and pull out the USB cable. Connect the Powerbank to this USB cable. Then turn on the Powerbank.

STEP 2 :

Press and hold the ON/OFF button until the light is on and RED and stops blinking.



STEP 3 :

Put the Powerbank inside the pocket and close the zip ensuring that the pocket is fully closed.

STEP 4 :

Press the same button (short press) to set the temperature level to:



LOW
40°C (104°F)
Yellow Light



MEDIUM
45°C (113°F)
Green Light



HIGH
50°C (122°F)
Red Light

STEP 5 :

To turn off the heating on your POLAR SEAL®, **press and hold** the On/Off button until its light goes off.



Appropriate settings of controls for continuous use:



MEDIUM
45°C (113°F)
Green Light

SPECIFICATIONS

Rated voltage: 5V DC

Rated power 7.5W

Powerbank output: 5V/2A (5000mAh or more)

Operating temperature of the surface of the garment:

40°C - 50°C (104°F - 122°F)


DISPOSAL

According to the European waste regulation 2002/96/EC the bin symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be taken to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council or your household waste disposal service.





Adventure awaits

INSTAGRAM: @polar_seal 

Copyright Fillony Ltd 2019 - All rights reserved.
POLAR SEAL® is a registered brand name of Fillony Limited Hong Kong

A digital copy of the Instruction Manual can be found at:
www.polarseal.me

