



**PAGER GENIUS**

**T9005/W6010/C5980**


# Pager Genius Staff and Server Paging Systems



Watch Pager W6010



Transmitter T9005

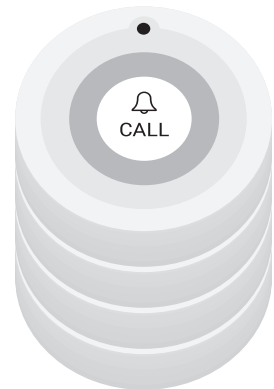

Call Button C5980

## USER MANUAL

# Thank you for purchasing the Pager Genius System

We provide a great paging product, and **24-7 customer service**. Please familiarize yourself and staff with the contents of this manual in order to properly operate and maintain your system. If you have any question or service problems, please call.



1-800-289-3823



9852 W Katella Ave, Suite #500,  
Anaheim, CA 92804



Please keep this manual in a safe place for the staff and managers to view in the future.

## TABLE OF CONTENTS

Pager Genius Staff Paging System Manual	3
Setting Up And Operating Staff Paging System	3
Transmitter Keypad Operation	4
Paging Your Watches	4
Charging The W6010 Watch Pager And Powering On	5
W6010 Pager Genius Watch Pager Display Readings	6
Programming A Watch To The Transmitter	7
W6010 Pager Genius Watch Pager Setting The Alerts	8
W6010 Pager Genius Watch Pager Setting The Date And Time	8
W6010 Pager Genius Watch Pager Setting The Alarm	9
Pager Genius Server And Employee Paging System	10
Setting Up And Operating Server And Employee Paging System	10
Pager Genius Server And Employee Paging System Station Set-Up	11
Operating And Setting Up The C5980 Transmitter	11
Programming A Watch To The C5980 Transmitter	12
Warranty	13

## PAGER GENIUS PAGING SYSTEM

Test the range of the paging system by doing test paging around the property. If you need more range on your paging system we do sell range extenders that more than triple the range, and you can use as many range extenders as needed to cover whatever kind of area you are looking to cover.

# Pager Genius Staff Paging System Manual



Transmitter T9005



Watch Pager W6010

## SETTING UP AND OPERATING STAFF PAGING SYSTEM

The Pager Genius Staff Paging System comes already set-up, and is ready to use immediately after the W6010 Pager Genius watch pagers are charged. Pager Genius paging systems do not connect to the internet or phone lines, all they require is power.


## TRANSMITTER KEYPAD OPERATION

### Number Keys (1-99)

Press the number of the watch you wish to notify

### Enter

To send the numeric page

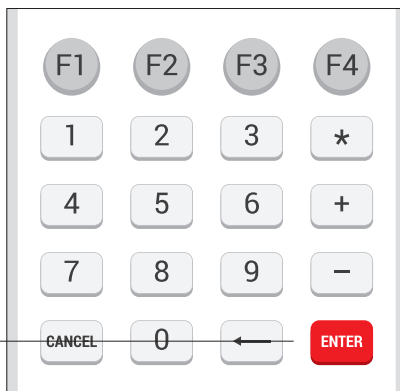

## PAGING YOUR WATCHES

The Pager Genius Transmitter can page watches numbered 1-99. To page a watch, simply press the number of the pager you would like to page into the transmitter followed by the enter key.


**Example:** To page Watch #7, press 7 on the keypad followed by the enter button.

Each watch is clearly marked with a numbered sticker on the rear of the watch, press that number into the transmitter followed by the enter button. When the page is received by the transmitter, the watch will alert and the screen will show the page.



## CHARGING THE W6010 WATCH PAGER AND POWERING ON

Plug the CA202 watch pager plug into power, and connect it to the W6010 charging Supply. When the watch is charging, the red charging indicator light will come on.

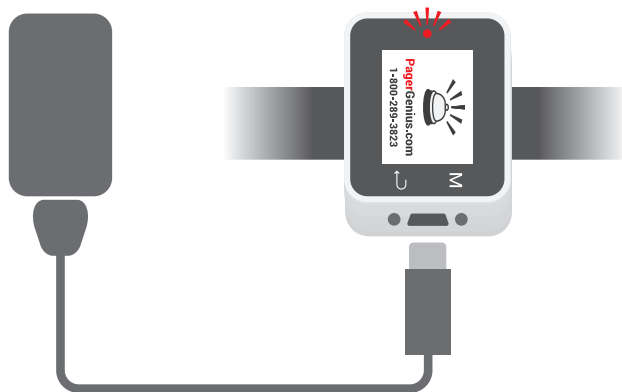

To turn on the the watch press the M key and the arrow key at the same time.



Encourage staff to always look for the charging light illumination when closing at night.



It is important that the watches are always charging, even when they are not being used for long periods of time.



The watches fully charge in just 40 minutes time.

## W6010 PAGER GENIUS WATCH PAGER DISPLAY READINGS

Signal Strength For Last Page

Battery Life

Beep Alert

Alarm Set

Vibrate Alert



Time

Day Of Week

Date

## PROGRAMMING A WATCH TO THE TRANSMITTER

When you order more watches for your Pager Genius System in the future, you will need to program the new watches to the existing transmitter. Below are the following steps to program a new watch to your system:

**Step 1:** Plug in the W6010 watch pager into power, the only way to program a new watch to your transmitter is to have it plugged into power.

**Step 2:** Press the **M key** and the **arrow key** at the same time to bring up the watch pager menu.


**Step 3:** Highlight the register button, and press the arrow button to select it.

**Step 4:** Select what watch number you want this new watch to be.


**Step 5:** Type in this same number into the transmitter followed by the enter button.

The watch will display the **Update Complete!** symbol. Now this watch is programmed to the transmitter and is ready to use.

Plug in the W6010 watch pager into power and press the **M key** and the **arrow key** at the same time

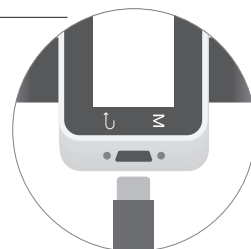

Highlight the register button, and press the **arrow key** to select it

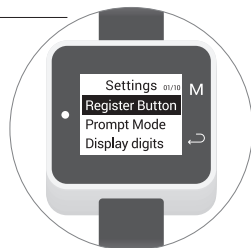

Select what watch number you want this new watch to be



The watch will display the **Update Complete!** symbol





## W6010 PAGER GENIUS WATCH PAGER SETTING THE ALERTS


Pager Genius Watch Pagers can do one or all the following: beep, vibrate, and flash. To change these settings do the following steps:

**Step 1:** Press the **M button** and the **arrow button** at the same time to bring up the **Settings menu**.


**Step 2:** Highlight the **Prompt Mode**, and press the **M Button**.

**Step 3:** Highlight the boxes of the alerts you want, and press the **M button** and the **arrow button** to return back to the settings menu.

Press the **M key** and the **arrow key** at the same time to bring up the settings menu

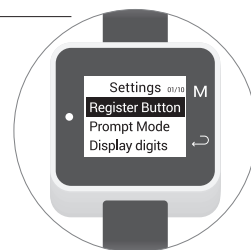

Highlight the **Prompt Mode**, and press the **M Button**

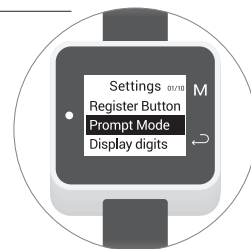


## W6010 PAGER GENIUS WATCH PAGER SETTING THE DATE AND TIME

Pager Genius watch pagers can display time of day, date, and the day of the week. Below are the steps to change these settings:

**Step 1:** Press the **M button** and the **arrow button** at the same time to bring up the **Settings menu**.

**Step 2:** Highlight the **Date & Time icon**, and press the **M Button**.

**Step 3:** Change the numbers and the days using the **M button**, and use the **arrow buttons** to advance to the next setting.

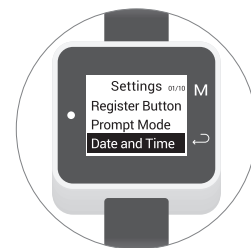

## W6010 PAGER GENIUS WATCH PAGER SETTING THE ALARM


Pager Genius Watch pagers come with up to three possible alarms settings. Employees can set these alarms to remind them of when their shift is over for example. Below are the steps to set a alarm.

**Step 1:** Press the M button and the arrow button at the same time to bring up the settings menu.

**Step 2:** Highlight the **Set Alarm** icon and press the arrow button.

**Step 3:** Select the **date and time** you want the alarm to activate, and then press the **M button** and the **arrow button** at the same time to get back to the settings menu.


Highlight the **Set Alarm** icon and press the arrow button

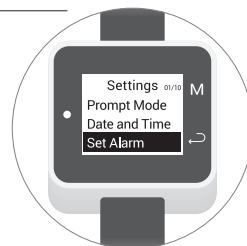

Select the date and time you want the alarm to activate



# Pager Genius Server And Employee Paging System

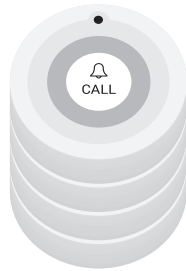

Call Button C5980



Watch Pager W6010

## SETTING UP AND OPERATING SERVER AND EMPLOYEE PAGING SYSTEM

The Pager Genius Server and employee Paging System comes already set-up, and is ready to use immediately after the W6010 Pager Genius watch pagers are charged. Pager Genius paging systems do not connect to the internet or phone lines, all they require is power.

We have already contacted you about your station configuration before it was shipped. You will find in the shipment that each station is separately packaged.

Turn around each watch and transmitter, and you will find they are clearly marked with numbered stickers making for a easy installation.

## PAGER GENIUS SERVER AND EMPLOYEE PAGING SYSTEM STATION SET-UP

For example, let's say this paging system is being used in a restaurant. Certain tables are assigned to servers, server #1, and server #2. Place the individually marked transmitters at the correct tables.



## OPERATING AND SETTING UP THE C5980 TRANSMITTER

This transmitter has a one button operation, and when pressed will alert it's assigned watch.

There is also a sticker on the rear of this transmitter meaning this transmitter can be placed just about anywhere.

## PROGRAMMING A WATCH TO THE C5980 TRANSMITTER

When you order more transmitters, or we send you out a replacement transmitter, you will need to program the watches to the transmitters. Here are step by step directions to program a new watch to a transmitter:

**Step 1:** Plug in the W6010 watch pager into power, the only way to program a new watch to your transmitter is to have it plugged into power.

**Step 2:** Press the **M key** and the **arrow key** at the same time to bring up the watch pager menu.


**Step 3:** Highlight the register button, and press the arrow button to select it.

**Step 4:** Select what number you want this watch to display when the transmitter button is pushed.

**Step 5:** Push the button on the appropriate transmitter you want assigned to this number on the watch.

The watch will display the **Update Complete!** symbol. Now this transmitter is programmed to it's assigned watch and is ready to use.

Plug in the W6010 watch pager into power and press the **M key** and the **arrow key** at the same time

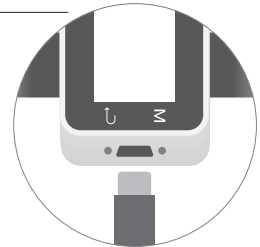

Highlight the register button, and press the **arrow key** to select it



Select what number you want this watch to display when the transmitter button is pushed



The watch will display the **Update Complete!** symbol



## WARRANTY

Pager Genius warrants this product against any defects that are due to faulty material or workmanship for a standard two-year period after the original date of consumer purchase. The warranty does not include damage to the product resulting from accident, misuse, improper electrical connection, or failure to charge the product within 35 days of receipt. Rechargeable pagers are required to stay on charge while not in use. Rechargeable pagers that are left off of charge for longer than 35 days will have a negative impact on the life of the batteries requiring them to be replaced thus voiding the warranty. If this product should become defective within the warranty period, we will repair or replace it with a replacement product, free of charge. Pager Genius will pay for shipping to and from if there is a problem under the warranty.

## Pager Genius Customer Support

 1-800-289-3823

 9852 W Katella Ave, Suite  
#500, Anaheim, CA 92804

## FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference. (2) This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**RF warning statement:** The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.